6801-23

Storage Bench


#### **IMPORTANT**


**home**styles<sup>®</sup>

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

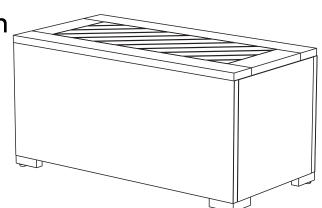

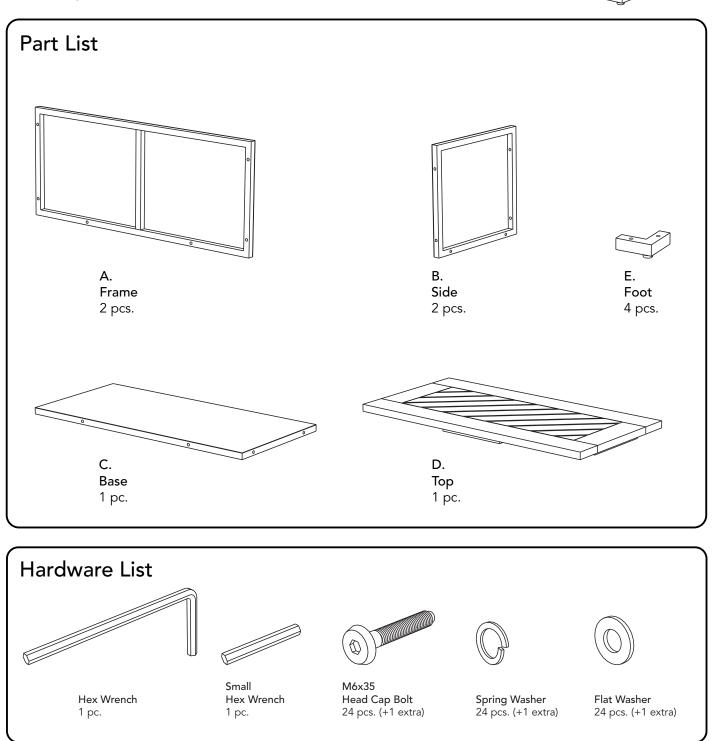


Tool(s) required for assembly: Level

**home**styles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460

#### Assembly Instructions 2/7

#### IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

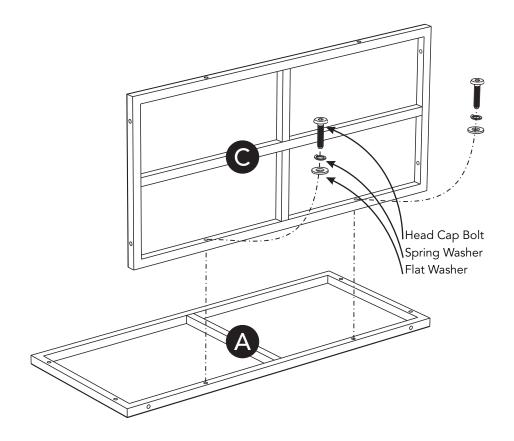

#### STEP 1

Attach Base (C) to Frame (A) with Head Cap Bolts, Spring Washers and Flat Washers, tightening bolts only halfway. (See Figure 1)


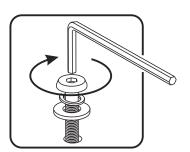


Figure 1


### Assembly Instructions 3/7

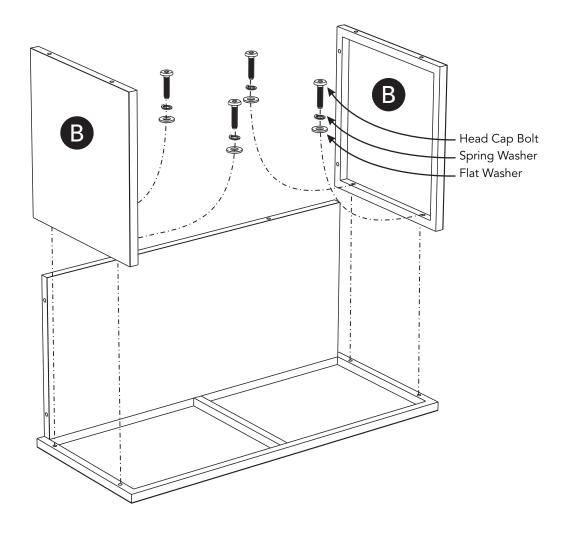

#### STEP 2

Attach Sides (B) to unit with Head Cap Bolts, Spring Washers and Flat Washers, tightening bolts only halfway.


### Assembly Instructions 4/7

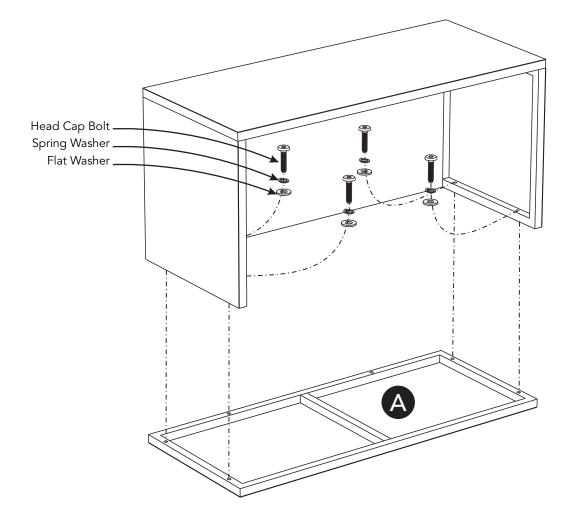

#### STEP 3

Attach unit to Frame (A) with Head Cap Bolts, Spring Washers and Flat Washers, tightening bolts only halfway.

#### Assembly Instructions 5/7

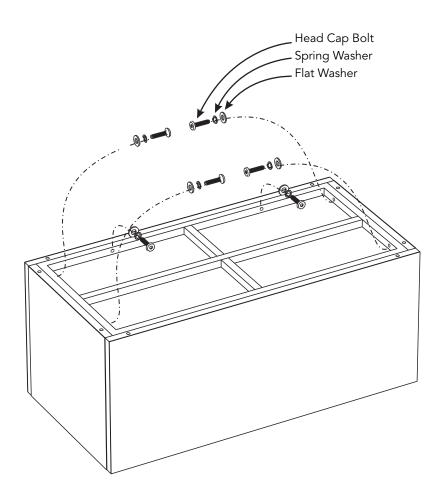


#### STEP 4

Insert Head Cap Bolts, Spring Washers and Flat Washers into pre-drilled holes in unit, then tightening bolts only halfway.


Tighten all bolts used in Steps 1, 2, 3 and 4.

### Assembly Instructions 6/7

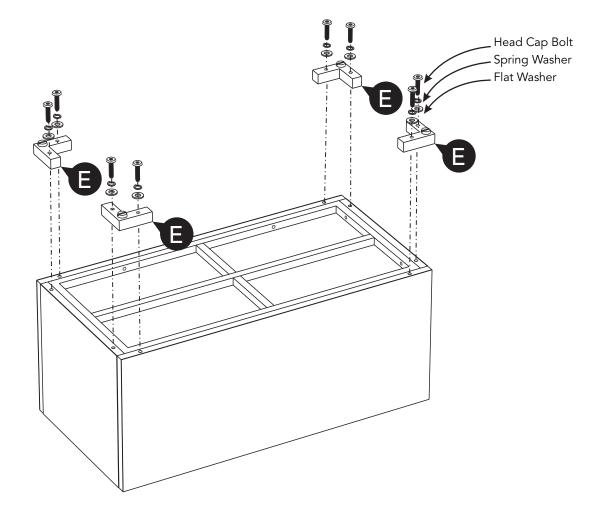


#### STEP 5

Attach Feet (E) to unit with Head Cap Bolts, Spring Washers and Flat Washers. (See Figure 2)

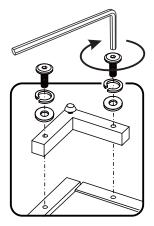



### Assembly Instructions 7/7

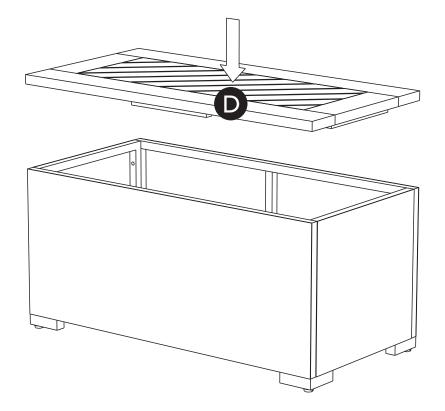


#### STEP 6

Turn unit to its upright position.

Place Top (D) onto unit.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 3)

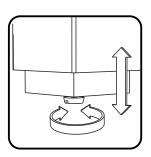



# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

# NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



**home**styles will provide replacements free of charge for missing or damaged parts within 1 year of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

**home**styles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460