

WITH YOUR MULTI-DOOR REFRIGERATOR

BEFORE YOU START

	UU	
Ē	Ĩ	
-	-	

nn

Set up your refrigerator

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place near a grounded electrical outlet, allowing for clearances for ease of installation, proper circulation, and plumbing and electrical connections.

Before operating for the first time

After you remove all of the package materials, clean the inside of your refrigerator before using it. See **CARE AND CLEANING** in your Use & Care Manual.

YOU'RE IN CONTROL

Î

Your appliance control display*

We recommend you set your temperatures at 37°F (3°C) for the refrigerator compartment and 0°F (-18°C) for the freezer. After 24 hours, you can adjust the control as desired, allowing the temperature to stabilize. *Control display varies by model. See the Use & Care Manual for more detailed information about your appliance.

EXTERNAL DISPENSER CONTROL DISPLAY



- Prior to grocery shopping, we recommend you activate **Freeze Boost** to freeze your food faster.
- 2 The ice maker makes ice until the ice bin is full. Press and hold **Ice Maker** for 3 seconds to turn it on/off.
- **Connect** allows connection between your refrigerator and the Frigidaire 2.0 App via your Wi-Fi enabled mobile device.
- Press either + or to adjust to desired temperature setting inside the refrigerator or freezer compartment. Adjusting Temp illuminates until you reach the desired temperature(s).
- 6 Power Outage illuminates and alert sounds after a power outage ends until you reset it by pressing any button.
- Door Open illuminates and alert sounds if the door is open 5+ minutes until you close the door.
- **°F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).
- **Replace Water Filter** or **Replace Air Filters** illuminates when it's time to change the filters, generally every 6 months.
- Prior to grocery shopping, we recommend you activate **Chill Boost** to cool your food faster.

INTERNAL DISPENSER CONTROL DISPLAY



Select compartment for temperature change (**FREEZER** or **REFRIGERATOR**). Press either the **+** or **-** to adjust to desired temperature setting.

Freezer temp - Control temperatures range from $-6^{\circ}F / -21^{\circ}C$ to $+6^{\circ}F / -15^{\circ}C$.

Refrigerator temp - Control temperatures range from +34°F / +1°C to +44°F / +7°C. This unit is designed to operate at 37°F Refrigerator/0°F Freezer. Temperatures should stabilize within 24 hours of installation.

- Clear Alerts resets any alarms that are active and illuminated on the display (Door Open, High Temp, Power Outage).
 - Prior to grocery shopping, we recommend you activate **Freeze Boost** to freeze your food faster.
 - **°F/°C** allows you to switch between Fahrenheit (°F) and Celsius (°C).
 - **Connect** allows connection between your refrigerator and the Frigidaire 2.0 App via your Wi-Fi enabled mobile device.
- 6 Press and hold **Default Settings** for 3 seconds to reset to default settings.
- Press and hold **Water Filter** or **Air Filters** for 3 seconds to reset after replacing the filter.

KEEP IT FRESH



Frigidaire PureAir™ AF-2™ Replacement Refrigerator Air Filter (1 included)

- More powerful than baking soda, the new Frigidaire PureAir™ AF-2™ Replacement Refrigerator Air Filter absorbs undesirable smells keeping your fridge fresher for up to 6 months.
 - The air filter is located at the top center of the refrigerator compartment. To change your filter:
 - 1. Remove the air filter cover by squeezing the top and bottom of the cover together and removing it from the liner.
 - 2. Remove the old filter and discard it.
 - 3. Unpack the new filter and snap it into the filter cover. Install the open face (carbon media) of the filter facing outward in the cover.
 - 4. Replace the air filter cover by squeezing the sides and snapping it back into place.
 - 5. To reset, after replacing the filter, press and hold **Air Filter** on the appliance control display for 3 seconds. The status will reset to **GOOD**.

Frigidaire PwrePour Connect™ PWF-2™ Ice & Water Refrigerator Filter (1 installed)

- Makes safer water second nature certified to reduce contaminates and keep great-tasting water flowing for you and your family for up to 6 months.
- The water filter is located at the top right side of the refrigerator compartment.
- Before dispensing water for the first time, be sure to prime the water supply system:
 - Press and hold a drinking glass against the water dispenser paddle until water comes out (it may take up to 1½ minutes).
- 2. Run water through the dispenser for approximately 3 minutes (or 1.5 gallons) before use, and discard.



Install your new *Pure*Air PK-2 Produce Keeper Plus[™] Refill to extend the life of produce (2 included)

- 1. Remove the outer plastic wrapper.
- 2. Insert the unopened packets into the holder in the Crisper, as shown on the left.

For optimal results, replace your air and water filters every 6 months, and your Produce Keeper Plus every 12 months.

FAQs

How do I use the internal water dispenser?

Your internal water dispenser is located in the left hand refrigerator door. To use the dispenser simply hold the door with one hand while placing your cup under the nozzle and pushing the paddle to dispense water with your other hand.

Why does my refrigerator seem to run continuously?

Your refrigerator is equipped with an energy-efficient variable speed compressor. It actually saves energy running more frequently while maintaining even temperatures.

For more information refer to TROUBLESHOOTING in the back of your Use & Care Manual.

CONNECT IT



Enjoy the convenience to remotely control and monitor your appliance! Download the Frigidaire 2.0 App by scanning the QR Code to the right or by visiting Frigidaire.com/app.



LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family and discover more benefits by registering your multi-door refrigerator.

Look for the PhotoregistersM icon on your registration card or register via the Frigidaire App.











