

Safety Tips:

- Ensure that the cabinet is positioned square and firm on the floor so that it will not fall over. Some cabinets are equipped with adjustable floor levelers. Adjust the levelers for maximum stability and proper alignment. (The levelers may have unscrewed unevenly during shipment.)
- Some cabinets include a Safety Strap. Follow the instructions included with the Safety Strap to ensure maximum stability. (See step #5)
- Keep plastic bags and small parts away from children.
- Cabinets may be lit using a halogen lamp. Halogen lamps operate at high temperatures. Combustible materials or those adversely affected by drying or fading from the heat should not be placed close to the lamp.

Care of Glass Shelves:

- To prevent breakage of glass shelves and collectibles, good judgement must be used during the installation and loading of glass shelves. **Heavy loads on the shelves must be distributed and must not exceed 25 pounds.**
- Glass shelves must be properly installed onto the shelf supports provided and should not be overloaded. (Figure 8 & 9)
- Care should be taken when placing items onto each glass shelf. Sudden shock from any size item can result in broken glass, personal injury, or damage to valuable items.
- The end use of this cabinet is beyond our control and therefore, the Howard Miller Company cannot assume responsibility for broken glass or personal effects.

Cabinet Set Up

1. Inspect the inside of carton and packaging to make sure you have removed all separately packed parts, including shelves, shelf supports, door lock key, No-Reach™ or Touch-Lite™ assembly.
2. Locate the package of glass shelves. The shelves may be located:
 - a) Inside your cabinet and secured with shipping clips. To remove the shipping clips, you will need a Phillips screwdriver. (Figure 1)
 - b) On top, underneath, or along side of your cabinet. You may need to lay the cabinet on its backside to remove the shelves from underneath the cabinet. Use caution when removing these shelves.
3. If available on your cabinet, turn the adjustable floor levelers, that are on the bottom of the cabinet, all the way in (up). (Figure 2)
4. Identify one of the following light switch options provided with your cabinet and install as directed.

No-Reach™ Light Switch: Installation

Locate the light On/Off switch. Insert the switch inside the plastic bracket by pressing the electrical cord wires into each slot. Peel away the adhesive paper from the backside of the bracket and press firmly to the backside of the cabinet in the desired location. (Figure 3)

Touch-Lite™ Pad: Installation

- a) Remove the Dimmer Block, Power Cord and Sensor Wire from the plastic bag, usually located on top of the cabinet. (Figure 4)
- b) The Touch Pad Key Holder Assembly is located in a plastic bag with the shelf clips.
- c) Attach the Touch Pad Key Holder Assembly to the end of the Sensor Wire. (Figure 5) Use care to avoid bending as damage may occur if this is forced on.
- d) Peel away the adhesive paper from the backside of the Dimmer Block. Press the Dimmer Block firmly to the top of the dust panel or to the backside of the cabinet to allow convenient access to both the power source and the Touch Pad Key Holder. (Figure 6)
- e) Peel away the adhesive paper from the backside of the Touch Pad Key Holder Assembly. Verify that the Key Holder is to the bottom and the attachment to the Sensor Wire is at the top. Press the Touch Pad firmly to the backside of the cabinet at the desired location. (Figure 7)

Touch-Lite™ Pad: Operation


The light begins in the off position. The operation is sequential and will advance to the next Light Illumination Level with each subsequent touch to the Touch Pad.

- 1st touch = Low Light Illumination Level
- 2nd touch = Medium Light Illumination Level
- 3rd touch = High Light Illumination Level
- 4th touch = turns light off



Shipping Clip
Ajuste del sujetador
Attache de transport
Transportklemme

FIGURE 1
FIGURA 1
FIGURE 1
ABBILDUNG 1

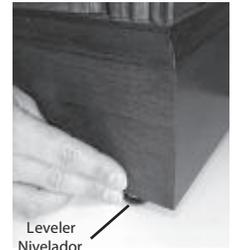

Leveler
Nivelador
Patin de réglage
Nivellierfuß

FIGURE 2
FIGURA 2
FIGURE 2
ABBILDUNG 2

No-Reach Light Switch
Interruptor para lámpara No-Reach
Interrupteur de lampe No-Reach
No-Reach Lichtschalter

Plastic Bracket
Soporte plástico
Patte en plastique
Kunststoffhalterung

On/Off Switch
Interruptor para apagado y encendido
Interrupteur de marche et arrêt
Ein/Aus-Schalter

Key Holder
Portalámpara de llave
Support de clé
Schlüsselhalter

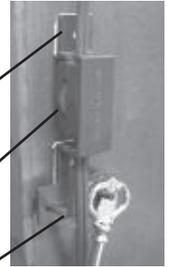


FIGURE 3
FIGURA 3
FIGURE 3
ABBILDUNG 3

Touch-Lite Pad
Almohadilla Touch-Lite
Touche à effleurement
Touch-Lite Pad

Sensor Wire
Alambre sensor
Fil capteur
Sensordraht

Power Cord
Cable de alimentación eléctrica
Cordon d'alimentation
Netzkabel

Dimmer Block
Interruptor de graduación de luz
Bloc gradateur
Dimmer-Einsatz

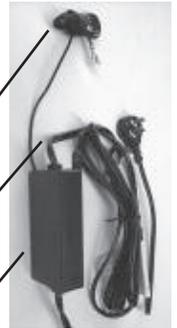


FIGURE 4
FIGURA 4
FIGURE 4
ABBILDUNG 4

Sensor Wire
Alambre sensor
Fil capteur
Sensordraht

Touch Pad Key Holder Assembly
Portalámpara de llave del controlador de tacto
Assemblage touche à effleurement/support de clé
Touch-Pad/Schlüsselhalter-Bausatz

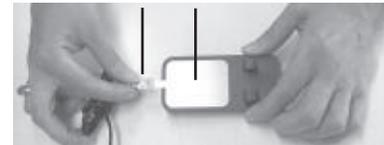


FIGURE 5
FIGURA 5
FIGURE 5
ABBILDUNG 5



Dimmer Block
Interruptor de graduación de luz
Bloc gradateur
Dimmer-Einsatz

FIGURE 6
FIGURA 6
FIGURE 6
ABBILDUNG 6



Sensor Wire
Alambre sensor
Fil capteur
Sensordraht

Touch Pad
Controlador de tacto
Touche à effleurement
Touch-Pad

Key Holder
Portalámpara de llave
Support de clé
Schlüsselhalter

FIGURE 7
FIGURA 7
FIGURE 7
ABBILDUNG 7

5. Move the cabinet to its final location and position against a wall.



Safety Strap: Some cabinets include a safety strap. If so, review the instructions included with the Safety Strap at this time and choose the assembly option which best fits your application. These cabinets should be attached to the wall for maximum stability. If your cabinet does not have this feature, proceed to the next step.

6. Install the Glass Shelves.

- Securely place the shelf supports into the desired holes inside the cabinet. (Figure 8 & 9)
There are several holes that can be used for shelf height adjustment.
- Install shelves. Starting at the bottom and working upward, place each shelf onto the shelf supports. (Figure 8 & 9)

Note: Some cabinets may have a wood rail which is intended to support a glass shelf. This wood rail will have a no-slide-pad for the glass shelf to set upon. (Two shelf clips may also be necessary.) This glass shelf is at a set height and is not adjustable. This glass shelf could be a different size than the other shelves and is labeled accordingly. Install this shelf per instructions.

Note: Do not put any items onto shelves until finished with this instruction guide.

7. Close and secure the door(s) using the lock or latch as provided with your cabinet.

8. Level the cabinet. Place a level alongside the cabinet from front to back and side to side (Figure 10). On some models, there are adjustable levelers under the cabinet, that can be turned in (up) or out (down) to make adjustments. (Figure 2) Adjust the levelers until the cabinet is level in both directions, and is square and firm on the floor. This is the only time a level will be used.

SERVICE INFORMATION

Howard Miller offers a limited 1-year warranty on your product from the original date of purchase or date of receipt if the product was a service award. In the unlikely event that your product appears to be malfunctioning or requires repair within the warranty period, please contact your retailer or the company who provided the item if it was an award. They will be your first resource for information regarding your warranty and service options.

If your product is more than one year old from the date of purchase or receipt as an award, your product is no longer under the manufacturer's warranty. Support for products that are no longer under warranty is available through the "Help Center" at www.howardmiller.com.


We recommend that you carefully read and follow all instructions provided with your Howard Miller product before pursuing service. These instructions will provide detailed information to answer most questions.

To find additional information regarding your product, to order parts or to find a service center, please go to the "Help Center" located at www.howardmiller.com. The "Help Center" also has links to product manuals, instructions, videos and frequently asked questions.

Before contacting your retailer, award provider or a service center, please have the following information available. The model number and serial number can be found on the Product Information Label which is normally on the back or bottom of the product.

Model Number: _____ Serial Number: _____
Date Purchased: _____ Where Purchased: _____

If the item was shipped directly to you, it is your responsibility to report freight loss or damage to the carrier and your retailer or award provider. If the carton indicates signs of "visible damage", instruct the driver to note the damage on the freight bill. If damage is found after the item has been delivered, notify your retailer or award provider and the carrier immediately. Many carriers require notification within 2 days. Failure to notify the carrier within their required time frame may waive your rights to a damage claim and you may be liable for the damage.

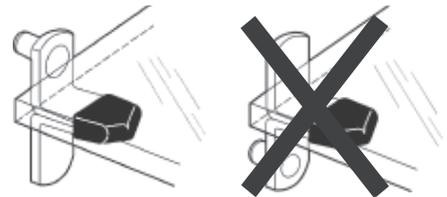

CORRECT
CORRECTO
CORRECT
RICHTIG

INCORRECT
INCORRECTO
INCORRECT
FALSCH

FIGURE 8
FIGURA 8
FIGURE 8
ABBILDUNG 8



FIGURE 9
FIGURA 9
FIGURE 9
ABBILDUNG 9



FIGURE 10
FIGURA 10
FIGURE 10
ABBILDUNG 10

IMPORTANT SAFETY INSTRUCTIONS for U.L. Electrical Furnishings

Read all instructions before using this product.
Save these instructions.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons, basic precautions should always be followed when using electrical furnishings, including the following:

- Unplug from outlet before cleaning or pulling on parts or taking off parts.
- Close supervision is required when this furnishings is used by or near children, handicapped or disabled persons.
- Use this furnishing only for its intended use as described in its instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- Keep cord away from heated surfaces.
- Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn all controls to the off position, then remove plug from outlet.
- For grounded products - connect this furnishing to a properly grounded outlet only.
- For loading - always put heavier items at the bottom and not near the top in order to help prevent the possibility of the furnishing tipping over.

WARNING - Risk of injury to Persons - do not use this furnishing to support video equipment such as televisions or computer monitors.

Distribute Load Evenly on Shelf.
Do NOT exceed 25 pounds.

Distribuya el peso sobre la repisa por igual.
NO exceda de 25 libras (11.35 Kg.)

Répartir la charge de façon uniforme sur l'étagère.
NE PAS dépasser 11,35 kg (25 lb.)

Last gleichmäßig auf dem Regal verteilen.
Darf 11 kg NICHT überschreiten.

