FRIGIDAIRE

PROFESSIONAL_{*}

getting started



WITH YOUR MULTI-DOOR REFRIGERATOR

BEFORE YOU START



SET UP YOUR REFRIGERATOR

Remove tape and glue residue from surfaces before turning on the refrigerator. Choose a place near a grounded electrical outlet, allowing for clearances for ease of installation, proper circulation, and plumbing and electrical connections.





Clean the inside of your appliance before using it. See **CARE AND CLEANING** in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

YOU'RE IN CONTROL

ξή

Appliance Control Display

For the first 24 hours, we recommend setting the temperature at 37°F (3°C) for the fresh food compartment and 0°F (-18°C) for the freezer. After 24 hours, you can adjust the temperature control as desired.

*Control display varies by model.

EXTERNAL DISPENSER CONTROL DISPLAY

TEMP SETTINGS PRECZER REPRIGERATOR PRECZER SETTINGS ALERTS CLEAR HIGH TEMP ALERTS POWER COUTAGE TO SEE THE STATUS WATER : GOOD PILTER : GOOD PILTER : GOOD PILTERS : OFFICER ARRIVATOR OFFICER ARRIVATOR OFFICER PRECZER STATUS ARRIVATOR OFFICER STATUS OFFICER STATUS ARRIVATOR OFFICER STATUS OFFICER STATUS

CHANGE TEMPERATURE

Select Freezer or Refrigerator icon to change temperature. Press +/- buttons to set the temperature.

Freezer control -6°F/-21°C range: +6°F/-15°C

Refrigerator +34°F/+1°C
control range: +44°F/+7°C

CLEAR
ALERTS

Resets any active lit door open, high temp or power outage alarms on the control display.

FREEZE
BOOST

Activate Freeze Boost prior
to grocery shopping to
lower the temperature and
freeze food faster. Freeze
Boost will remain active for
up to 24 hours.

Touch to toggle display from Fahrenheit to Celsius.

Press "WATER" to select

Press and hold for 3 seconds to turn ice maker on/off. When indicator is lit, ice maker is on.

DEFAULT Press and hold for 3 seconds to reset to Factory settings.

WATER FILTERS

Press and hold to reset after filter has been replaced, status shown at right of button will reset to GOOD.

External Water Dispenser Controls

TIME TO REPLACE
WATER FILTER
AIR FILTER
CRUSHED

WATER
HIGH TEMP DETECTED

CUBES

WATER

F/C

CRUSHED Press "CRUSHED" to select


crushed ice.

water.

CUBES Press "CUBES" to select cubed ice.

LIGHT Toggles dispenser light on and off.

INTERNAL DISPENSER CONTROL DISPLAY

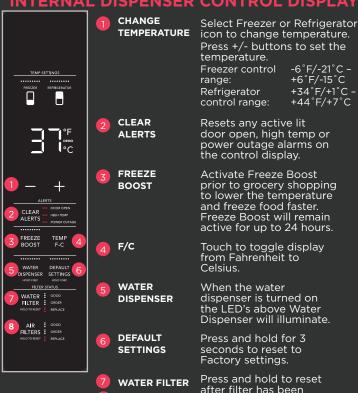



See your Use & Care Manual for more detailed information about your appliance.

AIR FILTERS

replaced, status shown at

right of button will reset

 
to GOOD.

KEEP IT FRESH




Frigidaire PweAir® AF-2™ Replacement Refrigerator Air Filter


- More powerful than baking soda, the new **Frigidaire** *Pwe***Air® AF-2™ Replacement Refrigerator Air Filter** absorbs undesirable smells keeping your fridge fresher for up to 6 months.
- The air filter is located at the top of the air tower. To change your filter:





- 1. Place your fingers on top of air cover and gently pull toward you to release the top snaps of the cover from the air tower.
- 2. Lift the bottom snaps up and out of the air tower assembly to disengage and remove the front cover and old filter.
- 3. Press the new air filter into the snaps on the air filter cover. Reverse steps 1 and 2 to reinstall the air cover.
- 4. Press and hold the Air Filters button after the filter has been replaced, and the filter status shown at the right of the button will reset to GOOD.

    Frigidaire PwePour® PWF-1™ Water & Ice Refrigerator Filter










2. Run water through dispenser for approximately 3 minutes or 1.5 gallons before use, and discard.

 Install your new $\emph{P}ue$ Air $^{ ilde{o}}$ Produce Keeper™ PK-1 Refill to extend the life of produce (2 included)



2. Insert the unopened packets into the holder in the Crisper Drawer.







FRPAPKRF™

 
FAQs

How do I use the internal water dispenser?

Your internal water dispenser is mounted on the left hand refrigerator door. To use the dispenser simply place your cup under the nozzle and push the paddle to dispense water.

Why does my refrigerator run most of the time? Is this normal?

Today's refrigerators are designed to be more energy efficient than previous models. This means they run longer cycles, or run continuously, to maintain an even temperature inside. Please note: starting a unit takes about 10 times as much energy as it does to keep it running.



The temperature is warmer or colder than preferred. What can I do?

Simply adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize. Check to ensure food items are not blocking the multi-port air exhaust ducts as this will impact temperature performance. Find more troubleshooting tips in the back of your Use & Care Manual.

Why is food freezing in my refrigerator?

Food placed within 1 inch in front of the air ports may cause food to freeze. See **Controls and Settings** in your Use & Care Manual.



Take the first step to becoming a part of the Frigidaire family and discover more benefits by registering your multi-door refrigerator.

Look for the PhotoregistersM icon on your registration card.











Have a question? Want help? Need service?

owner support frigidaire.com 1 (800) 374-4432 frigidaire.ca 1 (800) 265-8352

