

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

115132 Dining Side Chair

REVISION 0: 12/19/2021

PAGE 1 OF 4

COASTERFURNITURE.COM

ITEM: 115132

COASTER

ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

- 1. Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A BACK FRAME

1PC

B LEG

2PCS

C SEAT CUSHION WITH FRAME


HARDWARE IDENTIFICATION


1	ALLEN WRENCH (M4 x 110MM - BLK)	1PC
2	SHORT BOLT (M6 x 40MM - RBW)	2PCS
3	MEDIUM BOLT (M6 x 60MM - RBW)	4PCS
4	LONG BOLT (M6 x 80MM - RBW)	4PCS
5	LOCK WASHER (1/4" - BLK)	10PCS
6	FLAT WASHER	10PCS

ITEM: 115132 ASSEMBLY INSTRUCTIONS



STEP 1

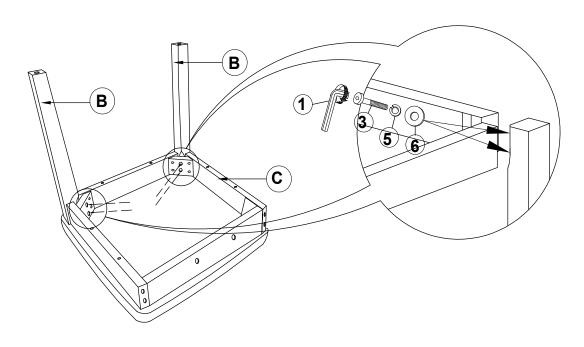


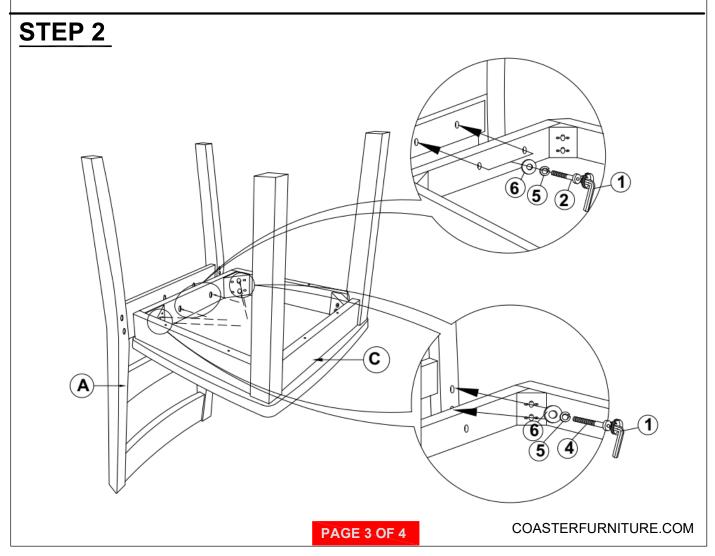


ITEM: 115132 ASSEMBLY INSTRUCTIONS



 
STEP 3 COMPLETE

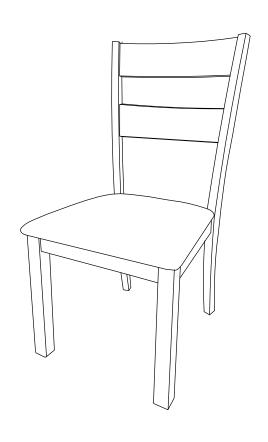



ITEM: 115132



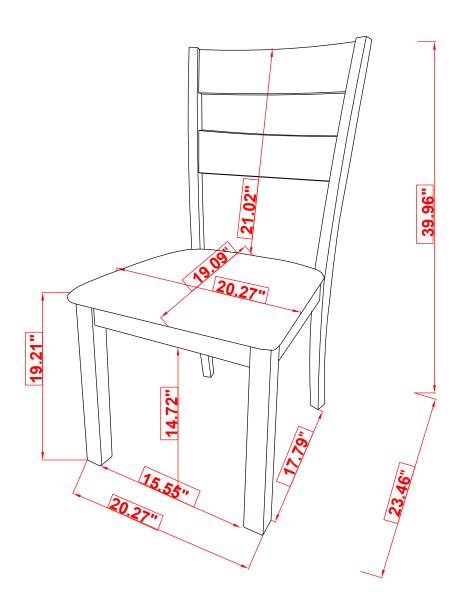

Note: Dimension tolerance ±5%