

ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

509797 STORAGE OTTOMAN ITEM: 509797

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

- 1.Remove hardware from box and sort by size.
- 2. Please check to see that all hardware and parts are present prior to start of assembly.
- 3.Please follow attached instruction in the same sequence as numbered to assure fast & easy assembly.



WARNING!

- 1.Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
- 2. This product is for home use only and not intended for commercial establishment.



ASSEMBLY TIME

15 MINUTES

PARTS IDENTIFICATION

A OTTOMAN FRAME



1PC

B LEG



4PCS

HARDWARE IDENTIFICATION

1 SCREW



16PCS

2. ALLEN WRENCH




1PC

ITEM: **509797**


ASSEMBLY INSTRUCTIONS

STEP 1



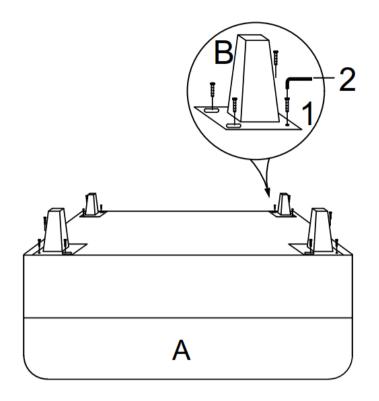

STEP 2

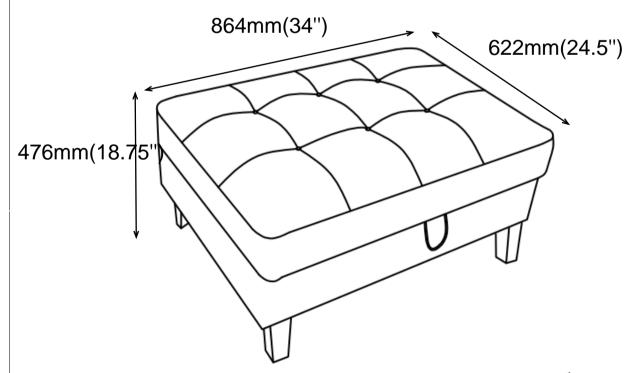

Note : Dimension tolerance ±5%

