


CO9005A

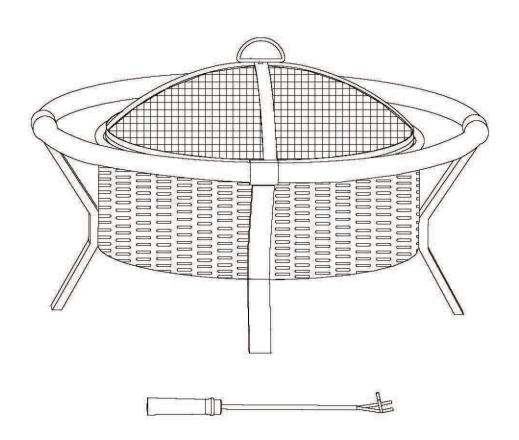

INSTRUCTION MANUAL

Assembly Instructions

WARNINGS:

- This fire bowl is intended for outdoor use only. Do not use on wooden decks.
- This fire bowl is intended to burn wood logs only. Do not burn coal, leaves, or other combustible materials in the fire bowl.
- Not for use by children. Keep children and pets away from the fire bowl.
- The fire bowl is hot. Use with caution. Do not touch the hot fire bowl with bare hands.
- Never leave the burning fire bowl unattended, and always extinguish the fire completely before leaving the fire bowl.
- Do not use near flammable or combustible objects or materials.
- When the fire bowl is in use, the handle on the mesh screen can reach extreme temperatures that can cause serious injury to an unprotected hand. Use a poker or an appropriate heat resistant glove or pad when handling.
- Check local fire regulations and municipal by-laws for safe use.
- Ensure all ashes are completely cool before removal.
- Wear gloves during assembly.


PARTS LIST

No.	PARTS	Qty
Α	Handle	1
В	Mesh Cover	1
С	Grate	1
D	Decorative Ring	4
Е	Supporter	4
F	Fire Bowl	1
G	Leg	4
Н	Poker	1
I	Cover	1




No.	Hardware	Qty
AA	M6 x 12 mm bolt	12
BB	M6 x 16 mm bolt	4
CC	M6 Nut	5

Note: You will need a scewdriver to help with the assembly.

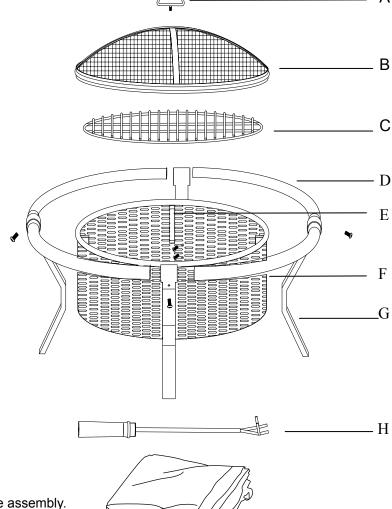


Assembly Step:


Step 1: Attach the Handle (A) to the Mesh Cover (B) using M6 Nut (CC).

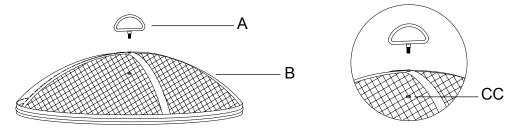

Step 2: Attach the Supports (E) to the Fire Bowl (F) using four M6 x 12mm bolts (AA) and M6 Nuts (CC).

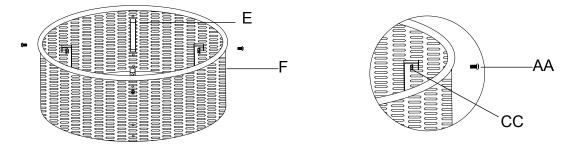

Step 3: Attach the Legs (G) to the Fire Bowl (F) using eight M6 x 12mm bolts (AA). Do not fully tighten the bolts. Insert the Decorative Rings (D) into the Leg (G) upper part, fasten them using M6 x 16mm bolts (BB). Tighten bolts once they are aligned in all the holes.

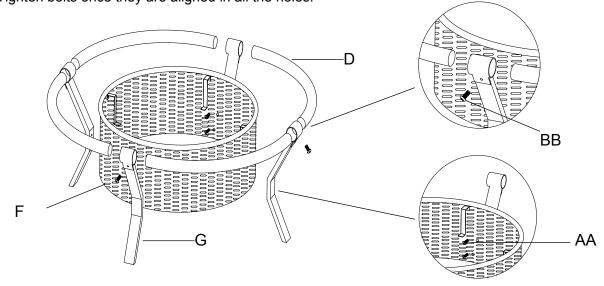

Step 4: Place the Grate (C) and Mesh Cover (B) into the assembly base. The fire pit is now ready for use. When the appliance has cooled down COMPLETELY and NOT in use, put cove (I) on the appliance.

