

A Source & Display Control

Rotate the knob to change the input. Press the knob to dim or turn off the display.

B Front Panel OLED Display

Indicates the selected audio source, volume level, pause, mute, and track information (when available). Also provides feedback when setting and selecting presets.

(c) Backlit Preset Pushbuttons

For setting and selecting presets.

(D) Volume Control, Play/Pause, & Mute

Rotate the knob to adjust volume. Press the knob to pause/un-pause (or to mute when a source cannot be paused).

Live SVS Sound Experts Support

Standing by to help you with setup, 7-days-a-week.

custservice@svsound.com (877) 626-5623 Visit **svsound.com** for online chat

The full SVS Prime Wireless Pro SoundBase owner's manual can be found here: www.svsound.com/prime-wireless-pro-manual

Welcome!

Congratulations on bringing home the Prime Wireless Pro Powered Speaker Pair, a stunning achievement in sound quality and speaker versatility. We know you are eager to start playing so this Quick Start Guide will walk you through the various controls and connections and get you on the fast path to enjoying highresolution wireless streaming of your favorite playlists and music services.

Network Input/Output

Connect an Ethernet cable from your router for hard-wired network connection.

USB Service

For firmware updates and for powering or charging USB devices.

3 Subwoofer RCA Out

Connect to a subwoofer input using an RCA audio interconnect cable.

4 Left/Right RCA Line Input

Connect any stereo source using left and right stereo RCA analog cables.

5 3.5mm Line Input

Connect any stereo source using a stereo 3.5mm analog cable.

6 Wi-Fi Setup

Enables Wi-Fi set-up mode and shows status of the wireless connection. A pulsing green light indicates set-up mode, solid light means it's ready to use.

(7) Bluetooth Setup

Enables Bluetooth pairing mode and shows status of Bluetooth connection. Flashing blue light indicates pairing mode, solid light means it's connected and ready to use.

8 Output to Left Speaker

Connects your active Prime Wireless speaker to the passive speaker using supplied speaker interconnect cable.

9 Optical Input


Connect to sources with an optical digital output such as a gaming console or TV. Please consult your TV audio output settings.


10 HDMI In (ARC /eARC)

Connect to the HDMI ARC or eARC output of your TV. Please consult your TV audio output settings.

11) AC Power Cord Input


Connections and Controls

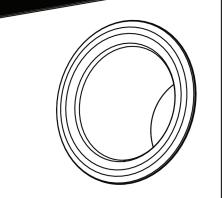

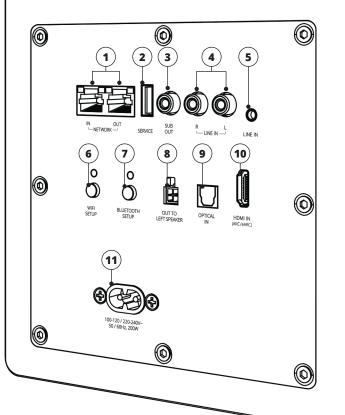

Placing and Connecting Your Speakers

- 1. The active speaker with front and rear controls will always be the right speaker and the passive speaker with no controls is the left speaker.
- Plug supplied interconnect cable into "Out to Left Speaker" (8) on rear panel of right speaker. Plug other end of cable into corresponding input on left speaker.
- 3. Plug in power cord (1) and continue to "Setting Up Wi-Fi and the DTS Play-Fi App" section to set up and name your speakers.

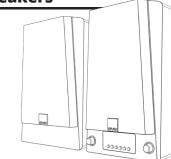






ver Cord Speaker Interconnect Cable

Connecting to a Subwoofer

- 1. Connect RCA interconnect to Subwoofer RCA Input.
- 2. Connect opposite end of RCA Interconnect to Speaker System RCA Sub Output (3).

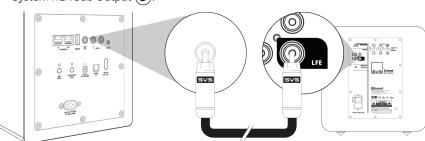

Connecting Source Devices via HDMI In (ARC / eARC), Optical, and Line In Inputs

- 1. Connect your source device to the HDMI In (ARC / eARC) **10**, Optical Input **9**, Left/ Right RCA Line In inputs **4**, or the 3.5mm Line Input **5** on your Prime Wireless Pro Speaker System.
- 2. Select the source input by rotating the left control knob or using your remote control. The source will be highlighted on the OLED display.
- 3. Start playback on your connected source device.
- 4. Volume can be controlled from the Speaker System front panel, the included remote control, or the Play-Fi app.

*Importan

HDMI ARC and eARC connections on TVs can work differently by brand and model. If the sound is distorted or you do not hear any sound, you may need to adjust your TV's settings.

Troubleshooting Tips

- Enable HDMI ARC, eARC, or CEC
- Make sure "Audio Output" is set to "External Speaker" or similar
- Set the audio output to Stereo or PCM Stereo
- If you're still having issues please consult the full product manual or contact the SVS Sound Experts

The full SVS Prime Wireless Pro SoundBase owner's manual can be found here: www.svsound.com/prime-wireless-pro-manual

requests, confirms your warranty re hase. Plus, as a registered customer dates.



Setting Up Wi-Fi and the DTS Play-Fi App

Download DTS Play-Fi App

Search "Play-Fi" in the app store and download the free DTS Play-Fi app to your phone or tablet to unlock the full functionality of your SVS Prime Wireless Pro Speaker System.











Setting up with an Apple Device

tiOS users Go to "Settings" -> "Wi-Fi" and select Play-Fi Device listed under "SET UP NEW AIRPLAY SPEAKER" on the lower portion of the screen (you may need to wait up to 1 minute for the speaker to appear). After selecting your Play-Fi device, confirm the desired network, and enter the desired name for your Pro Speaker System

(e.g. Speaker System Lounge). You will get a confirmation screen when completed.

Note that AirPlay setup requires iOS 11.4 or later. If you are using an older version of iOS go to step 4.

▲ Android users skip to step 3B.

Plug in your Speaker System

Choose your Wi-Fi network

The "Speaker Password" is

and name your device

Once powered on, the Prime Wireless Pro Speaker System will automatically go into Wi-Fi setup mode, indicated by a rapidly blinking green light on the rear panel (6). When the blinking green light slows to a pulse, it is ready to connect. Wi-Fi connection is confirmed when the green light remains on permanently.





Select the Play-Fi Device











AirPlay setup will configure AirPlay Setup is complete

your Play-Fi Device for your

Setting up with an Android Device

Open the Play-Fi App and follow prompts in the app to finish setting up your Prime Wireless Pro Speaker System on your home Wi-Fi network.



Setup Guide

3B







the Play-Fi Device





app and connect to

your WIFI Network

0 9 8 3 9 1 0





complete the setup

process



Select a name for

System and you are





ready to go

You're ready dts > play-fi to stream!

Now that your SVS Prime Wireless Pro Speaker System is set up over Wi-Fi, you can access music from your devices and your favorite streaming services. You can also enjoy Hi-Res Critical Listening Mode,

create a multi-room audio system, and more.

Note: The Play-Fi app might require an update to the Pro Speaker System software upon first connection to enable the latest features. The ann will provide a notification if this occurs - this process can take 3-5 minutes.

If your SVS Prime Wireless Pro Speaker System is not discovered by the Wi-Fi network, try moving it closer to your router or to a stronger signal area.



Streaming with Apple AirPlay

To stream audio from an iOS device to your SVS Prime Wireless Pro Speaker System, it must first be set up on your Wi-Fi network (see section 3). Once the Pro Speaker System is on your network, any app or operating system that has AirPlay audio output controls will automatically discover the Pro Speaker System and add it to the list of available AirPlay devices. It will have the same name it has in the Play-Fi app.

- 1. Open the app you want to stream from.
- 2. Start the audio you want to play.
- 3. From the Control Center on your iOS device, or within the active app, choose your SVS Prime Wireless Pro Speaker System as the output device.



Streaming with Chromecast built-in

To cast audio from Chromecast-enabled apps to your SVS Prime Wireless Pro SoundBase, it must first be set up on your Wi-Fi networks (see section 3).

- 1. Open any Chromecast-enabled app you want to stream from.
- 2. Start the audio you want to play.
- 3. In the top right corner, tap the Cast button.
- 4. Choose your SoundBase. The Cast button will change colors, letting you know you're connected.
- 5. Once you are connected, you can stream audio directly to your SoundBase via Chromecast built-in.

Bluetooth Setting Up and Streaming with Bluetooth

- 1. To enter pairing mode, tap the Bluetooth Setup button on the rear panel or press and hold the Bluetooth button on the remote for 3 seconds. Pairing Mode is indicated by the blinking blue LED on the rear panel (12).
- 2. Select "SVS Pro Speakers" in the Bluetooth Settings menu on your smartphone, tablet, or PC.
- 3. When Bluetooth is connected, the blue LED on the rear of the product will stop blinking and remain solid. Select Bluetooth as your source on the Pro Speaker System, select the music you want to stream and then press play!

Create Custom Presets

Six presets are available for instant access to your favorite streaming music channels, playlists, and other content.

- 1. From the Play-Fi app, start the station, playlist, or other source you want as a preset.
- 2. Press and hold desired preset button (1-6) on the front panel or the remote control until the OLED display shows "Saving Preset #" and the preset button flashes. The Preset is confirmed when display shows "Preset # Saved".
- 3. Access your favorite music by selecting a preset at any time on the front panel or from the remote control.

To reset a preset, repeat the steps 1 and 2.

NOTE: Some premium subscription services may require that you sign in and enter a code the first time you set a preset with that service - The Play-Fi app will walk you through this process.





















Current services available as presets. More options coming soon, check sysound.com/products/prime-wireless for updates. Android, Google Play, and Chromecast built-in are trademarks of Google LLC.

Included Accessories



emote Control









R EVOLUTION

Your /S Product: