

ASSEMBLY INSTRUCTION FOR CHAIR

UCB1740100, UCB1741100, UCB1742100, UCB1743100,
UCB1745100, UCB1741100E, UCB1743100E, UCB1745100E,
UCB1744100E, UCB1740100E, UCB1742100E

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.


1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage the product or injury to person during assembly.
2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
3. Please do not over tighten screws or bolts.
4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

PART LIST			
NO.	PART DESC	Q'TY	CODE
A	CHAIR	1	
B	LEGS	4	PUCB100LEG
C	SEAT CUSHION	1	
D	PILLOW	1	


HARDWARE LIST			HARDWARE CODE
NO.	HARDWARE DESC	Q'TY	PUCB 100HW
1	BOLT Ø 5/16" x 25mm	12	
2	LOCK WASHER Ø5/16" x Ø12	12	
3	FLAT WASHER Ø5/16" x Ø19	12	
4	ALLEN KEY	1	

STEP

- 1- Turn the chair and unzip the bottom to remove the chair legs carton
- 2- Before opening the carton and taking out the chair after the legs
- 3- Remove the box, remove the legs of the chair and put the inor bolts, spring washer, washer in sequence

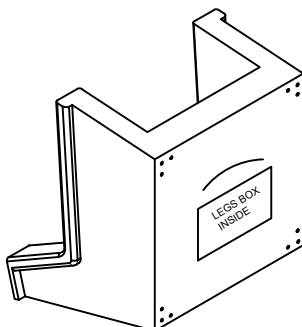


STEP 2

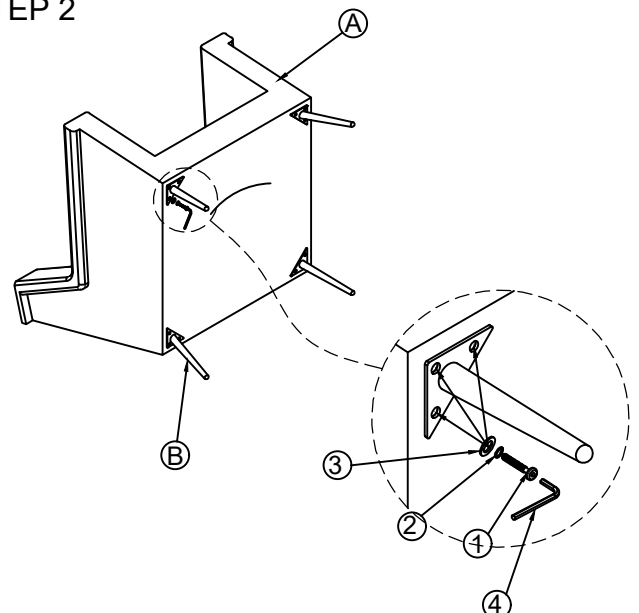


ASSEMBLY INSTRUCTION FOR CHAIR

UCB1740100, UCB1741100, UCB1742100, UCB1743100,
UCB1745100, UCB1741100E, UCB1743100E, UCB1745100E,
UCB1744100E, UCB1740100E, UCB1742100E

STEP 3

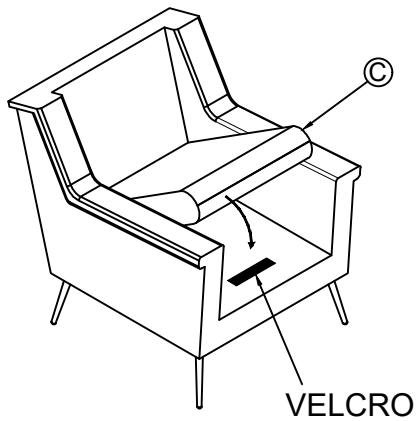

STEP 4

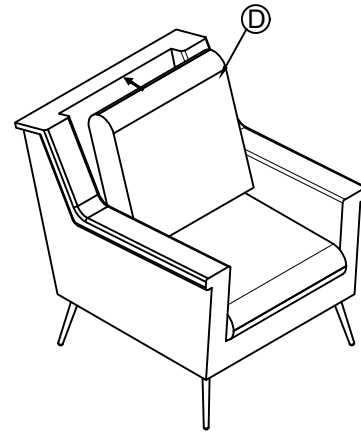

COMPLETED

