


EB-L570U/EB-L770U/EB-L775U

# Quick Reference

This *Quick Reference* card gives brief instructions on connecting your projector and using common features. For details, see the online *User's Guide*.

**IMPORTANT:** Before using this product, make sure you read these instructions and the safety instructions in the online *User's Guide*.

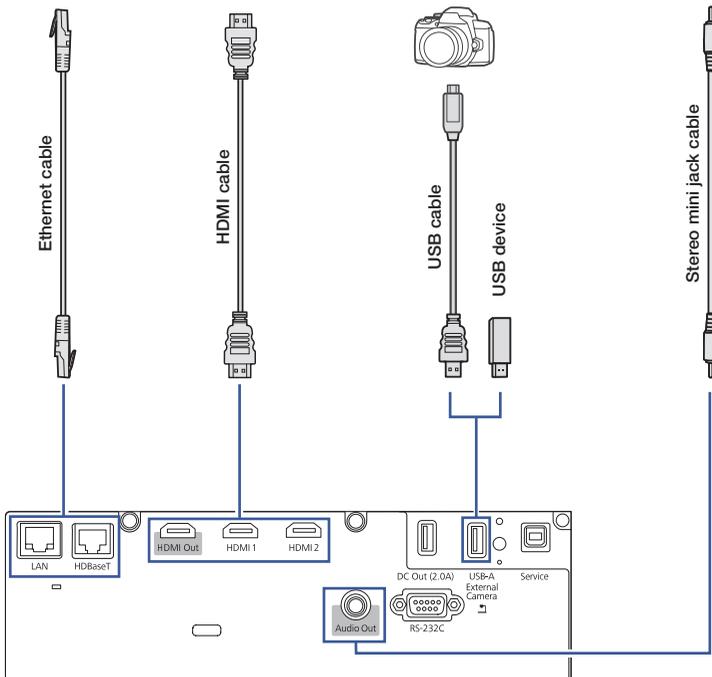

**Note:** Product availability varies by country and region.

## Turning the Projector On

1. Turn on your computer or image source.
2. Press the  power button on the projector or remote control. After the status light stays blue, the projector is ready.

**Note:** If the Direct Power On function is enabled, you can turn the projector on without pressing the  power button; just plug it in or flip the switch controlling the outlet to which the projector is connected. If the Auto Power On function is enabled, you can turn the projector on by connecting an HDMI cable. For more information, see the online *User's Guide*.

3. If your image does not appear, see “Switching Between Image Sources” or “Troubleshooting.”

 
 
## Changing the Language of the Projector Menus

The default language of the projector’s menu system is English, but you can change it as necessary.

1. Press the **Menu** button to access the projector’s menu system.
2. Select **Extended > Language**.
3. Select your language.
4. When you’re done, press the **Menu** button to exit.


## Switching Between Image Sources

Press the **Source Search** button or one of the source buttons on the remote control.



## Displaying a Test Pattern

1. Press the down arrow/ button on the projector.

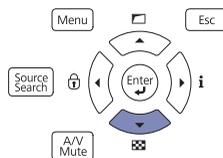

2. Press the **Enter** button to change the test pattern.
3. When you’re done, press the **Esc** button to clear the test pattern.

**Note:** See the online *User's Guide* for instructions on displaying a test pattern using the remote control.

## Changing Screen Type

Set the Screen Type setting to the screen’s aspect ratio.

1. Press the **Menu** button.
2. Select **Extended > Display > Screen > Screen Type**.
3. Select the screen’s aspect ratio.


**Note:** The displayed image should match the screen’s size and aspect ratio.

4. When you’re done, press the **Menu** button to exit.


**Note:** After changing the screen type, you may need to change the aspect ratio of the projected image depending on the input signal. Press the **Aspect** button on the remote control to change the aspect ratio, if necessary.

## Adjusting Image Position Using Lens Shift

1. Turn the vertical and horizontal lens shift dials on the projector to adjust the position of the projected image.

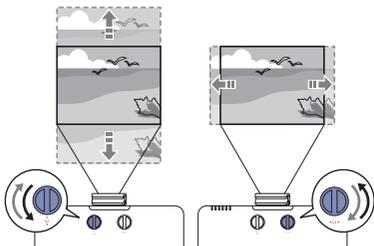


2. If the projector is on a table, you can level the image by turning any of the projector's adjustable feet.

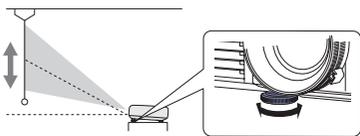


**Note:** See the online *User's Guide* for instructions on adjusting the image position using the projector menus.

## Focusing and Zooming

Turn the focus ring to sharpen the image.

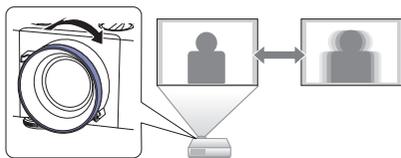

Turn the zoom ring to reduce/enlarge the image.

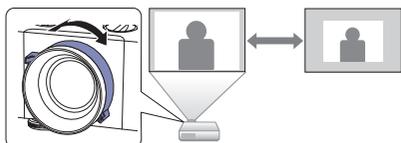

**Note:** See the online *User's Guide* for instructions on adjusting the image using the projector menus.

## Correcting Image Shape

If your image is uneven on the sides or you are projecting on a corner, you can use the projector's distortion correction features to adjust the shape. See the online *User's Guide*.

## Making Other Image Adjustments

For help on using the projector's features to improve the image quality, see the online *User's Guide*.

## Turning the Projector Off

Press the  power button on the projector or remote control. If you see a confirmation message, press the  power button again.

**Note:** If the Direct Power On function is enabled, you can flip the switch controlling the outlet to which the projector is connected instead. To turn on this feature, see the online *User's Guide*.

With Epson's Instant Off® technology, you don't have to wait for the projector to cool down; just turn it off or unplug it when you're done.

## Troubleshooting

**If you see a blank screen or the message *No signal***

- Make sure the status light on the projector is blue and not flashing.
- Make sure the cables are connected correctly. See the online *User's Guide*.
- You may need to change the image source. See "Switching Between Image Sources." Also, make sure the source device is turned on.

## If the projector and the laptop don't display the same image

### Windows®

Press the function key on your keyboard that lets you display on an external monitor. It may be labeled **CRT/LCD** or have an icon such as . You may have to hold down the **Fn** key while pressing it (such as **Fn + F7**). Wait a moment for the display to appear.

On Windows 7 or later, hold down the Windows key and press **P** at the same time, then click **Duplicate**.

### Mac

On macOS 13, select **System Settings** > **Displays**. Press the + pop-up menu button, then choose a display to mirror.

On macOS 12, select **System Preferences** > **Displays** > **Display Settings**. Select the projector, then choose the mirror option for your display from the drop-down menu.

On macOS 11 and older, open **System Preferences** and select **Displays**. Click the **Arrangement** tab and select the **Mirror Displays** checkbox.

## Registration

Register today to get product updates and exclusive offers. You can register online at <http://epson.com/webreg>.

## Where to Get Help

### Manuals

For more information about using the projector, you can view or download the online manuals from the Epson website, as described below.

### Internet support

Visit <http://epson.com/support> (U.S.), <http://epson.ca/support> (Canada), or <http://latin.epson.com> (Latin America) and search for your product to download software and utilities, view manuals, get FAQs and troubleshooting advice, or contact Epson.

### Speak to a support representative

To use the Epson® PrivateLine® Support service, call (800) 637-7661 (U.S. and Canada). This service is available for the duration of your warranty period. You may also speak with a projector support specialist by dialing (562) 276-4394 (U.S.) or (905) 709-3839 (Canada).

Support hours are 7 a.m. to 4 p.m., Pacific Time, Monday through Friday. Days and hours of support are subject to change without notice. Toll or long distance charges may apply.

In Latin America, see the online *User's Guide* for technical support information.


### Purchase supplies and accessories

You can purchase an air filter (V13H134A56), screens, or other accessories from an Epson authorized reseller. To find the nearest reseller in the U.S. or Canada, call 800-GO-EPSON (800-463-7766). Or you can purchase online at <http://epsonstore.com> (U.S. sales) or <http://epsonstore.ca> (Canadian sales).

To find the nearest reseller in Latin America, go to <http://latin.epson.com>.

For a list of optional accessories, see the online *User's Guide*.

# Remote Control Map

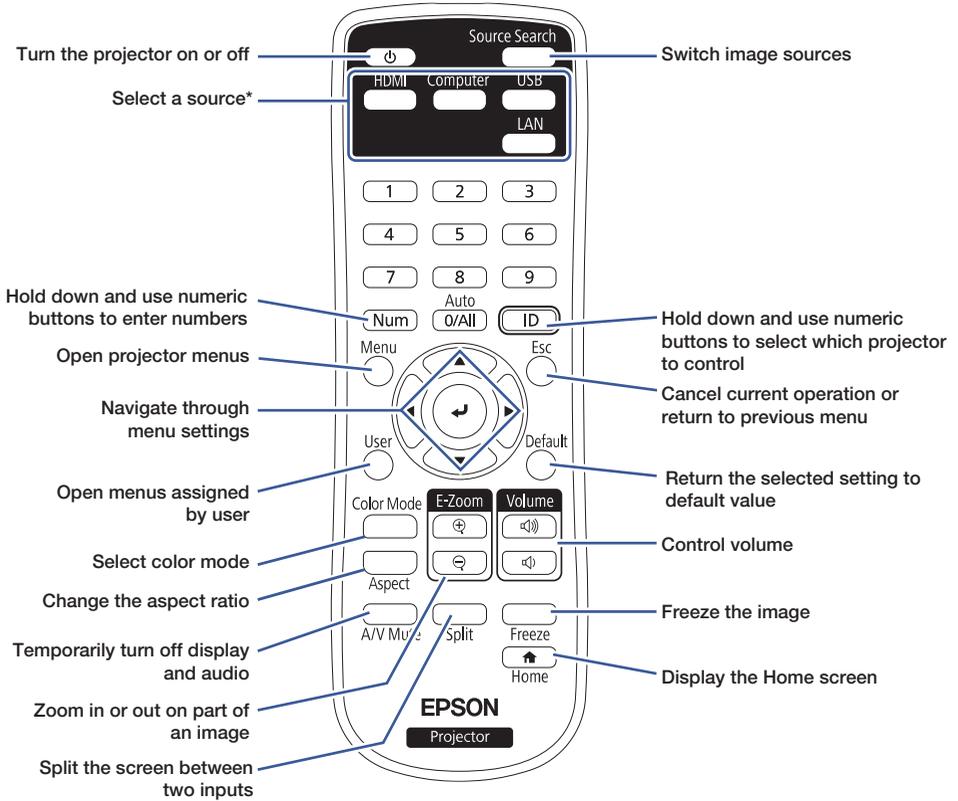

\*The Computer button is not used with these projectors.

**EPSON**<sup>®</sup>  
EXCEED YOUR VISION



EPSON, Instant Off, and Quick Corner are registered trademarks and EPSON Exceed Your Vision is a registered logomark of Seiko Epson Corporation.

PrivateLine is a registered trademark of Epson America, Inc.

Mac and macOS are trademarks of Apple Inc., registered in the U.S. and other countries.

Windows is a registered trademark of Microsoft Corporation in the United States and/or other countries.

General Notice: Other product names used herein are for identification purposes only and may be trademarks of their respective owners. Epson disclaims any and all rights in those marks.

This information is subject to change without notice.

© 2022 Epson America, Inc., 12/22

CPD-63060

Printed in XXXXXX



\*414364800\*