

Better Living means thoughtful design to preserve your favorite foods, save on energy, and easily organize and maintain your Single Door Freezer

A Quick Guide to Getting Started



⏻ Before you begin

• Set up your freezer

Make sure it is located on a floor that is level and strong enough to support it when fully loaded with food. See the INSTALLATION section in your Use & Care Manual.

• Before starting your freezer

Clean the inside of your appliance before using it. See the CARE AND CLEANING section in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

+ Care and cleaning

- Keeping your freezer clean prevents odor build up and maintains appearance.
- Clean the stainless steel door and handle with non-abrasive soapy water and a dishcloth. Rinse with clean water and a soft cloth.



We Recommend:

Immediately wiping up any spills and cleaning your freezer at least twice per year.

? FAQs

• What does the alarm sound mean?

An alarm can mean your door is open, a power outage or HIGH TEMP has been detected. In the event of a HIGH TEMP, acknowledge the alarm, make sure your freezer is level, and the door closes with a proper seal. Leave the freezer door closed so the freezer can decrease and stabilize to the set temperature.

• Why does my freezer seem to run continuously?

Your freezer is equipped with an energy-efficient variable speed compressor that saves energy by running more frequently.

• Is it normal to hear a popping or cracking sound when the compressor runs?

Yes. These sounds can be caused by the circulation of the refrigerant that's used to cool the freezer and the internal components as they expand and contract with temperature changes.

Your Filter: PureAdvantage Ultra II™ Air Filter*

- More powerful and effective than baking soda.
- Captures & keeps odors away with carbon technology.
- Provides up to 6 months of freshness.



ELPAULTRA2™


*Located in the air filter cover in your freezer.



▶ Getting Started

Once the unit is plugged in, the settings icon will illuminate on the appliance control display upon opening the door. Pressing the settings icon will illuminate all of the icons on the appliance control display. After 10 seconds of no interaction or closing the door all icons will fade except for the settings icon. See below for more information about the icons.

⚙️ Manage Your Display

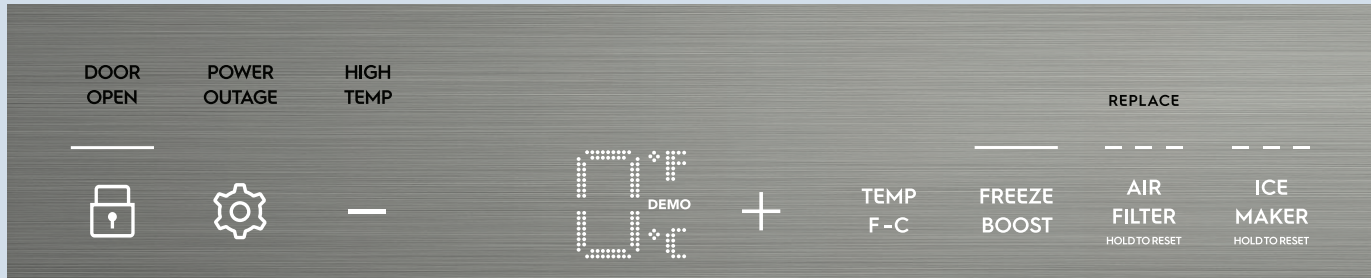

DOOR OPEN

The DOOR OPEN LED illuminates and the audible alert sounds indicating the door has been open 5 minutes or more. Alarm will sound until closed.

POWER OUTAGE

Illuminates and sounds if there has been a power interruption, some cases the internal temperature may increase. After you check your food reset the alarm by pressing Power outage.

HIGH TEMP

If the temperature increases above a safe temperature range, the red HIGH TEMP LED light will illuminate and the alarm sounds.

LOCK

The lock button is used to lock the control panel. Press and hold for 3 seconds to enable or disable. While in the locked state, no changes can be made until unlocked.

SETTINGS

The settings icon illuminates upon opening the appliance door. Press to reveal other function icons. After 10 seconds of non use of icons or door closure, all icons will fade except .

ADJUSTING TEMP

Press + to raise the temperature and - to lower the temperature on the appliance control display. Allow 24 hours for the temperature to stabilize between adjustments.

TEMP °F/°C

Press to toggle between Fahrenheit (°F) and Celsius (°C).

FREEZE BOOST

Turning on FREEZE BOOST cools the appliance down to a target temperature and remains active for up to 24 hours before automatically deactivating or being manually exited.

AIR FILTER

The AIR FILTER replacement alert will illuminate when it is time to replace the air filter. (About every 6 months).

ICE MAKER

The ice maker is default on, which means it will constantly make ice until the ice bucket is full.


Learn More

Your Electrolux freezer is designed to preserve a variety of foods using a customizable layout. We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



Sustainability, together

We're committed to making food last longer with our cooling technology to help you waste less.

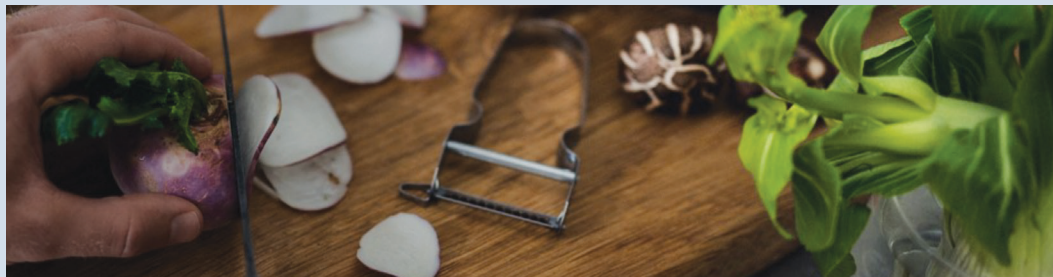

Peace of Mind & Protection

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

electroluxappliances.com
(877) 435-3287

10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca
(800) 265-8352

5855 Terry Fox Way
Mississauga, ON L5V 3E4