

**Better Living means thoughtful design to preserve foods as nature intended, reduce energy, and easily organize and maintain your Single Door Refrigerator**

## A Quick Guide to Getting Started



### **Before you begin**

#### • **Set up your Refrigerator**

Make sure it is located on a floor that is level and strong enough to support it when fully loaded with food. See the INSTALLATION section in your Use & Care Manual.

#### • **Before starting your Refrigerator**

Clean the inside of your appliance before using it. See the CARE AND CLEANING section in your Use & Care Manual. To ensure safe food storage, allow the appliance to operate with the door closed for at least 8 hours before loading it with food.

### **Care and cleaning**

- Clean your refrigerator with non-abrasive soapy water and a dishcloth. Rinse with clean water and dry thoroughly.
- Keep fresh air and clean water flowing by changing your filters every 6 months.



#### **We Recommend:**

Immediately wiping up any spills and cleaning your refrigerator at least twice per year.

## **FAQs**

### • **How do I use the water dispenser?**

Your water dispenser is mounted on the left-hand side of your interior refrigerator wall. Push the water nozzle to fully extend it, place your cup against the paddle, then press to dispense water. Push the nozzle back into place when finished.

### • **Why does my refrigerator seem to run continuously?**

Your refrigerator is equipped with an energy-efficient variable speed compressor that saves energy by running more frequently.

### • **The temperature is warmer or colder than preferred. What can I do?**

Adjust the temperature by 1 or 2 degrees and allow 24 hours for the temperature to stabilize. Check to ensure food items are not blocking the multi-port air exhaust ducts as this will impact performance.

#### **Your Filters:**

##### **ELPAULTRA2**

PureAdvantage™  
Ultra II Air Filter

##### **EWFO2**

PureAdvantage™ Water & Ice Filter




*Located in the air filter cover in your Refrigerator.*



## ▶ Getting Started

Once the unit is plugged in, the settings icon illuminates when opening the refrigerator door. Pressing the settings icon illuminates all icons on the display. All icons except the settings icon will fade after 10 seconds of no interaction or if you close the door.

## ⚙️ Manage Your Display

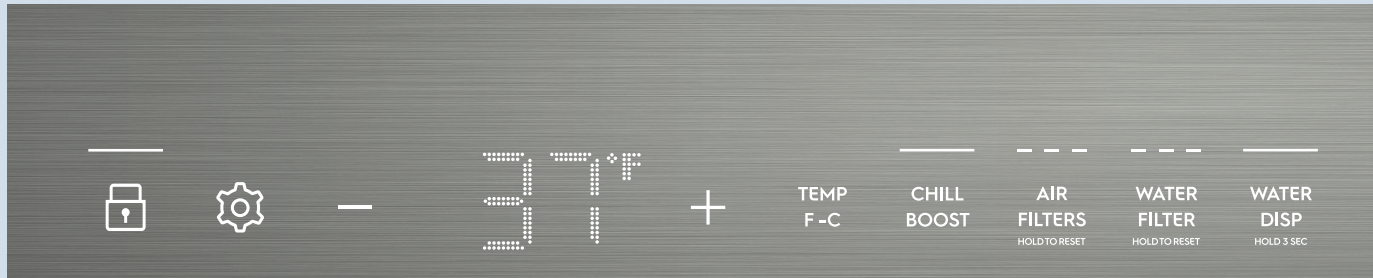

### DOOR OPEN

The DOOR OPEN LED illuminates and the audible alert sounds indicating the door has been open 5 minutes or more. Alarm will sound until closed.

### POWER OUTAGE

Illuminates and sounds if there has been a power interruption, some cases the internal temperature may increase. After you check your food reset the alarm by pressing Power outage.

### HIGH TEMP

If the temperature increases above a safe temperature range, the red HIGH TEMP LED illuminates and the alarm sounds.

### LOCK

The lock button is used to lock the control display. Press and hold for 3 seconds to enable or disable. While in the locked state, no changes can be made until unlocked.

### SETTINGS

The settings icon illuminates upon opening the appliance door. Press to reveal other function icons. After 10 seconds of non use of icons or door closure, all icons will fade except .

### ADJUSTING TEMP

Press + to raise the temperature and – to lower the temperature on the appliance control display. Allow 24 hours for the temperature to stabilize between adjustments.

### TEMP °F/°C

Press to toggle between Fahrenheit (°F) and Celsius (°C).

### CHILL BOOST

Turning on CHILL BOOST cools the appliance down to a target temperature and remains active for up to 24 hours before automatically deactivating or being manually exited.

### WATER FILTER

The WATER FILTER replacement alert illuminates when it is time to replace the water filter. (About every 6 months).

### AIR FILTER


The AIR FILTER replacement alert illuminates when it is time to replace the air filter. (About every 6 months).

### WATER DISP

Illuminates when the water dispenser is ON.

## Learn More

Your Electrolux refrigerator is designed to preserve a variety of foods with customizable layouts. We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



**Sustainability, together**

We're committed to making food last longer with our TasteLock™ Plus Crispers to help you waste less.




**Peace of Mind & Protection**

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

[electroluxappliances.com](http://electroluxappliances.com)  
(877) 435-3287  
10200 David Taylor Drive  
Charlotte, NC 28262

[electroluxappliances.ca](http://electroluxappliances.ca)  
(800) 265-8352  
5855 Terry Fox Way  
Mississauga, ON L5V 3E4