

Designed to use resources efficiently without compromising clean

A Quick Guide to Getting Started



⏻ Before you begin

- **Before starting your dishwasher**

Check that all plastic ties, packing, and literature are removed from the wash arms, baskets and dispenser. Make sure your top rack, bottom rack, and silverware basket are in place. Check your Use & Care Manual. If dishwasher is connected to a food disposal, check that the knock-out plug is removed or it will prevent proper draining.

- **Fill Rinse Aid Dispenser**

Rinse aid greatly improves drying and reduces water spots. Twist off the rinse aid dispenser cap and fill until the indicator reaches full, then replace cap.

+ Care and cleaning

- Clean stainless steel door and handles with warm soapy water and a dishcloth. Rinse and dry thoroughly using a soft cloth.
- Keep odors at bay and clean the inside of your dishwasher. See your Use & Care Manual to learn how.



We Recommend:

Occasionally cleaning the cylinder filters to maximize wash and draining performance.

? FAQs

- **How can I best protect my dishware in the dishwasher?**
Electrolux makes it easy to protect your dishes with a versatile racking system.* Target Wash Zones give you the ability to wash the inside areas of narrow glassware and other items. Check your Use & Care Manual for tips on loading dishware.
- **How do I know when the dishwasher cycle is complete?**
During a running cycle, the blue LED shines on the floor. You'll know that the cycle is complete if you see the green LED light shining on the floor.



The versatile racking system provides the utmost in flexibility.




▶ Getting Started

Select the wash cycle and dry options appropriate for your load. Note that the indicator lights illuminate your selections.

- Press the START pad to turn on the unit
- Select the wash cycle and options, and PRESS START displays in the status window.
- Press START again and immediately close the dishwasher door to start the cycle. The door must be closed immediately after pressing START, otherwise you will need to make your selections again. This also applies if you need to add a forgotten item.

✋ Select Cycle & Options

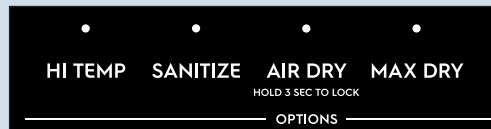

AUTO
Smart Sensor technology will determine the type of cycle required to clean the dishes.

HEAVY
For pots, pans, casserole dishes and dinnerware with dried-on or baked-on soils.

NORMAL
For regularly soiled dishes and silverware.

ECO
For lightly soiled and pre-rinsed dishes and silverware.

RINSE
For rinsing dishes that will be washed later.

FAVORITE
Allows you to save your preferred cycle and options into one button. See the Use & Care guide for more information on setting this cycle.

FAST
Washes a lightly soiled and pre-rinsed load of dishes in approximately 30 minutes.

UPPER
Uses only the upper rack for lightly soiled and pre-rinsed dishes.

STEMWARE
For delicate China, Crystal, wine and cocktail glasses.

HI TEMP
When selected, the dishwasher heats water in the main wash to approximately 140°F (60°C).

SANITIZE
When SANITIZE is selected, the final rinse water temperature is heated to 157°F (69.4°C) for 7 minutes.

AIR DRY
Reduces energy consumption by not utilizing the heating element during the drying cycle.

CHILD LOCK
Enable Child Lock Controls by pressing and holding AIR DRY until LOC displays in the status window. Press and hold again until LOC is no longer displayed to unlock the controls.

MAX DRY
The Max dry option utilizes the heating element during the drying cycle.

DELAY
The delay option allows a delay from 1-24 hours before starting the dishwasher.

STATUS WINDOW
See the Use & Care guide for all activities displayed on the status window.

START
Press and immediately close the dishwasher door to start the wash cycle.

CANCEL
Press to cancel selected cycle and options.

👍 Learn More

We recommend familiarizing yourself with product features and terminology in your Use & Care Manual.



Sustainability, together

LuxCare® Wash Arm tackles the toughest dishes without wasting valuable resources.



Peace of Mind & Protection

Get more with product registration. Look for the photo icon on your registration card to text and register, or visit us online.

electroluxappliances.com
(877) 435-3287
10200 David Taylor Drive
Charlotte, NC 28262

electroluxappliances.ca
(800) 265-8352
5855 Terry Fox Way
Mississauga, ON L5V 3E4