

Lynx 30" Universal Cart

L30(PS)R, L30AG, and LSMK


The following instructions are provided to help you install the Asado, 30" Grill, or Sonoma Smoker on the L30CART.

IMPORTANT: Be sure the L30CART's casters are locked to avoid movement when installing the grill.

Warning: the L30AG is approximately 208lbs., the LSMK is approximately 135 lbs., and the L30PSR is approximately 241 lbs. you will require assistance to lift and install any of these items onto the cart.

Tools required: Rags, newspaper (to place any items on), Philips head screwdriver, and gloves.

This cart is intended for use with the Lynx 30" Professional Grill, 30" Asado Grill, and the 30" Sonoma Smoker only.

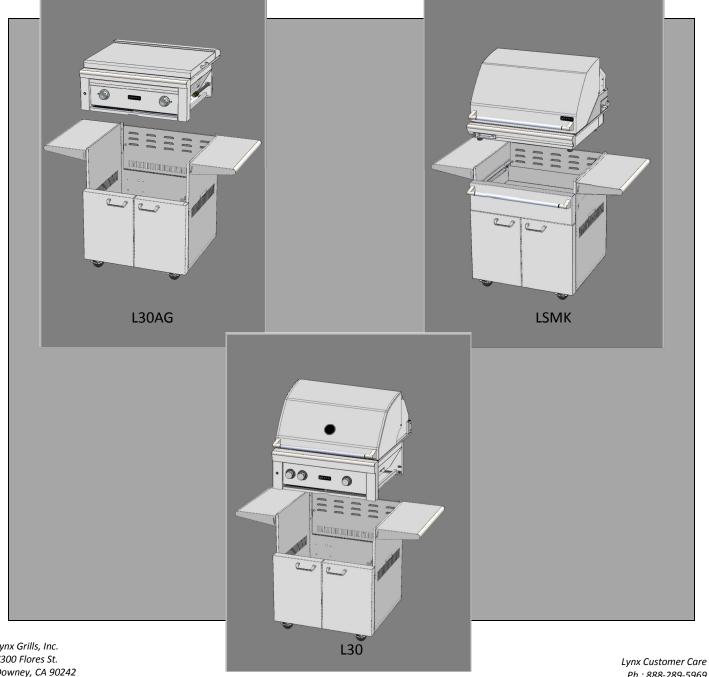


Lynx Grills, Inc. 7300 Flores St. Downey, CA 90242 www.lynxgrills.com Ph. 562-299-6900

Ph.: 888-289-5969 Fax: 562-299-6978 Service@lynxgrills.com


L30AG

- 1. Remove the four screws on the back panel.
- 2. Slide out drawer and remove completely.
- 3. Next remove the screws which attach the rails and remove the rails to begin installation.

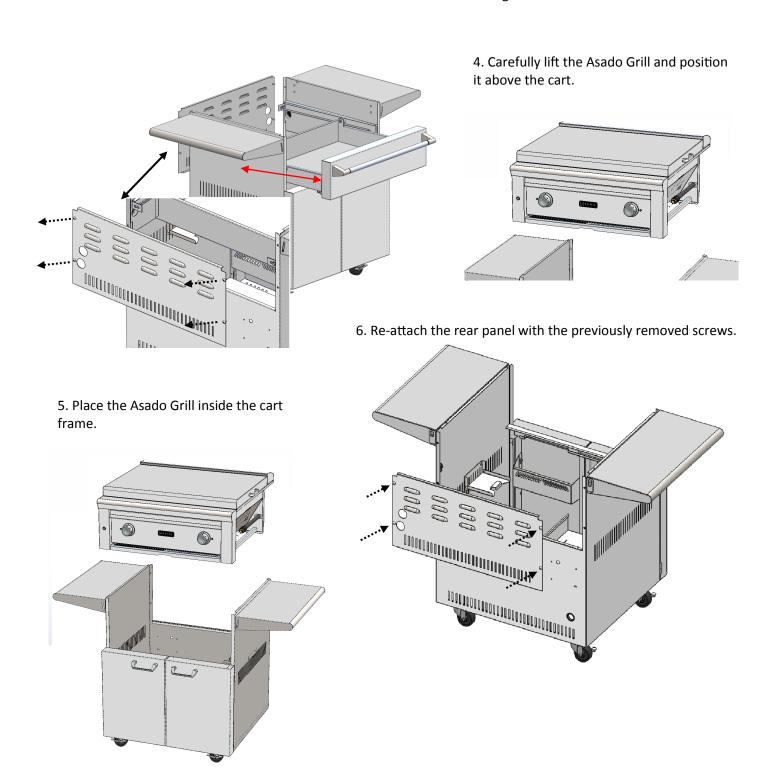


L30PSR

- 1. Remove the four screws on the back panel.
- 2. Slide out drawer and remove completely.
- 3. Next remove the screws which attach the rails and remove the rails to begin installation.

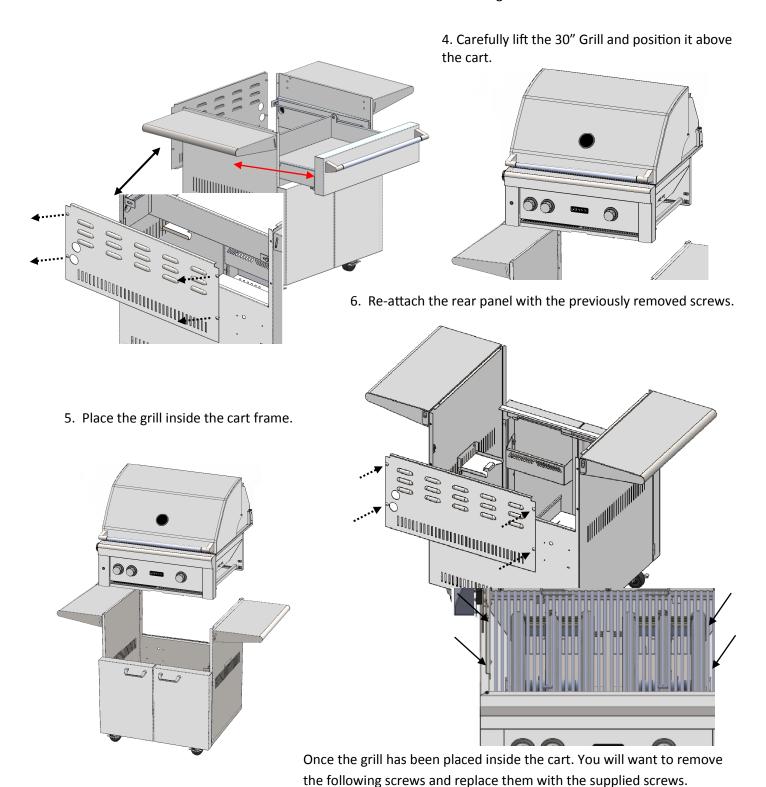

LSMK

- 1. Remove the four screws on the back panel.
- 2. Slide out drawer or remove completely to begin installation.

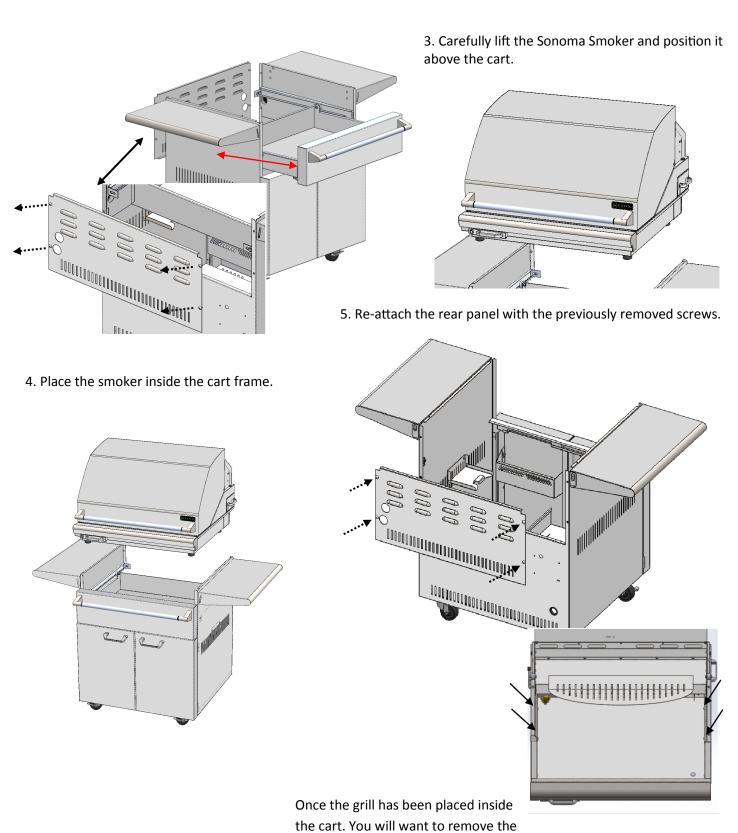

following screws and replace them with the supplied screws.