

# GETTING Started

## WITH YOUR FRIGIDAIRE GALLERY GAS RANGE





### BEFORE YOU START



#### Set up your cooktop

Make sure your burner caps are centered on the burners and the cooking grates are in place. Check your Use & Care Guide.

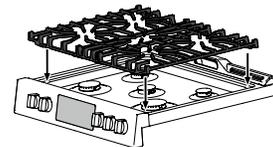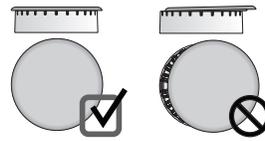

#### Set your clock

It's easy! Press , enter the time using numeric keys, then press OK/START.



#### Before cooking for the first time


Set your oven to bake at 350°F for about 30 minutes. As the wall oven gets settled in your home, it's normal to experience some noises and smoke.

### YOU'RE IN CONTROL



#### Your oven controls

Using your oven starts with just pressing the keys on your oven control. Temperature and cooking modes will appear in the display as you go.

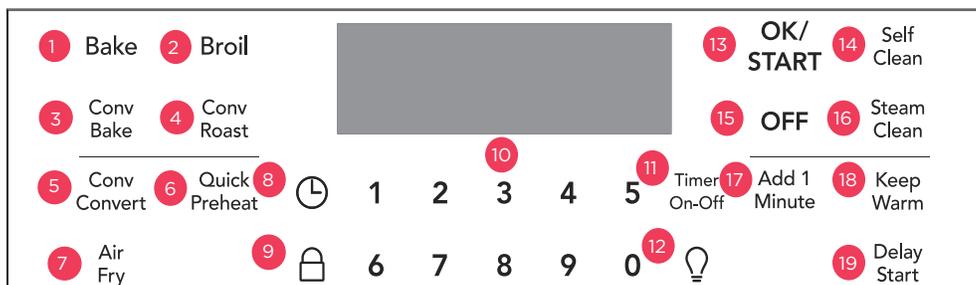

- BAKE is for delicate foods that need heat to rise and move gently in the oven.
- BROIL is for broiling and grilling foods under direct, high heat.
- CONV BAKE circulates the oven heat continuously for baking.
- CONV ROAST uses a convection fan to gently brown meats and seal in the juices.
- CONV CONVERT converts standard bake temperatures to convection temperature in convection bake feature.
- QUICK PREHEAT uses convection to get the oven up to temperature fast for pre-packaged foods and frozen meals.
- AIR FRY quickly and evenly circulates super heated air to deliver crispy, golden results with little or no oil.
- SET CLOCK is used to set the time of day.
- OVEN LOCK is used to lock the controls and the oven door.
- 0 THROUGH 9 keys are used to set temperature and time.
- TIMER ON-OFF is used to set or cancel the minute timer.
- OVEN LIGHT turns the interior light on and off at a touch.
- OK/START starts cooking functions and sets the clock.
- SELF CLEAN sets a self-clean cycle.
- OFF turns off all cooking functions.
- STEAM CLEAN offers a time saving method to assist in the routine cleaning of small and light soils.
- Add 1 Min - Adds additional minute to timer with each press of the key.
- KEEP WARM Use to keep cooked foods at serving temperature in the oven.
- DELAY START sets a delayed starting time to oven cooking or cleaning functions.



### REMEMBER

- Do not use aluminum foil or any other materials to line the oven bottom, walls, racks or any part of the oven.
- All oven racks should be removed before a self clean operation.
- Do not add bleach, ammonia, oven cleaner, or any other abrasive household cleaners to the water used for Steam Clean.
- The convection fan doesn't run right away, it starts a few minutes later.

## QUICK CARE



### A little love goes a long way

Quick ongoing care keeps your range work great for years to come!



### Be gentle

Clean with warm water and mild soap, or use Frigidaire™ ReadyClean Oven and Microwave Cleaner.



### Setting a self-clean cycle is easy.

1. Remove the racks from your oven and clean by hand. Make sure you close the oven door.
2. Press Self Clean.
3. The default clean time 3 0 0 (3 hours) will appear in the display. To choose a different clean time, use the numeric keys to enter any time between 2 and 4 hours.
4. Press OK/START twice to activate self clean.
5. After a few seconds you'll hear the door lock. Be careful around the oven during and after cleaning, things can get hot!

## AIR FRY

Deliver all of the flavor and none of the guilt. Our Air Fry button allows you to make healthy and delicious meals for the entire family - right in your oven. Use a dark, nonstick baking sheet when using Air Fry.

For perfect crispy-golden results, may we suggest our ReadyCook™ Air Fry Tray. The Air Fry Tray can be purchased from [frigidaire.com](http://frigidaire.com) or from an authorized dealer.



## FAQs

### Why does my range make noises when I'm cooking?

Temp changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temps. Different fans run to heat up the oven or cool down different parts of the range, even when it's off. These sounds are normal.

### My range is brand new - why doesn't my cooktop work?

Your installer may have left the lever for the gas supply off while working to set up your range. Check out the installation instructions for how to turn the lever back on.

### This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for recipes. Consult your Use & Care Guide for detailed instructions on how to adjust temperature or call us if you need help!



Find more troubleshooting tips in the back of your Use & Care Guide.

## LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new oven.

Look for the Photoregister<sup>SM</sup> icon on your registration card.



WE ARE  
*here*



Have a question?



Want help?



Need service?

owner support

FOR YOU [frigidaire.com](http://frigidaire.com) 1 (800) 374-4432

[frigidaire.ca](http://frigidaire.ca) 1 (800) 265-8352

