


# ASSEMBLY INSTRUCTIONS

**CROWNMARK B4610-8/B4620-8  
TV STAND**


**(BOX 1)  
BOX OF TV STAND**

NO	ITEM	QTY
A	TV STAND	1 pc
B	LEG	4 pcs

**STEP 1 :** Take out the Leg carton ( B ) from bottom TV Stand (A) as shown . Attach the Leg ( B ) at the bottom TV Stand ( A ) used JCBC ( 1 ) with Spring Washer ( 2 ) Flat Washer ( 3 ) and tighten with Allen Wrench ( 4 ) .

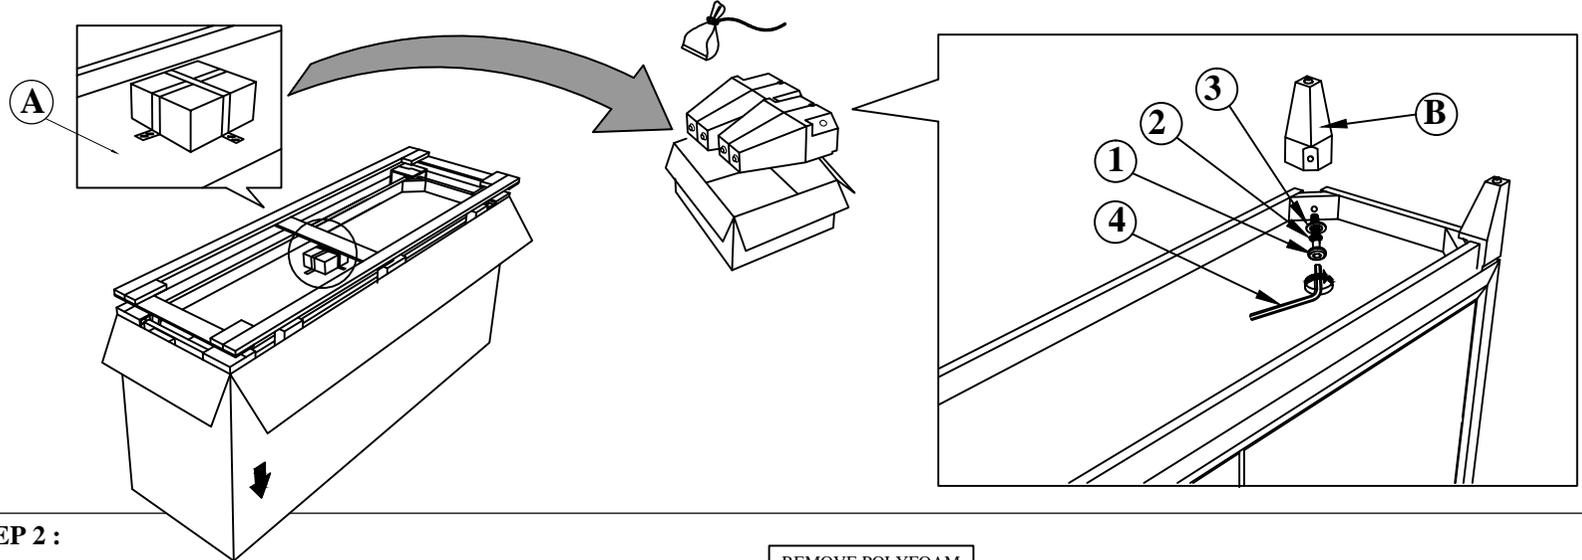


**STEP 2 :**

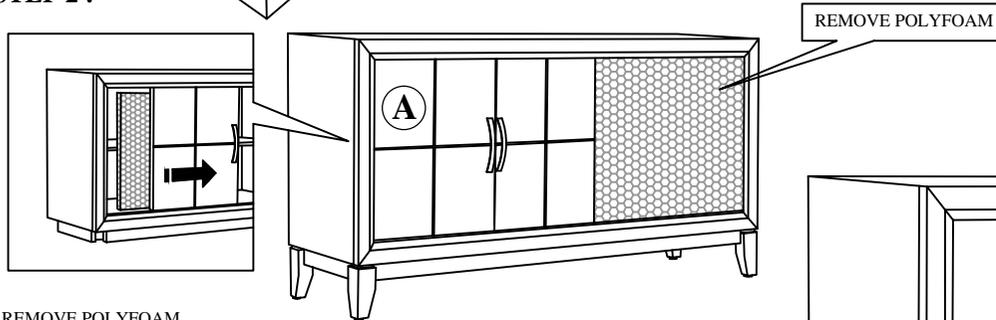

REMOVE POLYFOAM  
AT THE BACK OF SLIDING DOOR AS SHOWN.

**(BOX 1)  
HARDWARE LIST**

NO	ITEM	QTY
1	JCBC M6 x 50mm	4 PCS
2	Spring Washer 1/4" Rbw	4 PCS
3	Flat Washer 1/4"ID x 19mmOD Blk	4 PCS
4	ALLEN KEY m4x65mm Blk	1 pc

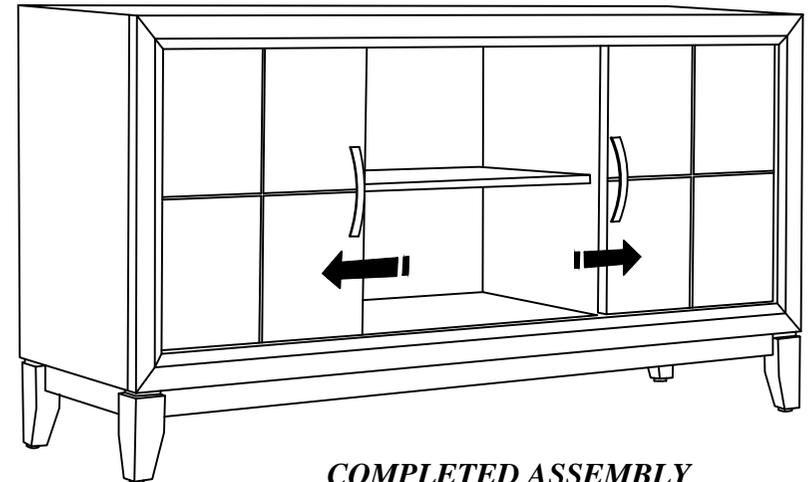

**COMPLETED ASSEMBLY**

NOTE : MUST TIGHTEN SCREWS **PERIODICALLY** WITH USE SCREW WILL BECOME LOOSE CHECK TIGHTNESS OF ALL SCREW EVERY 6-8 WEEKS.