


**RF-P1WG15R-FM**

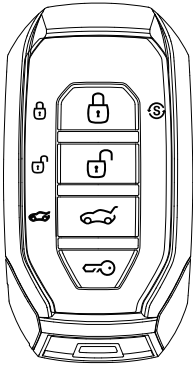

- 🔒 Tap the Lock Button to lock your doors and/or arm your vehicle. Hold this button for 3.5 seconds to activate panic/vehicle locator.
- 🔓 Tap the Unlock Button to unlock your doors and/or disarm your vehicle.
- 🚗 Hold this button for 2.5 seconds to pop your trunk. If not equipped, ask your Authorized Dealer for details on how to get it.
- 🚗 Hold this button for 2.5 seconds to start your vehicle. Your remote's LEDs will blink showing the remote start run time. Repeat and your vehicle will shut off.
- (🚗 + 🚗) Auxiliary 1: Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Trunk release button.
- (🚗 + 🚗) Auxiliary 2: Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Start button.
- (🔒 + 🚗) Tap these two buttons at the same time to turn Valet Mode off. Turn Ignition On and tap buttons to turn on. Hold them for 2.5 seconds to turn your FT-DAS or Shock Sensor on or off.
- (🔒 + 📢) Tap these two buttons at the same time to turn the horn or siren chirps on or off.
- (📢 + 🚗) Tap these two buttons to activate Timer Start Mode. Your system will start every 1.5 or 3 hours. Hold these two buttons for 2.5 seconds to activate 2nd Car Mode. Your LEDs will switch from amber to red. \*Red LEDs denote 2nd Car Mode.
- (📢 + 🚗) Hold these two buttons for 2.5seconds turns the silent mode on or off. If on, the Unlock and Trunk LED's will change to red. Repeat to turn silent mode off. The LED's will change to green.

### ALARM LED CODES

If you have an alarm and optional LED(s) installed, it will flash once a second if armed. If your alarm is triggered then the LED(s) will flash more than once until it is disarmed. See the table below for what each LED code represents.

ALARM TRIGGER EVENT	LED FLASHES
Door, Hood, Trunk, or Ignition On triggered	2, Pause, Then Repeat
Full triggered shock sensor	3, Pause, Then Repeat
Optional sensor triggered	4, Pause, Then Repeat
Panic Mode	5, Pause, Then Repeat

Valet Mode: If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, tap the Lock and Trunk buttons or turn the Ignition On and then tap the foot brake 10 times or reprogram your remote(s).

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

### START ERROR CODES

PARKING LIGHT FLASHES	REMOTE START ERROR
3 then 1	1: Motor running
3 then 2	2: Key in ignition on position
3 then 3	3: Door open (manual transmission only)
3 then 4	4: Trunk open
3 then 5	5: Foot brake on
3 then 6	6: Hood open
3 then 7	7: Reservation off (manual transmission only)
3 then 8	8: Tach or voltage sensing failure
3 then 9	9: FT-DAS sensor shutdown
3 then 10	10: System is in Valet Mode

Register online at [www.compustar.com](http://www.compustar.com) within 10 days of purchase to activate your new remote's warranty.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit [www.compustar.com](http://www.compustar.com) for a complete user's manual.