


**KitchenAid®**

**48" SMART COMMERCIAL-STYLE DUAL FUEL RANGE  
Includes Griddle**

**MODELS:**

KFDC558JAV00 (Matte Avocado)


# BURNER BOX AND GRIDDLE PARTS

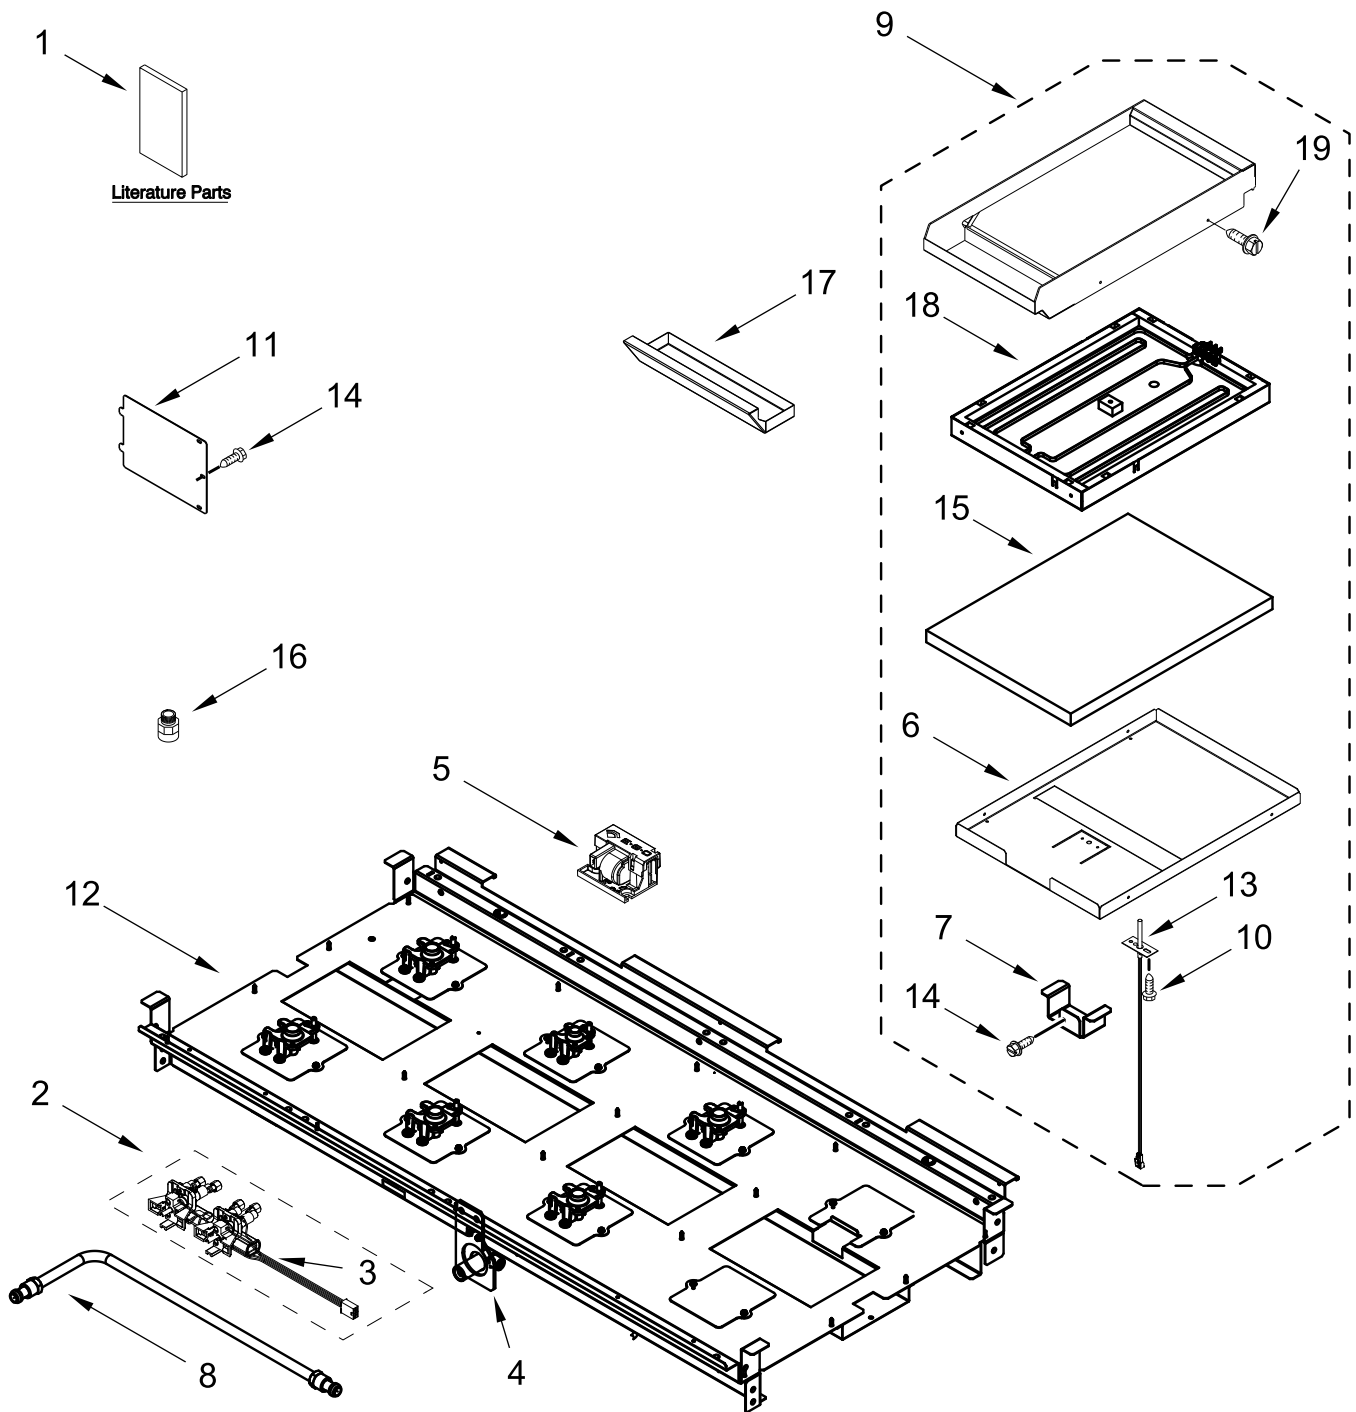

# BURNER BOX AND GRIDDLE PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	17	W10276497	Tray, Griddle Drip
	W11114331	Guide, Use And Care	4	W11121194	Bracket, Manifold	18	W10891698	Element, Griddle
	W11114334	Instructions, Installation	5	W11121317	Module, Spark	19	3196176	Screw
	W11184759	Guide, Internet Connectivity	6	W11330430	Tray, Griddle Insulation			FOLLOWING PARTS NOT ILLUSTRATED
	W11114332	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD	W11200302		Harness, Main (30")
	W11202393	Diagram, Wiring	8	W10892809	Tube, Manifold Supply (Left)	W11200311		Harness, Main (18")
	W11202387	Diagram, Wiring (Oven)		W10892804	Tube, Manifold Supply (Left Center)	W10903727		Harness, Griddle
	W11202289	Sheet, Tech		W10892805	Tube, Manifold Supply (Right Center)	W11200329		Harness, Cooktop
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)	9	W10891745	Assembly, Griddle Module	W10780278		Harness, Door Lock
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	10	3196160	Screw	W11200318		Harness, Communication
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	11	W10115843	Cover, Ignition	W11242785		Harness, WIFI
			12		Box, Burner (Not Serviced)	W11212216		Cord, Power
			13	W10891584	Sensor, Griddle	9759877		Retainer, Strain Relief
			14	7101P426-60	Screw	4450800		Screw, Grounding
			15	W11121383	Insulation, Griddle	W10253333		Bracket, Anti-Tip
			16	4453116	Adapter, Male	7101P485-60		Screw, Anti-Tip Kit
						W11238042		Kit, LP Conversion


# COOKTOP, BURNER AND GRATE PARTS

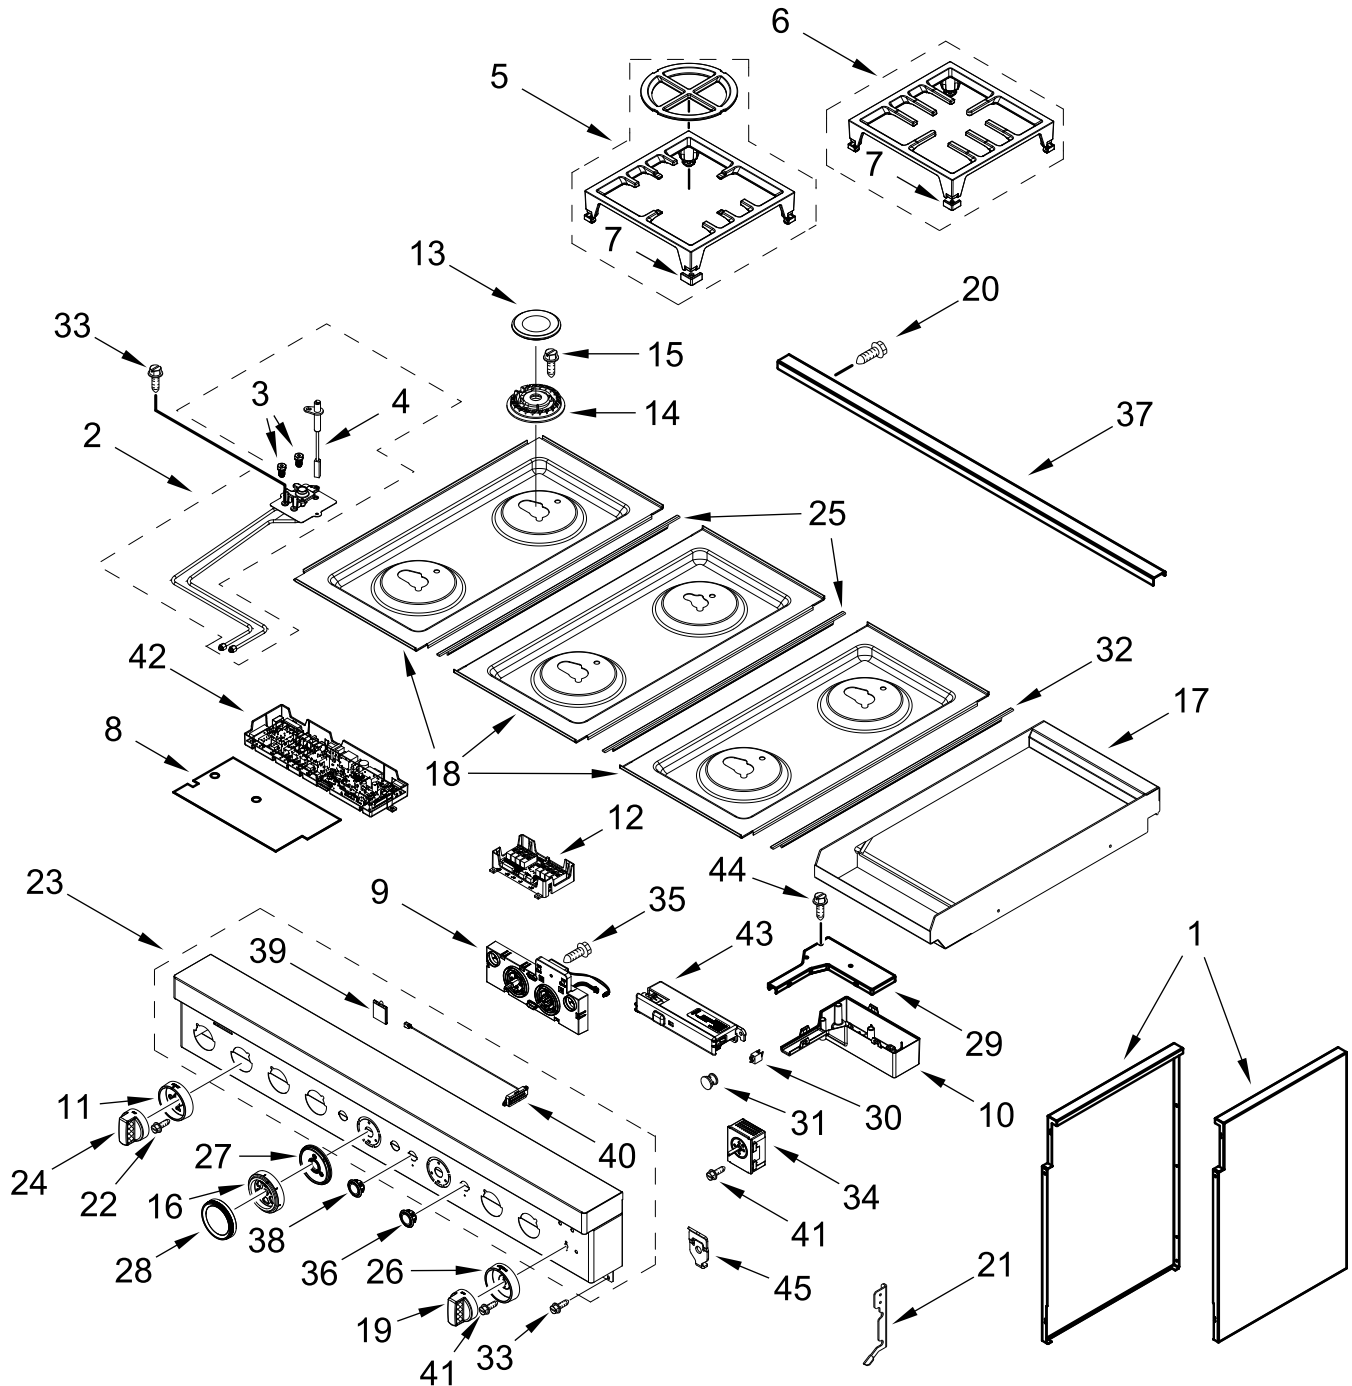

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	7	W11042504	Bumper, Grate	23	W10877951	Panel, Control
	W11111428	Panel, Cabinet Side (Right)	8	W11281269	Barrier, Appliance Manager	24		Knob, Burner
2	W10892793	Assembly, Orifice Holder (Left Front)	9	W11219193	Interface, User	W10912166		Stainless (Left Rear, Left Center Front, Right Center Rear)
	W10892492	Assembly, Orifice Holder (Left Rear)	10	W11205795	Cover, WIFI Outer	W10883172		Stainless (Left Front, Left Center Rear, Right Center Front)
	W11159461	Assembly, Orifice Holder (Left Center Front)	11	W10881642	Bezel (Front Burners)	25		Trim, T-Strip
	W10892808	Assembly, Orifice Holder (Left Center Rear)	12	W10883433	Bezel (Rear Burners)	W10271524		Black
	W10892505	Assembly, Orifice Holder (Right Center Front)	13	W11121390	Cap, Burner Black (Includes 6)	26	W10886700	Bezel, Griddle
	W10892446	Assembly, Orifice Holder (Right Center Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	27		Bezel, Oven
				W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)	W10913810		Stainless
				W10891978	Spreader, Flame (AUX) (Left Center Rear)	28		Knob, Oven Temperature
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)	15	W11323261	Screw (8-18 X 1")	31	W10294500	Lens, Indicator Light
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)		W11323309	Screw (8-18 X 1/2")	32	W10291193	Trim, L-Strip
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)	16		Knob, Oven Mode	33	7101P426-60	Screw
	W10892438	Orifice, Simmer (5K) (Left Center Rear)		W11249667	Stainless	34	W11033497	Control, Griddle
4	W11238757	Igniter (Left Front, Right Center Front)	17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	35	3400814	Screw
	W11114379	Igniter (Left Rear)				36	W11241510	Button Assembly, Oven Start
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)	18		Panel, Cooktop	37	W11156418	Trim, Island
				W11038235	Black (Left)	38	W11241511	Button Assembly, Oven Light
				W11038257	Black (Left Center)	39	W10896366	Assembly, Light Pipe
5	W11291183	Burner, Grate (With Wok Ring)		W11038243	Black (Right Center)	40	W11130078	Antenna, WIFI
				19	Knob, Griddle	41	W10674068	Screw
6	W11291179	Burner, Grate		W10912167	Stainless	42	W11100281	Manager, Appliance (Powermax)
				20	7101P338-60	43	W11110768	Assembly, WIFI Module
				21	W10130760	44	7101P624-60	Screw
					W10130759	45	W11036559	Spring Clip, Range
				22	W10919387			


# 48" CHASSIS PARTS

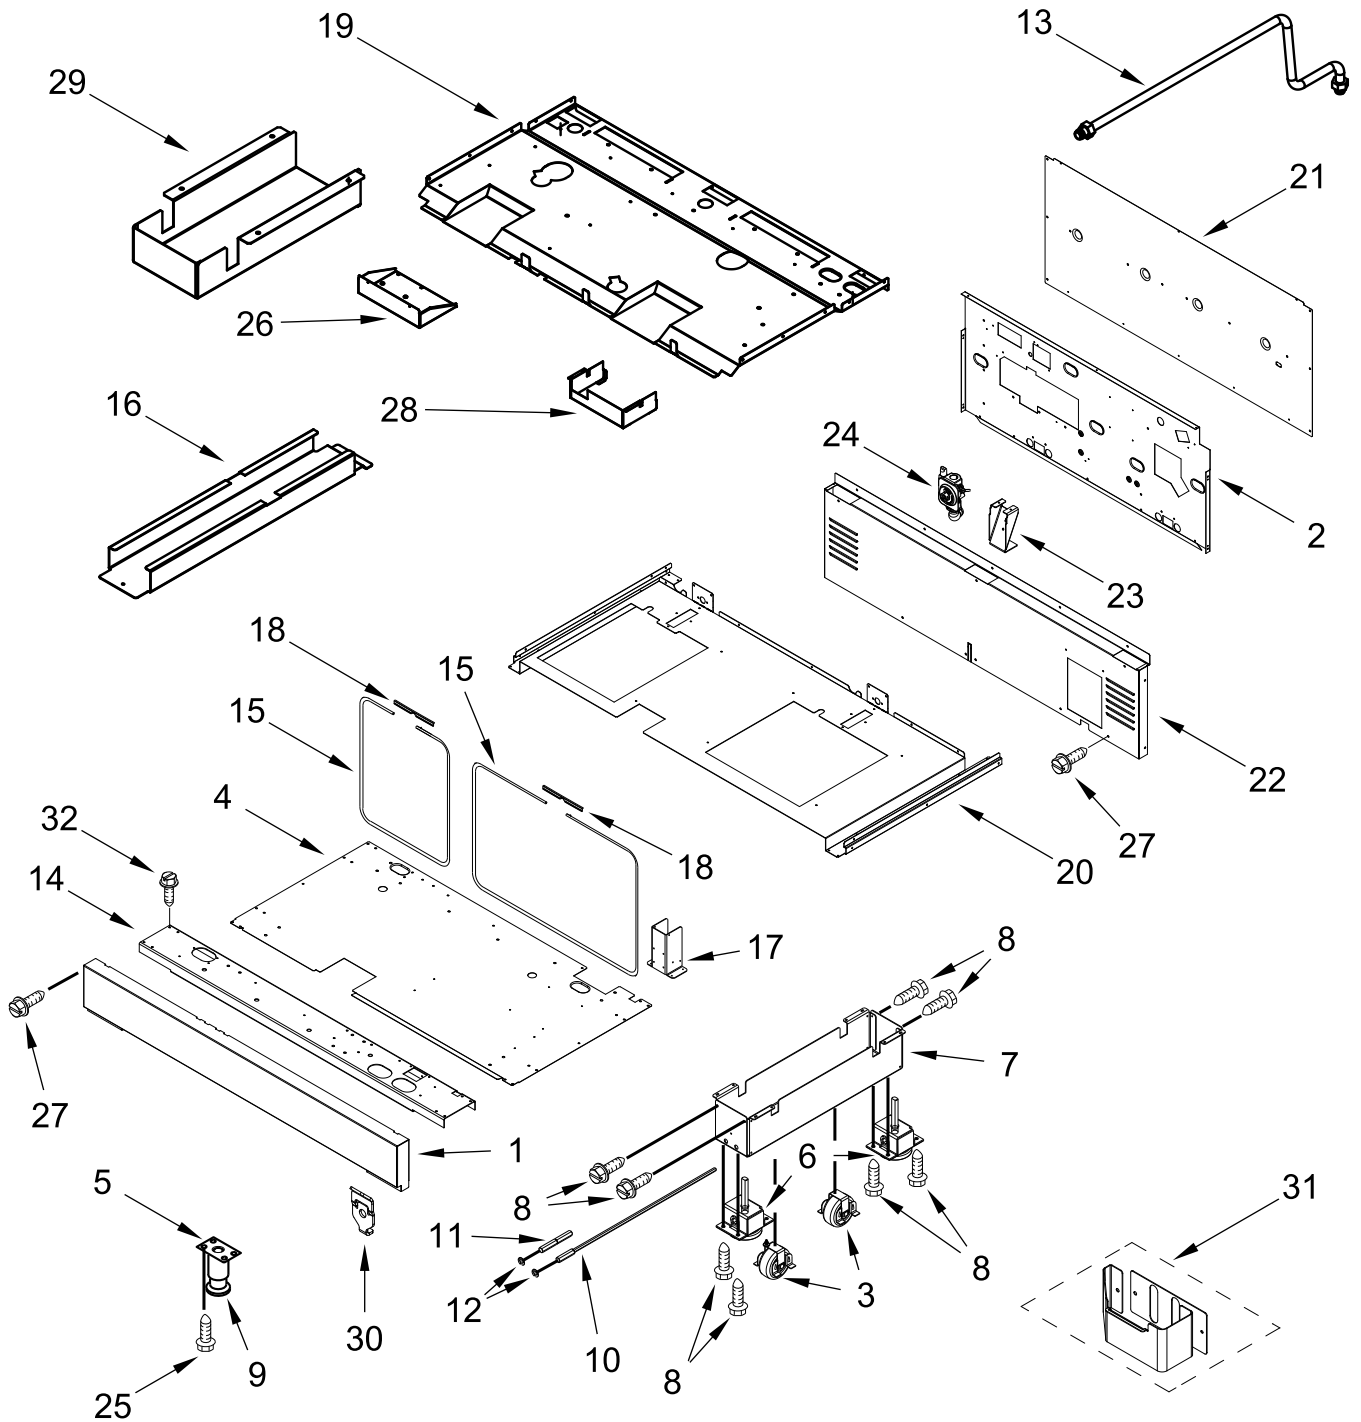

# 48" CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394822	Kickplate	14	W11369238	Support, Channel	24	W10449140	Regulator, Pressure
2	W11324987	Back, Chassis	15	W11115328	Gasket, Oven (30")	25	3400518	Screw
3	W10138054	Assembly, Roller		W11115326	Gasket, Oven (18")	26	W11106341	Drawer, Appliance Manager
4	W11110260	Duct, Bottom (48")	16	W11050145	Duct-Chassis, Rear	27	7101P426-60	Screw
5	9759118	Plate, Mounting	17	W10115819	Column, Central	28	W11369237	Cabinet, Appliance Manager
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9" Long)	29	W11368831	Channel, Wire
7	W10908710	Base, Leveling Leg	19	W11324984	Top, Chassis	30	W11036559	Spring Clip, Range
8	4449743	Screw	20	W11040800	Chassis, Bottom	31	W11199181	Cover, Foot (Left)
9	9759117	Foot, Dual Fuel	21	W11103335	Panel, Back Top		W11199178	Cover, Foot (Right)
10	W10115869	Shaft, Long	22	W11034123	Panel, Back Bottom	32	3196560	Screw
11	W10115793	Shaft, Short	23	W11096823	Bracket, Pressure Regulator			
12	489504	E-Ring						
13	W11106963	Tube, Pressure Regulator						

# 30" OVEN PARTS

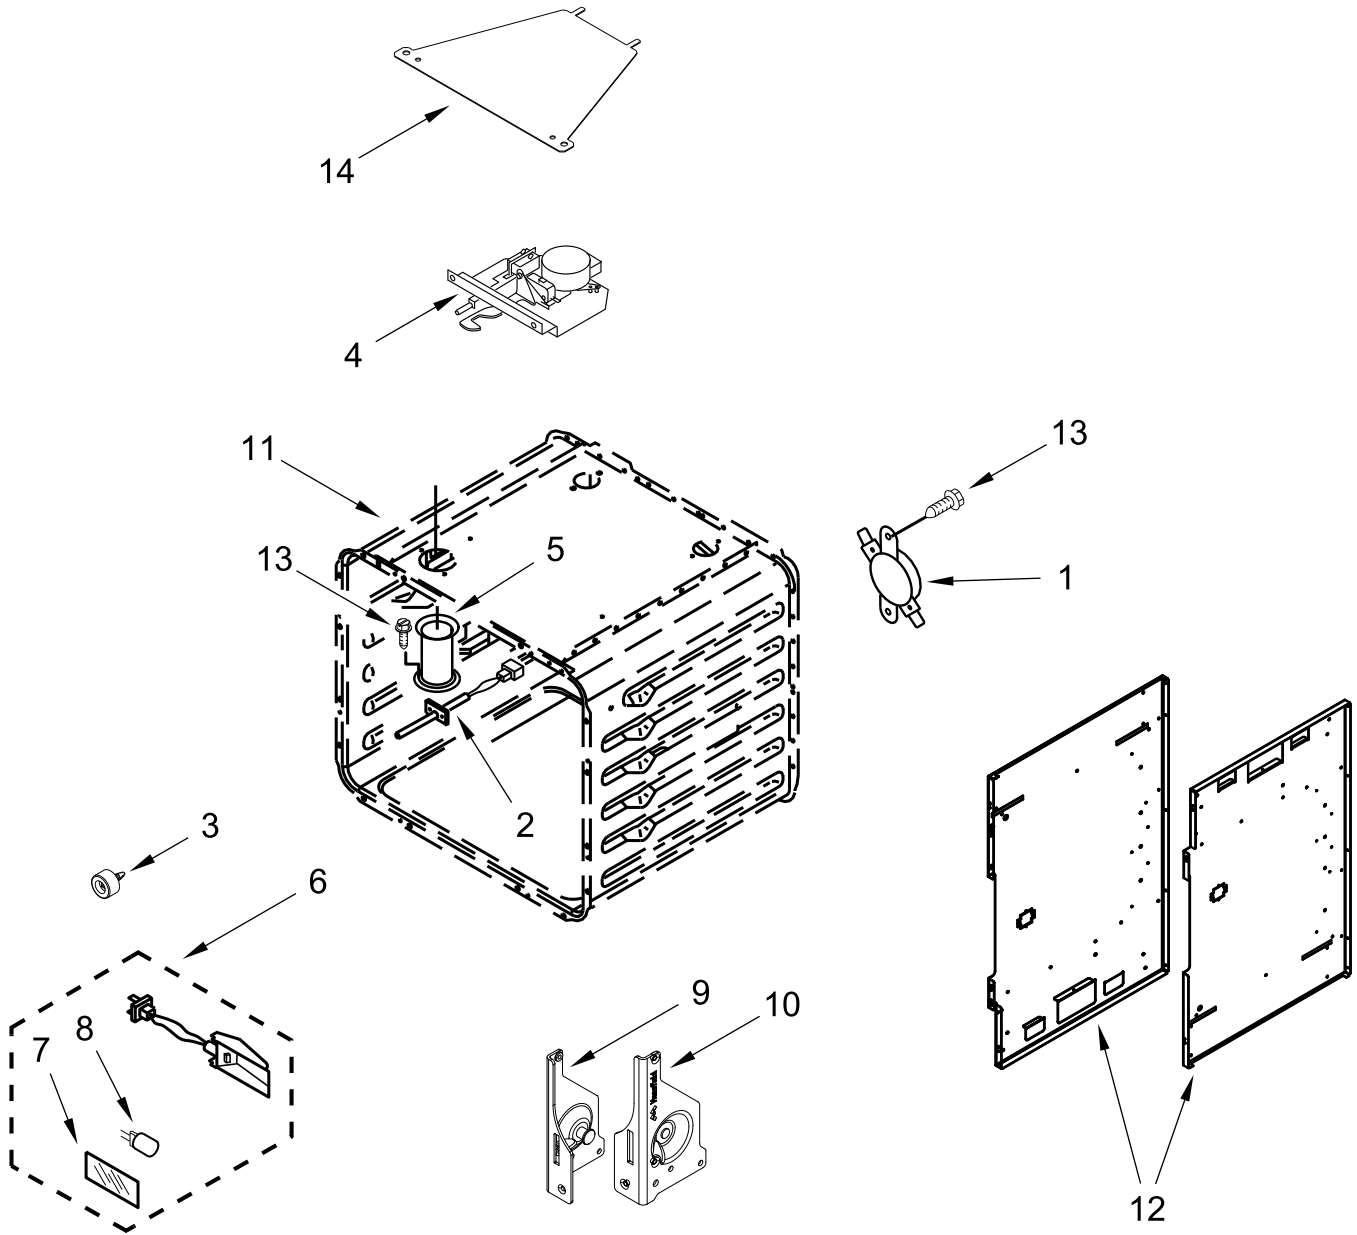




# 30" OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	10	W11096293	Receiver, Hinge (Right)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	11		Liner, Oven (Not Serviced)		W10282810	Insulation, Wrap, 30"
4	W10830016	Latch, Motorized	12	W11102297	Chassis, Side (Left)		W10282818	Insulation, Back, 30"
5	W11290663	Tube, Vent		W11102296	Chassis, Side (Right)		3400968	Nut
6	W11223932	Assembly, Oven Light	13	7101P426-60	Screw			
7	W10169756	Lens, Light						
8	W10169757	Bulb, Light						
9	W11096294	Receiver, Hinge (Left)						


# 18" OVEN PARTS

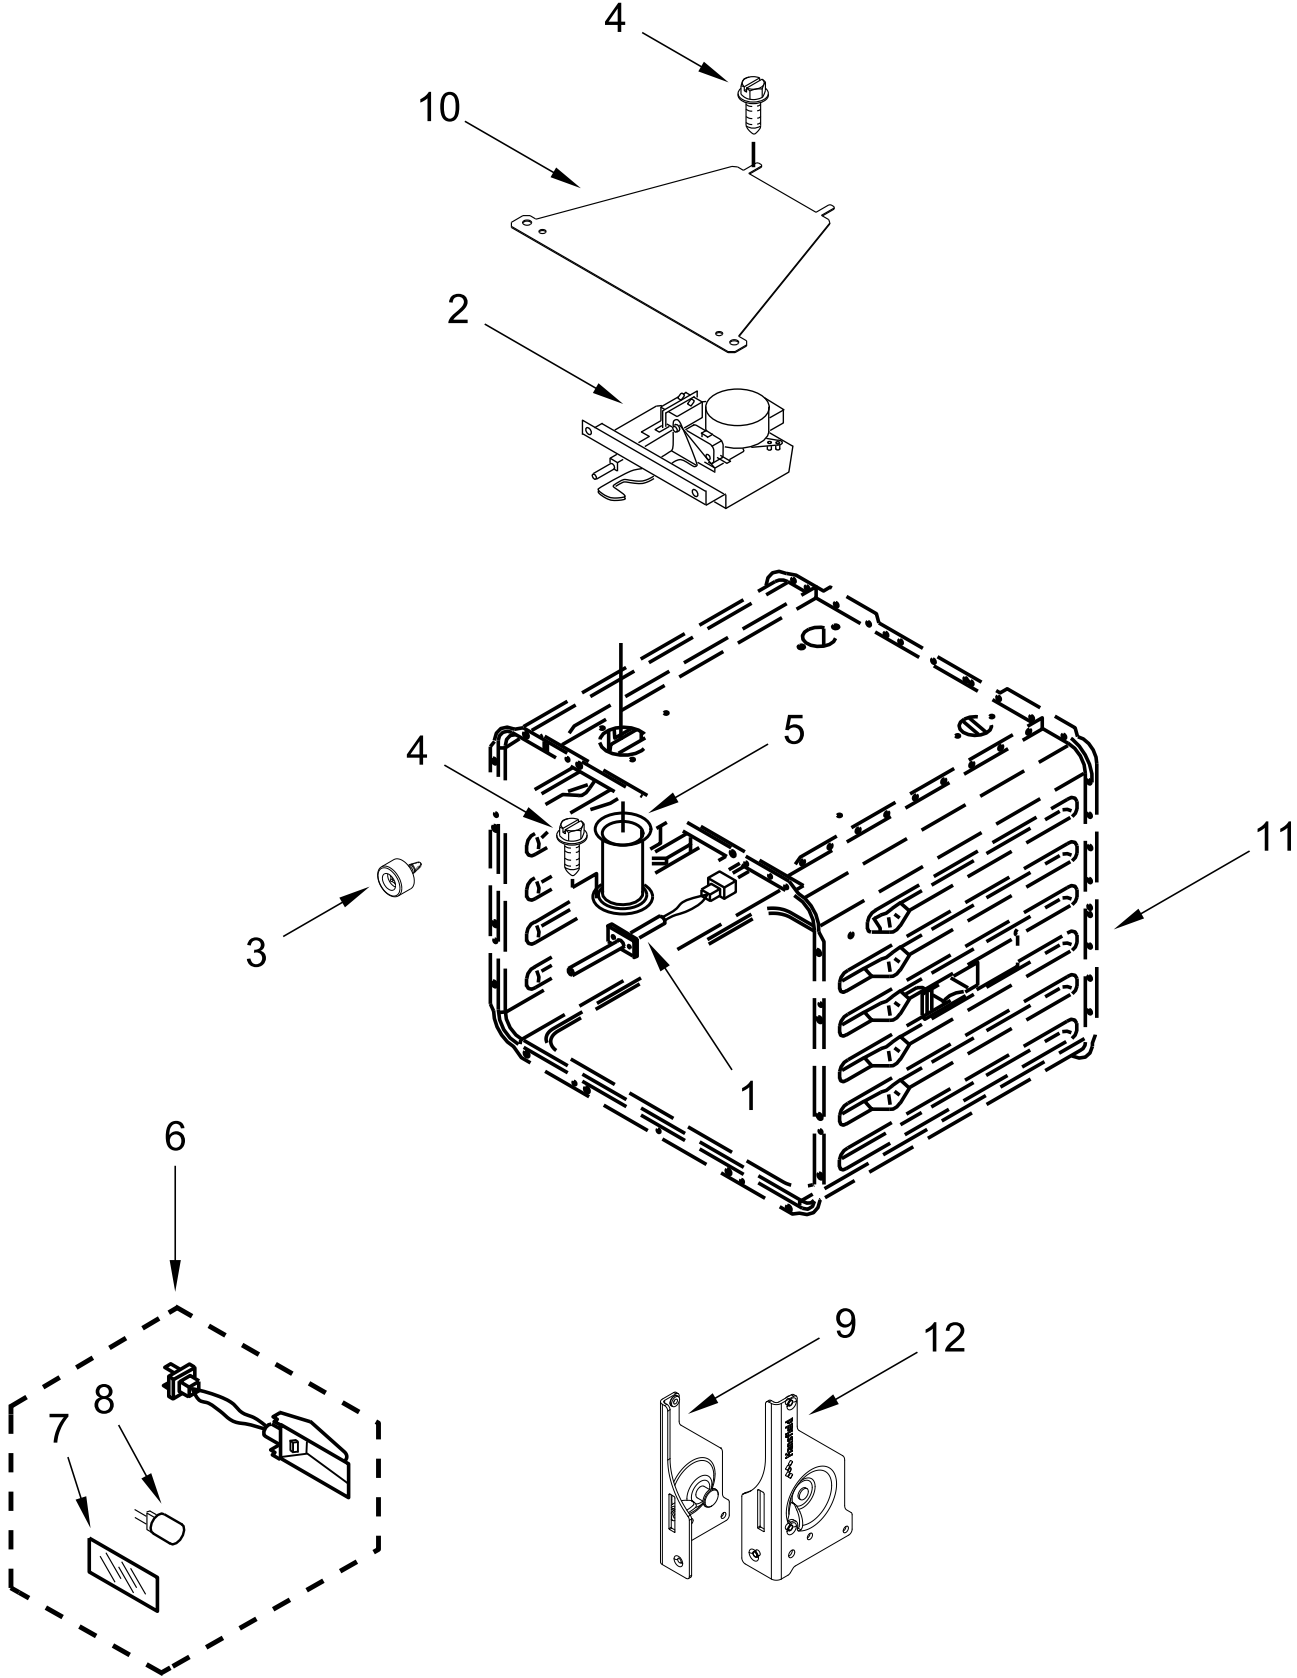

# 18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	8	W10169757	Bulb, Light	12	W11096293	Receiver, Hinge (Right)
2	W10830016	Latch, Motorized	9	W11096294	Receiver, Hinge (Left)			
3	W10351278	Bumper & Screw	10	W10160858	Cover, Latch			FOLLOWING PARTS NOT ILLUSTRATED
4	7101P426-60	Screw	11		Liner, Oven (Not Serviced)			
5	W10288078	Tube, Vent					W10282820	Insulation, Wrap, 18"
6	W11223932	Assembly, Oven Light					W10282812	Insulation, Back, 18"
7	W10169756	Lens, Light					3400968	Nut


# VENTING PARTS

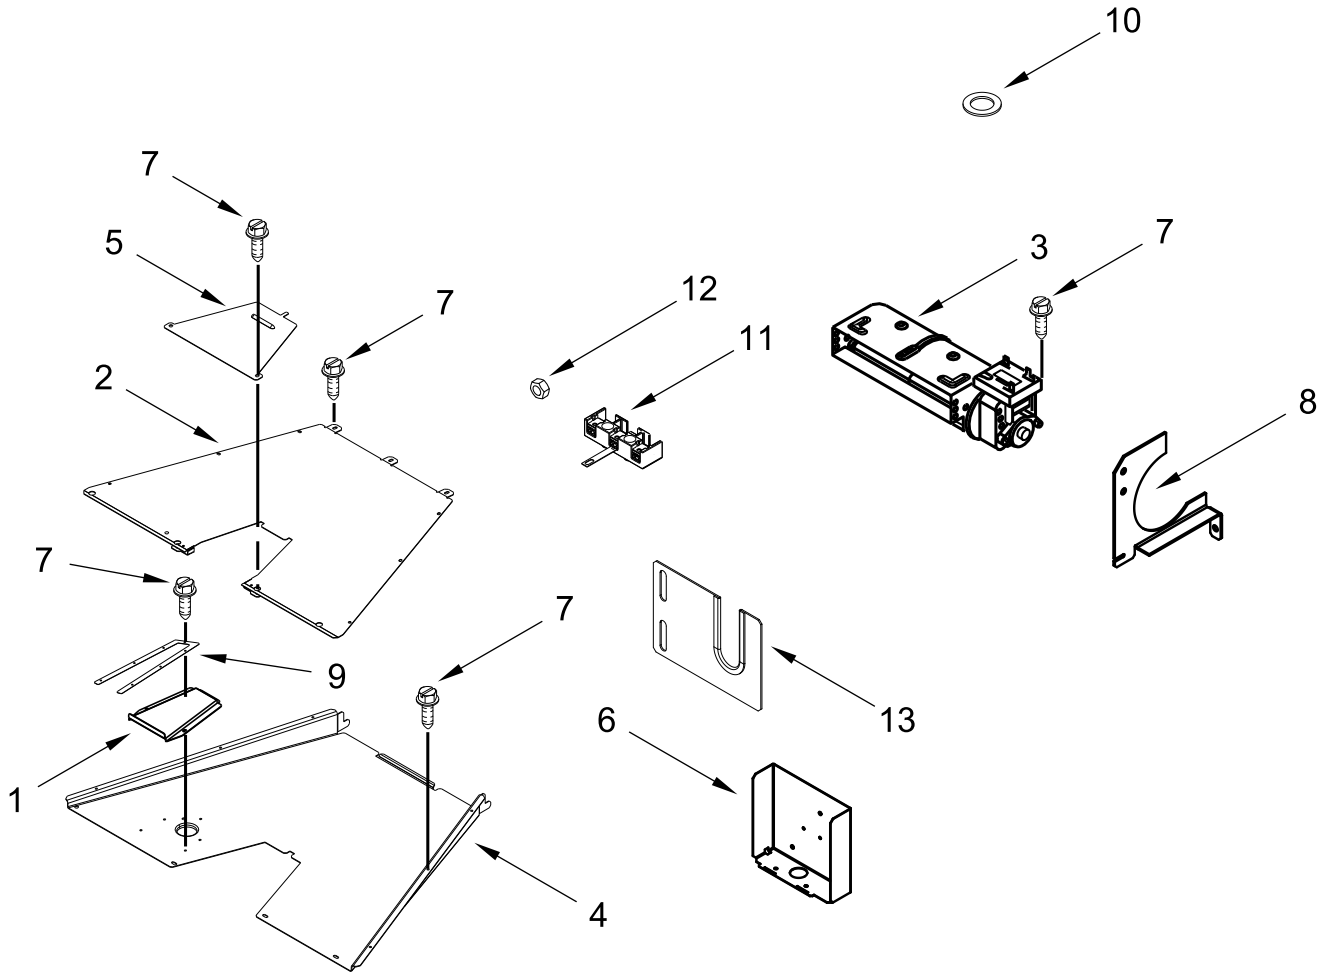

# VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")
	W10818235	Slope, Exhaust Vent (18")		W11113378	Vent, Cooling Bottom (18")		W10270402	Seal, Vent Slope (18")
2	W11105223	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney
	W11113380	Vent, Cooling Top (18")	6	W11353392	Box, Terminal	11	9761958	Block, Terminal
3	W11200129	Blower	7	7101P426-60	Screw	12	112432	Nut, Hex
			8	W11047754	Bracket, Blower Mount	13	W11106956	Cover, Channel


# 30" OVEN DOOR PARTS

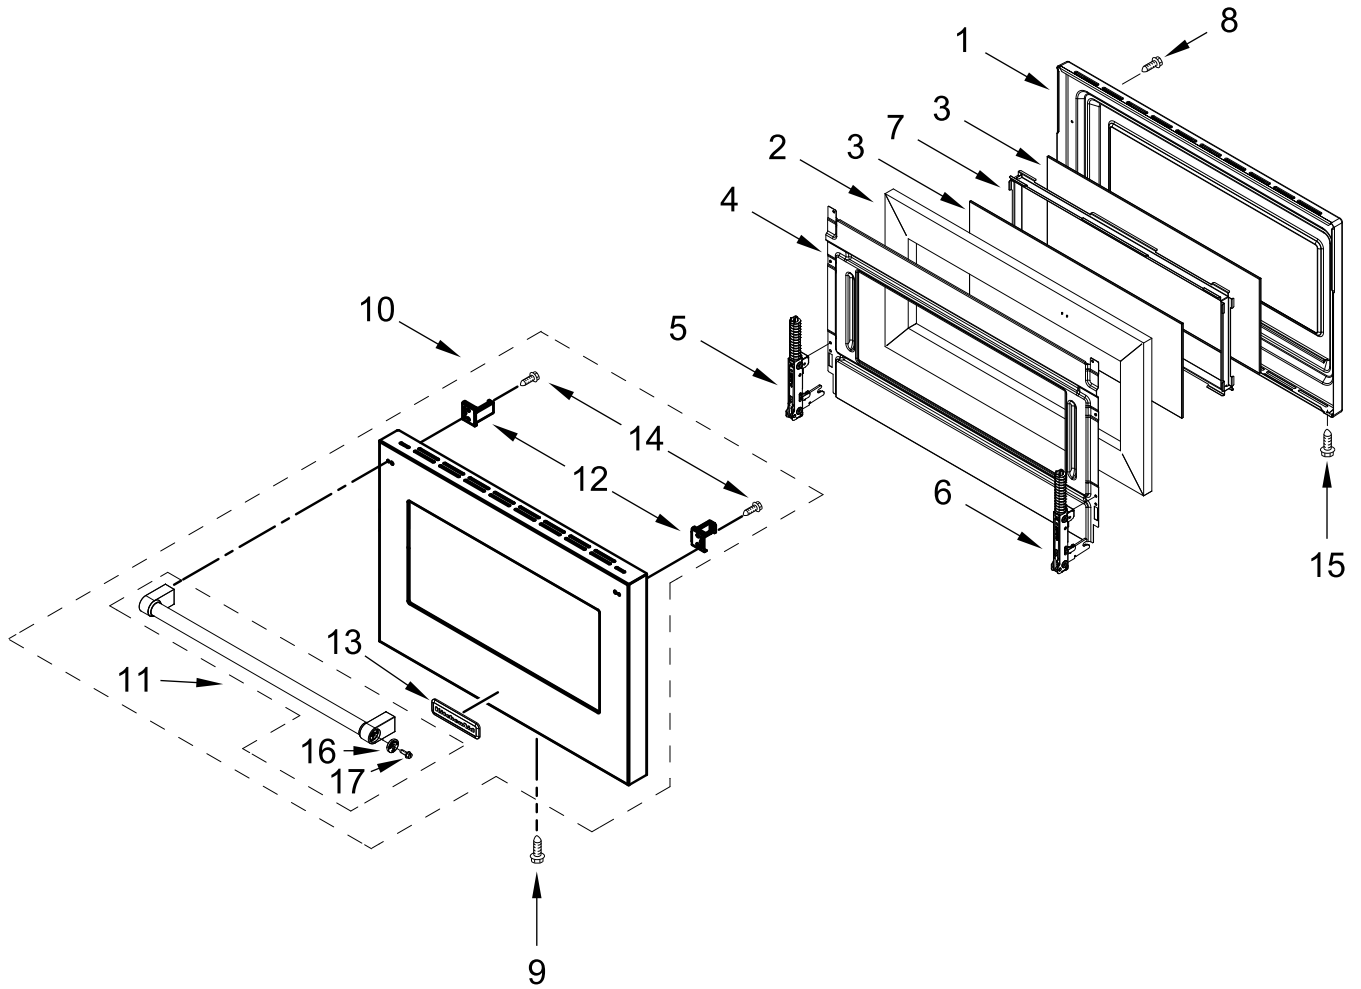

# 30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10898280	Screw	14	W10276043	Screw
2	W10321285	Insulation, Door	9	W10162096	Screw	15	W10607120	Screw
3	W11184409	Glass, Inner	10	W11389303	Assembly, Outer Door (Includes Handle)	16	W11221410	Medallion, Handle
4	W11194821	Retainer, Glass	11	W11221412	Assembly, Door Handle	17	W10656499	Screw
5	W11390105	Hinge, Door (Left)	12	W11197830	Bracket, Handle			
6	W11390124	Hinge, Dual (Right)	13	W10518672	Badge			
7	W10272594	Frame, Glass						

# 18" OVEN DOOR PARTS

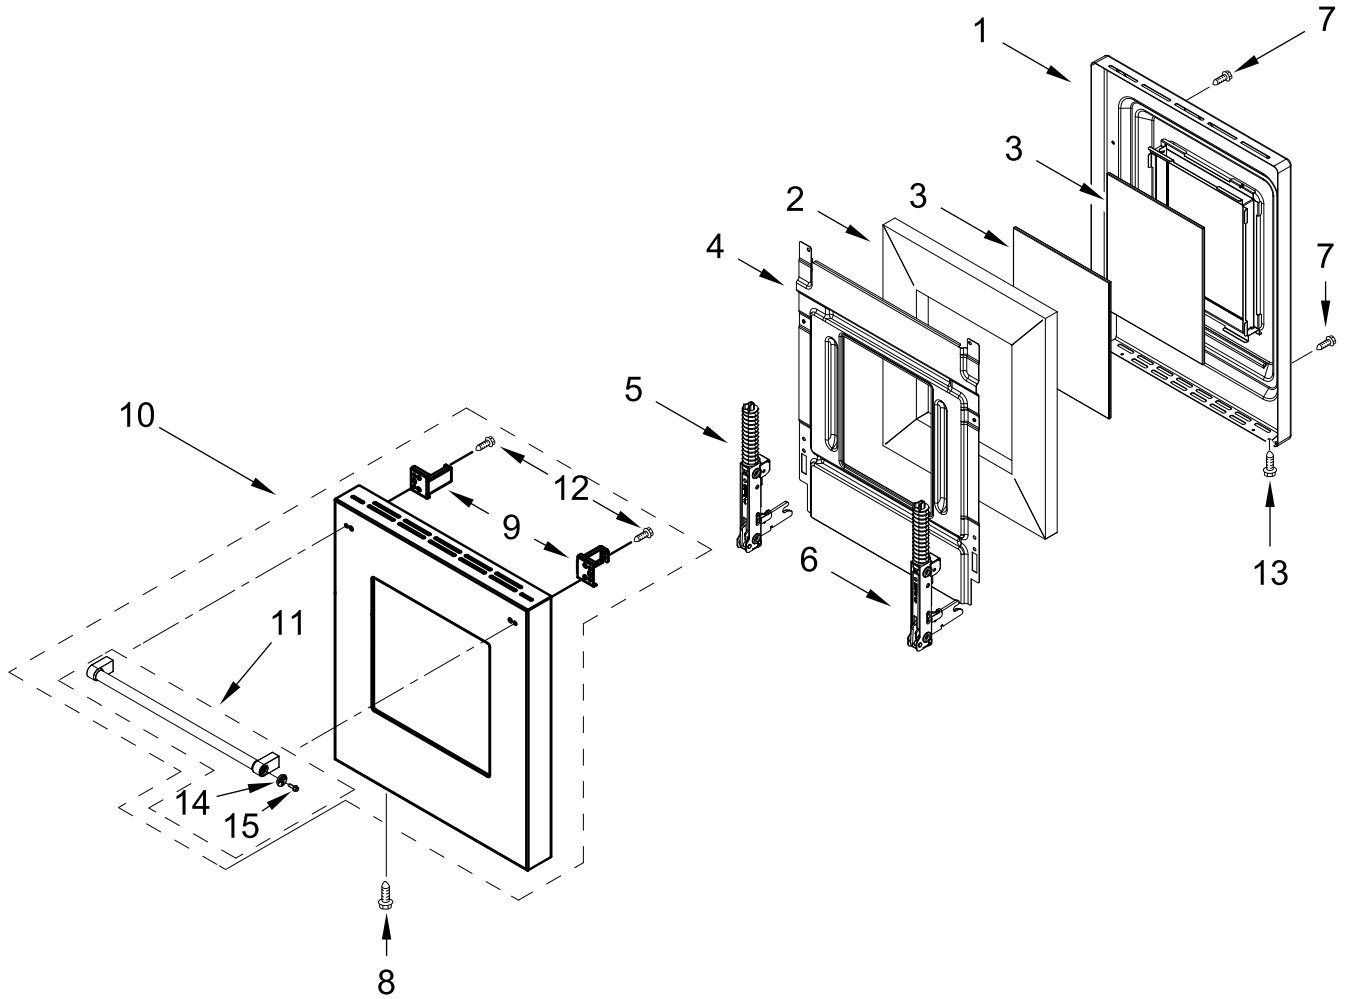




# 18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	14	W11221410	Medallion, Handle
4	W11194818	Retainer, Glass	10	W11389278	Assembly, Outer Door (Includes Handle)	15	W10656499	Screw
5	W11390106	Hinge, Door (Left)	11	W11221413	Handle, Door			
6	W11390125	Hinge, Door (Right)						


# 30" INTERNAL OVEN PARTS

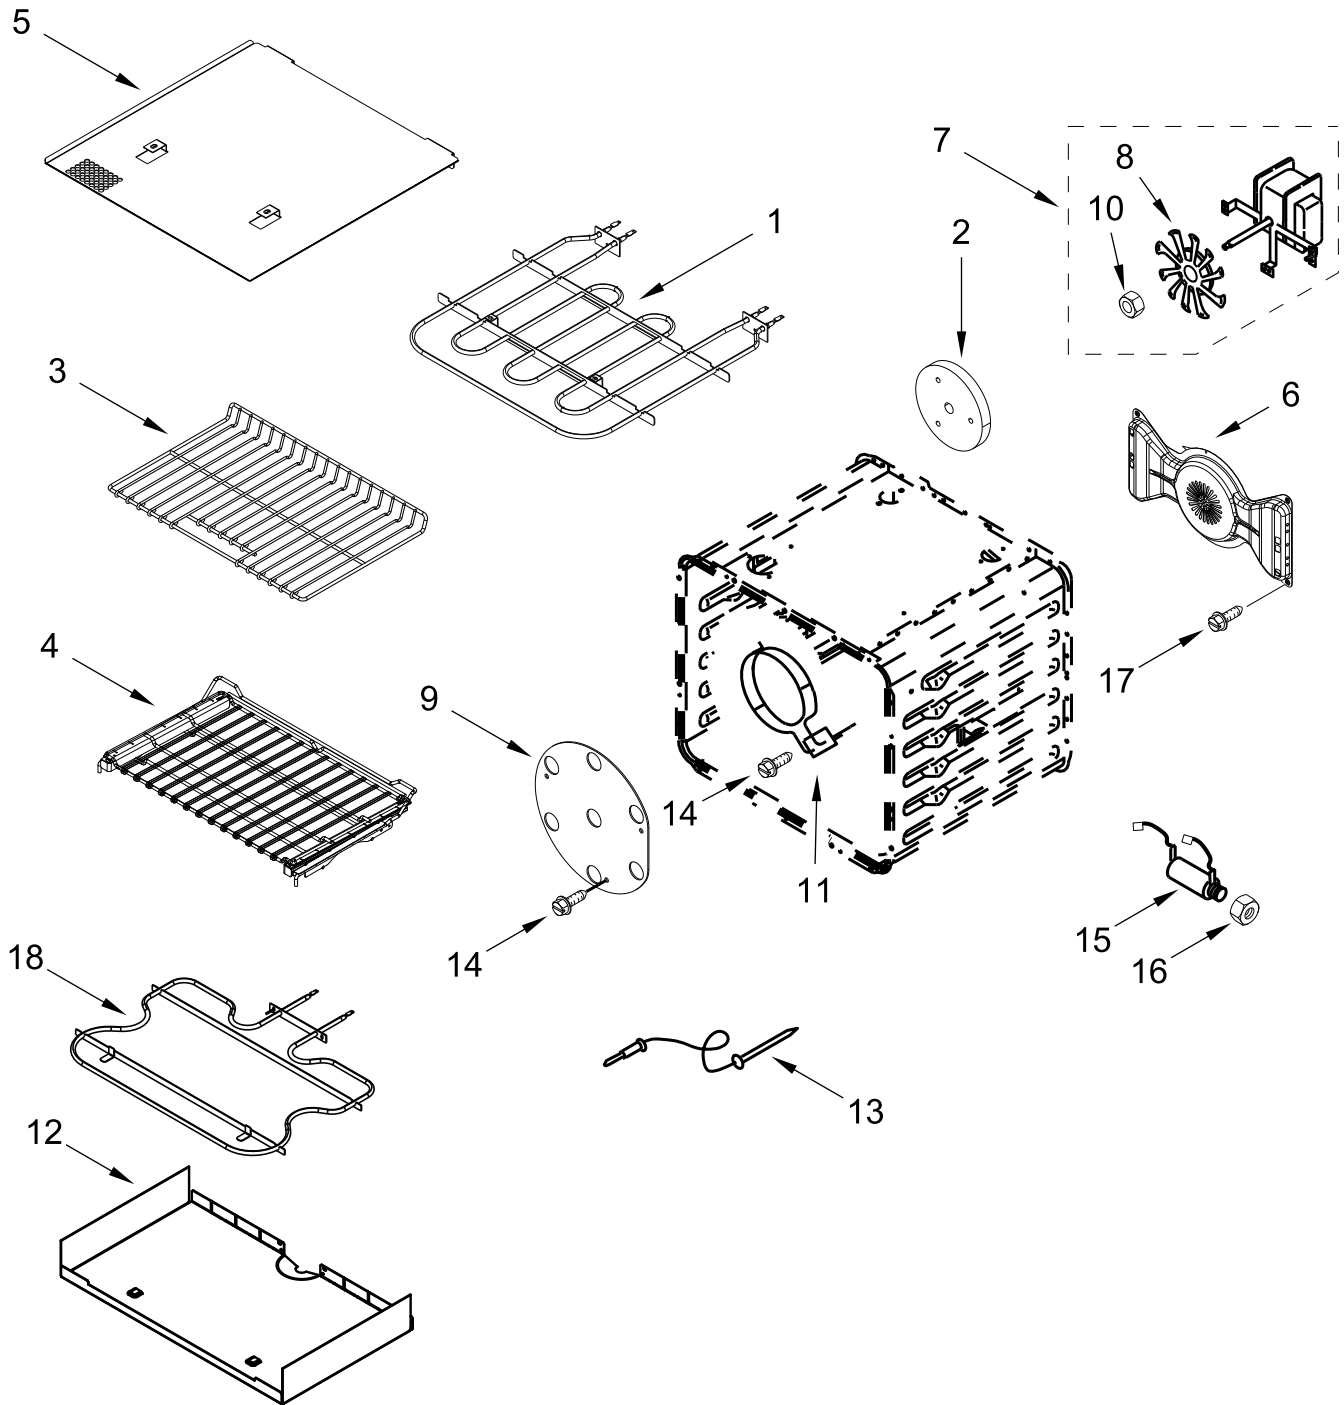

# 30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	8	W10631503	Blade, Fan	15	9755543	Jack, Meat Probe
2	W10282821	Insulation, Convection Cover	9	W10261523	Plate, Fan	16	W11033111	Nut, Locking
3	W10570887	Rack, Oven	10	W10631504	Nut, Acorn (LH)	17	W10739592	Screw
4	W11108461	Rack, Oven (Sliding)	11	9762242	Element, Convection Steam	18	W10115995	Element, Hidden Bake
5	W10160856	Shield, Element Broil	12	W11109421	Tray, Hidden Bake			
6	W11212180	Baffle, Convection	13	9755542	Probe, Temperature			
7	W10722667	Fan, Convection	14	4449154	Screw			

# 18" INTERNAL OVEN PARTS

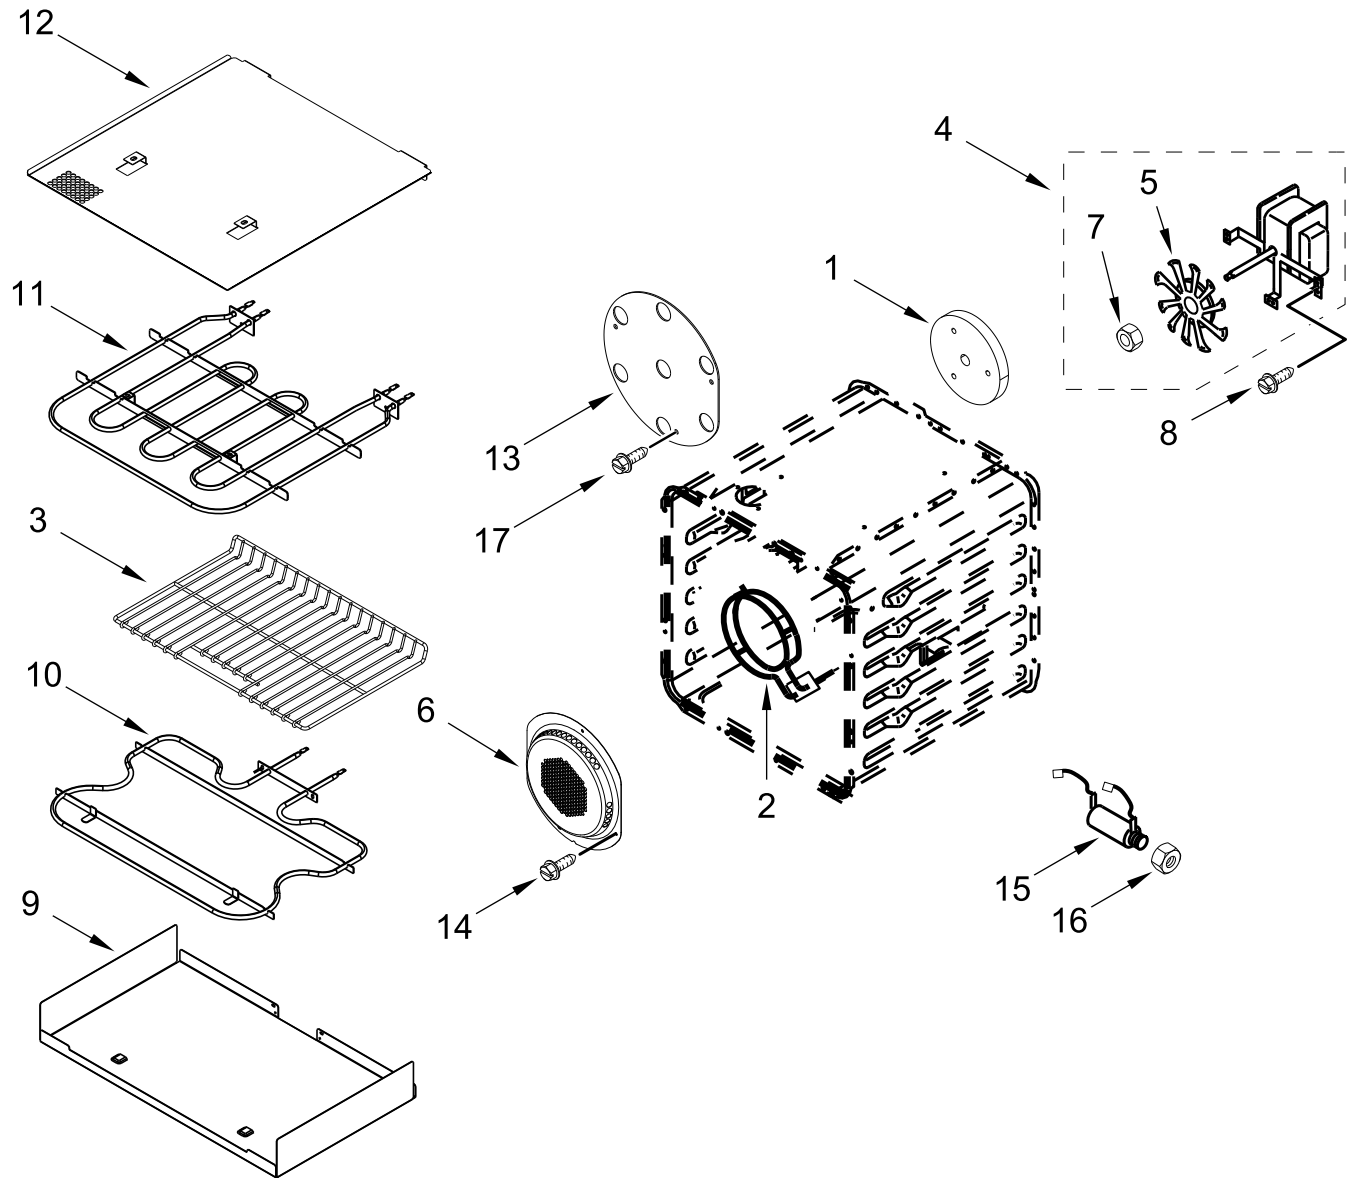

# 18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	7	W10631504	Nut, Acorn (LH)	14	W10739592	Screw
			8	4449154	Screw	15	9755543	Jack, Meat Probe
2	9762242	Element, Convection Steam	9	W11110223	Tray, Hidden Bake	16	W11033111	Nut, Locking
			10	W11045324	Element, Hidden Bake	17	W10720084	Screw
3	W10570879	Rack, Oven (18")	11	W10116010	Element, Broil			
4	W10722667	Fan, Convection	12	W10160855	Shield, Element Broil			
5	W10631503	Blade, Fan	13	W10261523	Plate, Fan			
6	W11211948	Cover, Fan						

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude  Medallion, Handle
	W11368841SI	Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841BN	Bronze
	W11368841DD	Dark Blue