 


Pantry

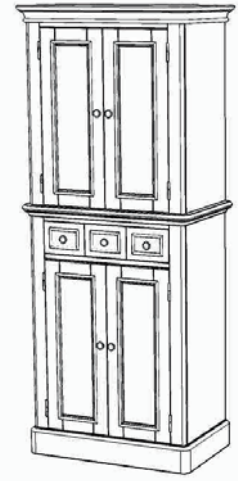

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

 
Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.


Part List



B.
Side Panel
1 pc.



 C.
Side Panel
1 pc.



D.
Side Panel
1 pc.



E.
Side Panel
1 pc.



 
F.
Upright
1 pc.



G.
Upright
1 pc.



H.
Back Panel
2 pcs.

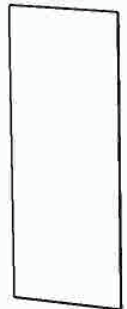


I.
Back Panel
2 pcs.



J.
Front Rail
3 pcs.



 
K.
Stretcher
4 pcs.

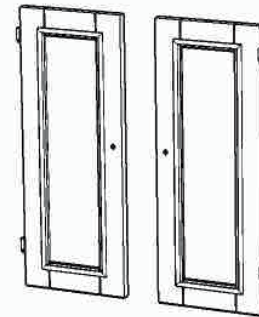

O.
Door
2 pcs.

P.
Door
2 pcs.

 Hardware List

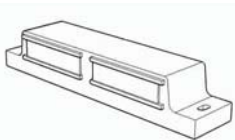

Magnet
2 pcs.



M3x15
Wood Screw
4 pcs. (+1 extra)



M3x30
Wood Screw (long)
6 pcs. (+1 extra)



 
M3x16
Wood Screw
for stretcher
4 pcs. (+1 extra)



Adjustable Pin
16 pcs. (+1 extra)



M4x25
Machine Screw
7 pcs.

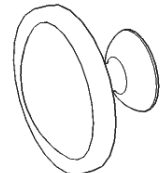

Knob
7 pcs.

Carton 88 5170 691 is also needed for assembly.

Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/7

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- The unit must be level to work properly. Use the included adjustable levelers to level.

STEP 1

Attach Stretcher (K) to Side Panel (B), then flip the lock. (See Figures 1 and 2)

Attach Back Panels (H), Upright (F) and Stretcher (K) to unit, then flip the lock.

Attach Magnet to Front Rail (J) at the pre-drilled holes with Wood Screws. (See Figure 3)

Attach Front Rail (J) to unit with Wood Screw (long).

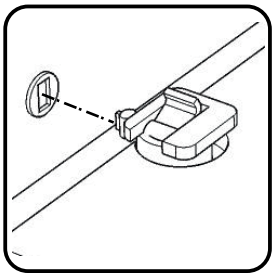 
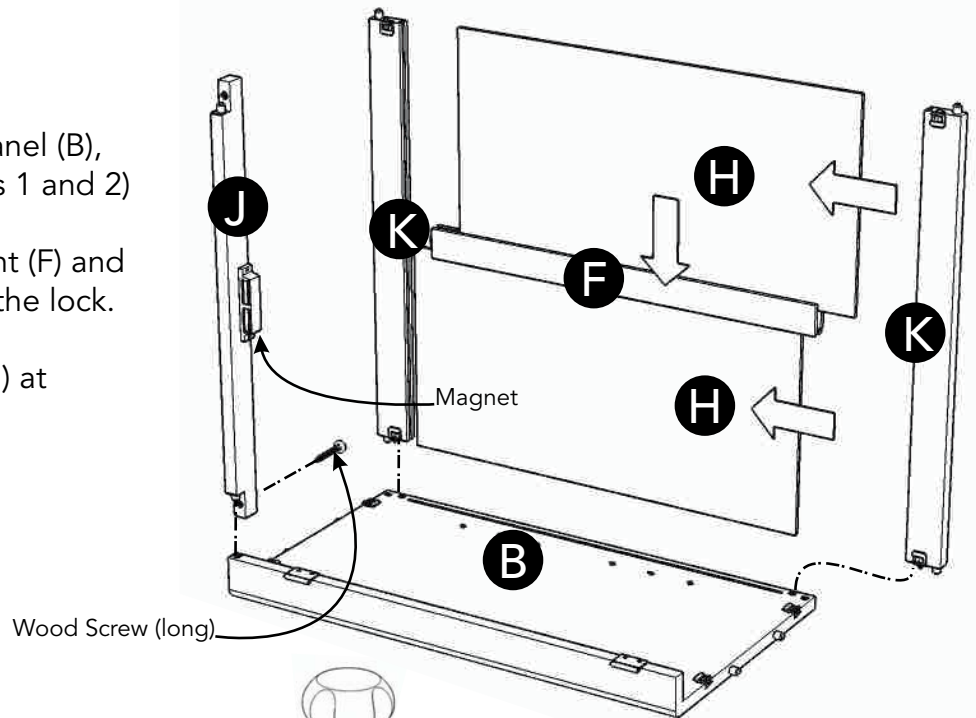 


Figure 1

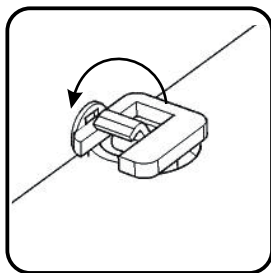 


Figure 2


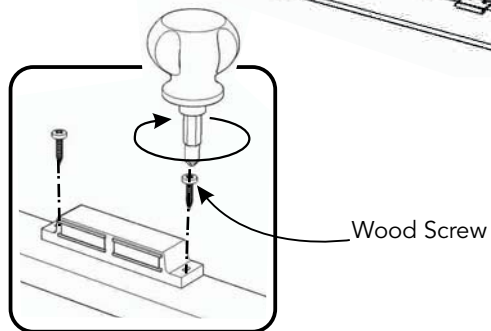 


Figure 3

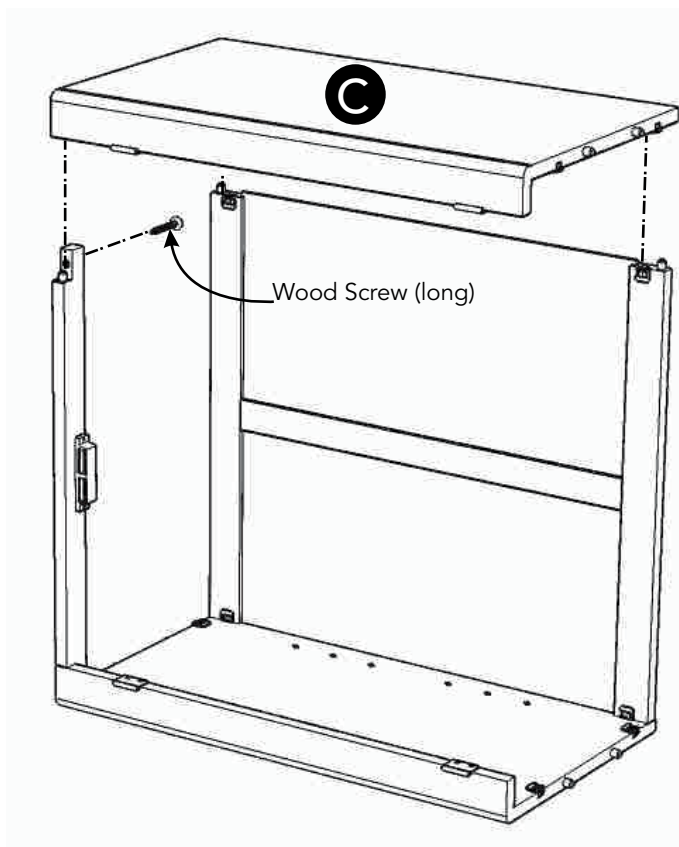 

STEP 2

 
 
Attach Side Panel (C) to unit with Wood Screw (long) and flip the locks.

Assembly Instructions 3/7

STEP 3

Turn unit to its' upright position.

Attach Top (A) to unit, then flip the locks.

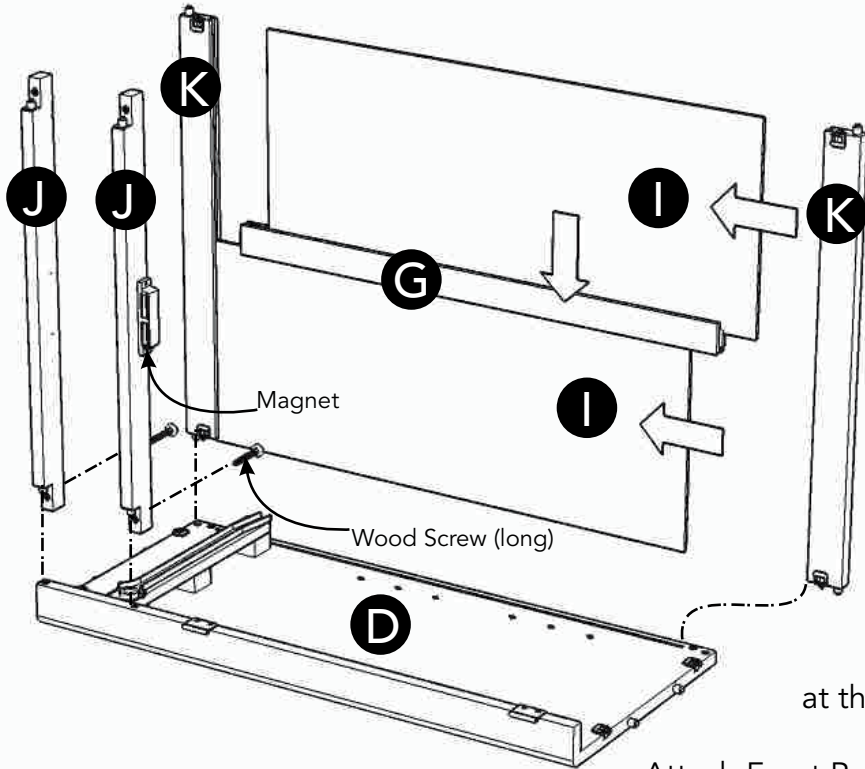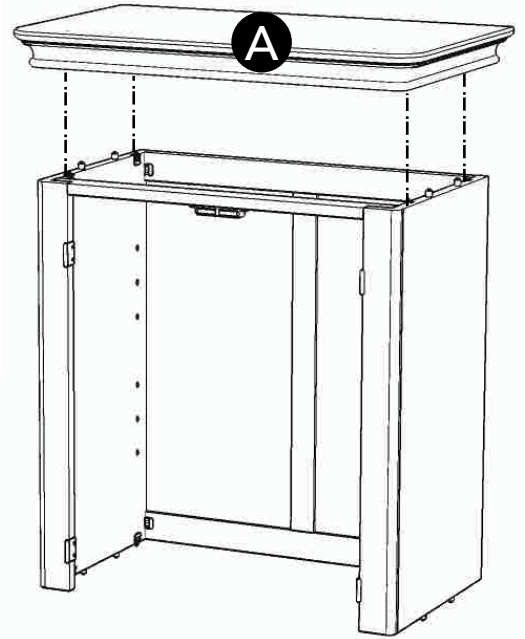

STEP 4

Attach Stretcher (K) to Side Panel (D), then flip the lock.

 
Attach Back Panels (I), Upright (G) and Stretcher (K) to unit, then flip the lock.

 
Attach Magnet to Front Rail (J) at the pre-drilled holes with Wood Screws.

Attach Front Rails (J) to unit with Wood Screws (long).

STEP 5

Attach Side Panel (E) to unit with Wood Screws (long) and flip the locks.

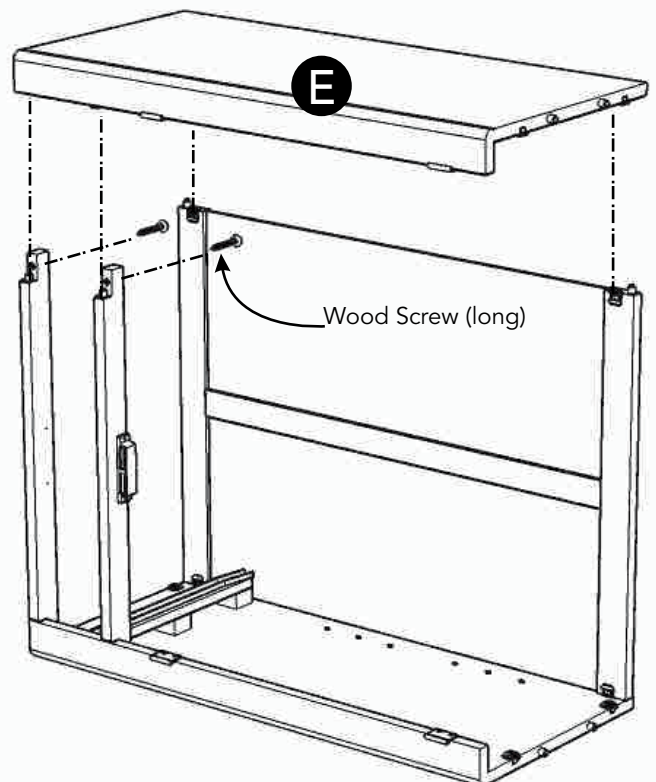

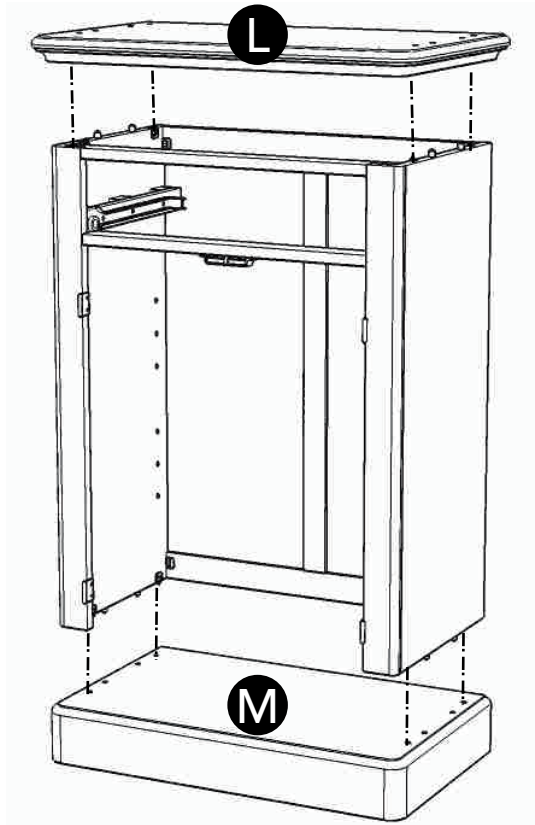

STEP 6

Attach unit to Base (M), then flip the locks.

Attach Top (L) to unit, then flip the locks.

STEP 7

Attach unit from Step 3 to unit from Step 6, then flip the locks.

Insert Adjustable Pins into side panels at the desired level. (See Figure 4)

Slide Shelves (N) into position.


 
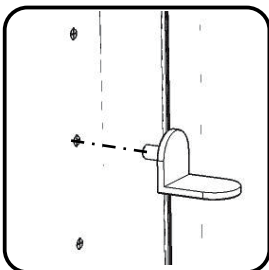 


Figure 4

Assembly Instructions 5/7

 Drawer (Q)

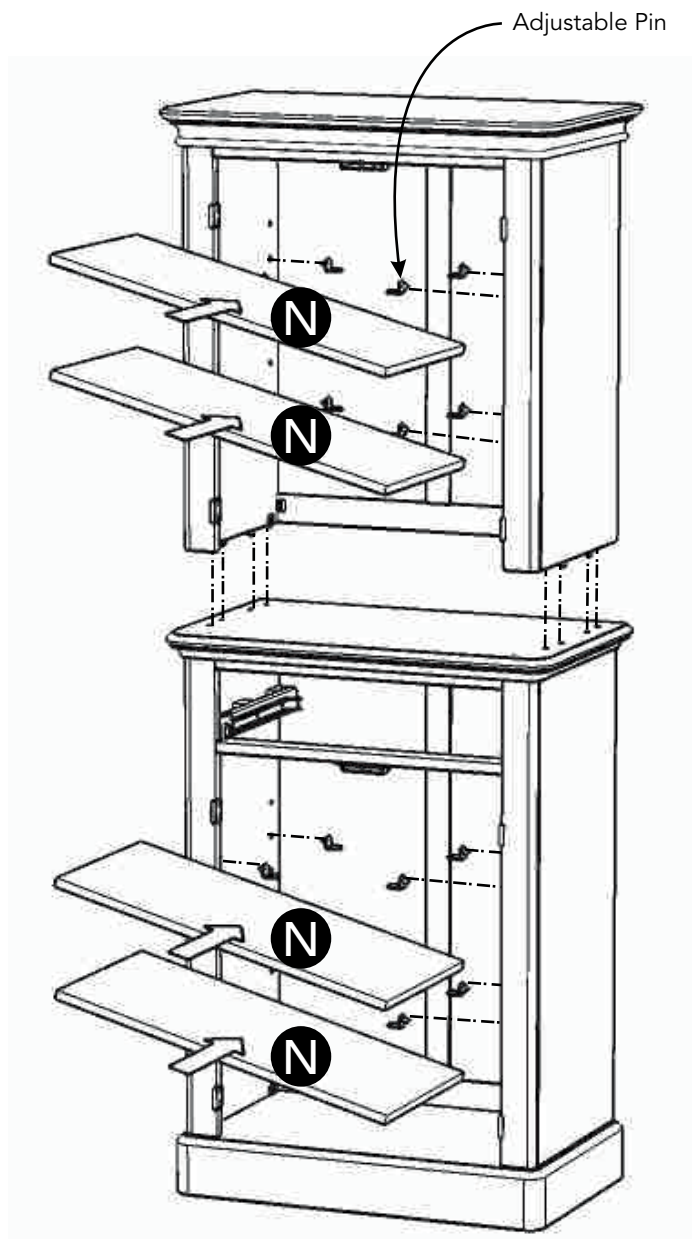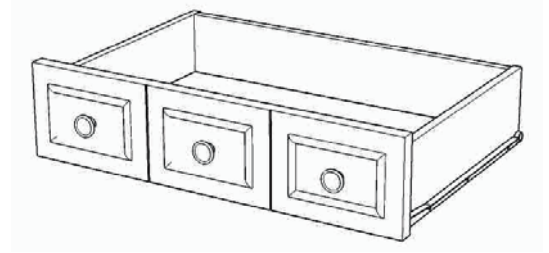

STEP 8

Attach Drawer Sides (Q3) and (Q4) to Drawer Back (Q2), then flip the locks. (See Figures 5 and 6)

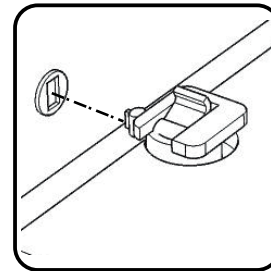 
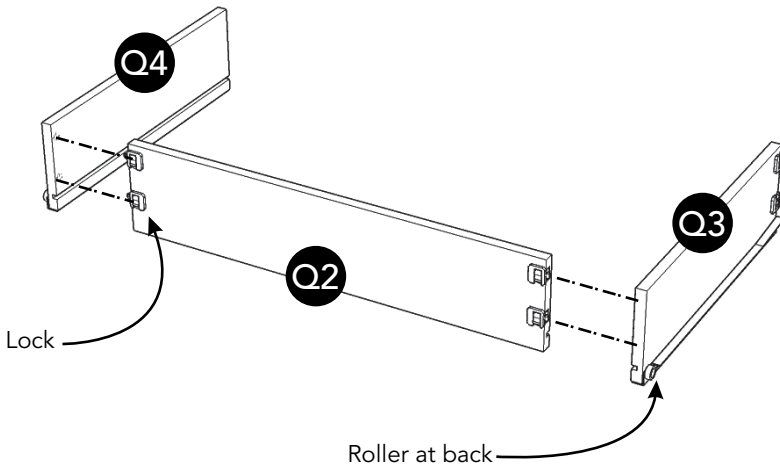 


Figure 5

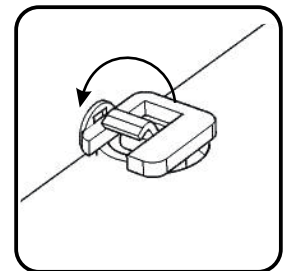 



Figure 6

STEP 9

Slide Drawer Bottom (Q5) into the grooves in Drawer Sides (Q3) and (Q4).


Push Drawer Bottom (Q5) all the way into Drawer Back (Q2).

 Attach Drawer Front (Q1) to unit, then flip the locks.

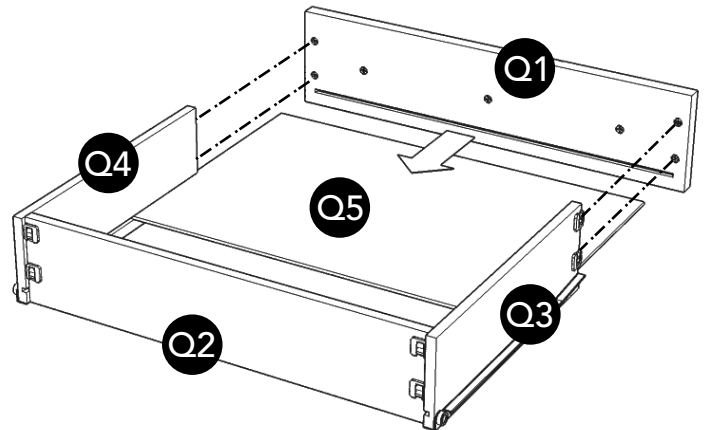


STEP 10

 Attach Knobs with Machine Screws.

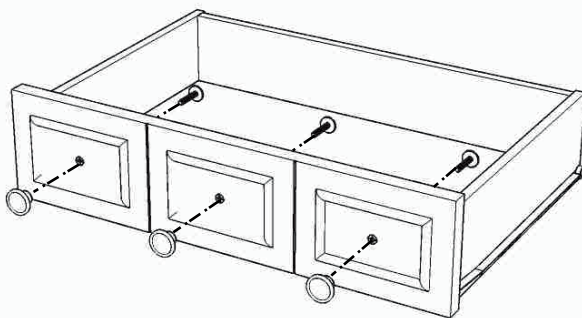


Part List

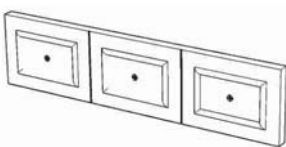 


Q1.
Drawer Front
1 pc.



 Q2.
Drawer Back
1 pc.

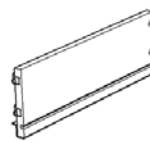

Q3.
Drawer Side
1 pc.

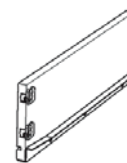 

Q4.
Drawer Side
1 pc.



Q5.
Drawer Bottom
1 pc.

Assembly Instructions 6/7

STEP 11

Level unit by adjusting the adjustable levelers on the bottom of unit. (See Figure 7)

Attach Knobs to Doors (O) and (P) with Machine Screws. (See Figure 8)

Attach Doors (O) and (P) to unit by sliding the door lift hinges into the side panel lift hinges. (See Figure 9)

Slide Drawer (Q) into place.

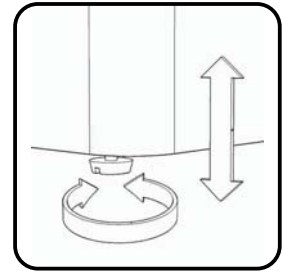 
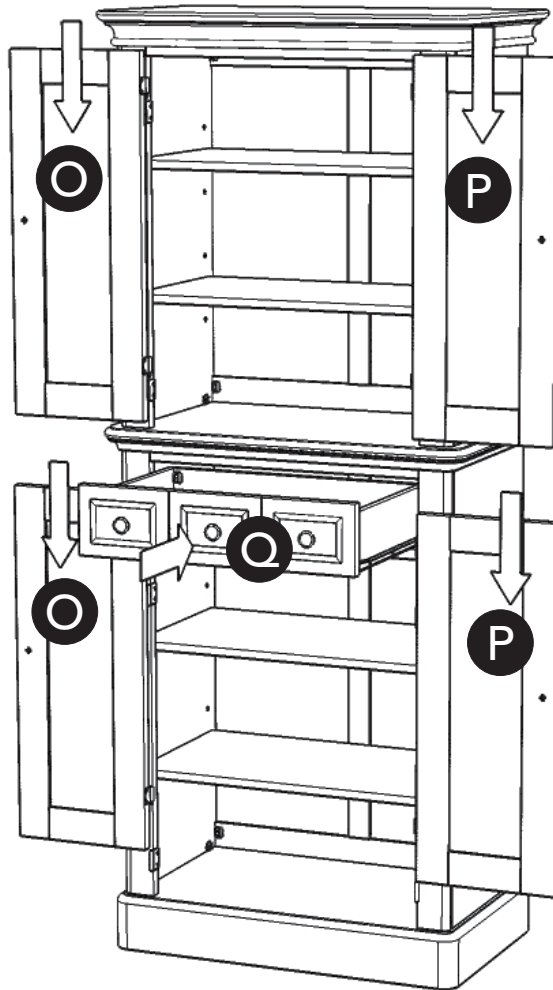 


Figure 7

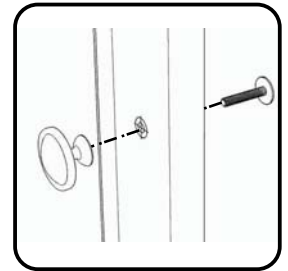 


Figure 8


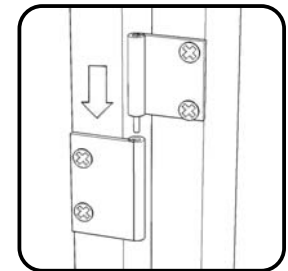 


Figure 9

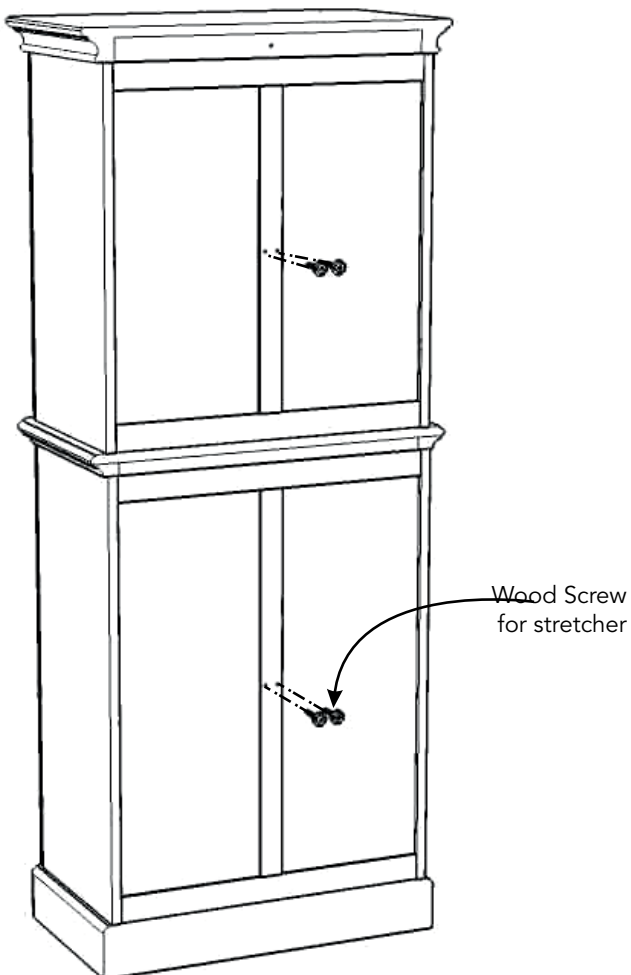 

STEP 12

Insert Wood Screws for stretcher into the pre-drilled holes of stretchers.

Assembly Instructions 7/7

IMPORTANT

- To help reduce the risk of the unit tipping over, the Tip-over Restraint must be installed following these instructions exactly.

STEP 13

Place unit at desired location.

Drill a 3/8" hole in wall in-line with the pre-drilled hole at top of unit.

Move unit.

Insert Anchor into the wall hole and attach Bracket with Wall Screw.

Attach Bracket at pre-drilled hole at top of unit with Wood Screw.

Move unit back into place.

Slide Tip-over Restraint through Bracket on wall and Bracket on unit.
(See Figure 10)

Put tie end of Tip-over Restraint into lock end of Tip-over Restraint and pull until tight.



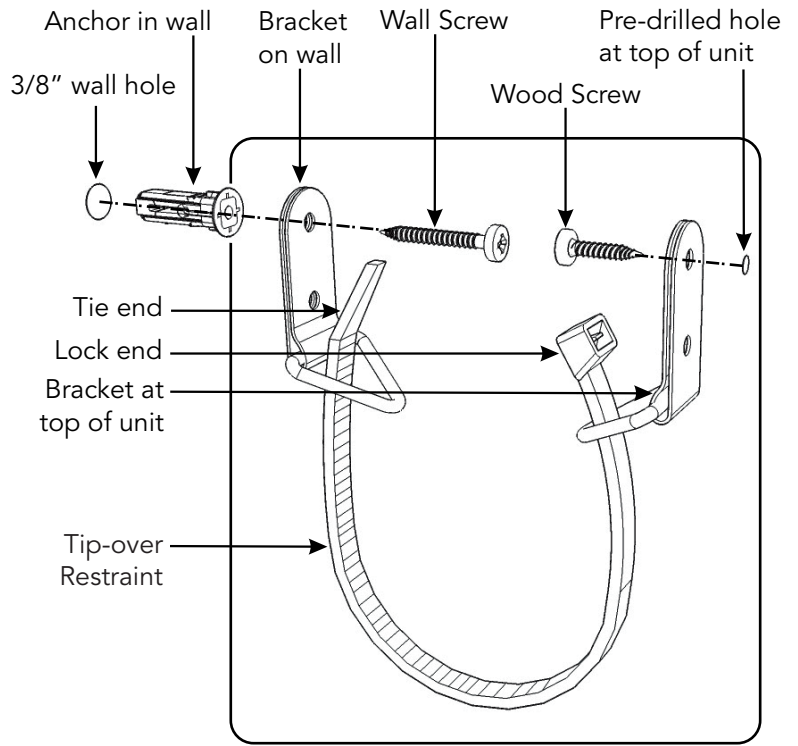 



Figure 10

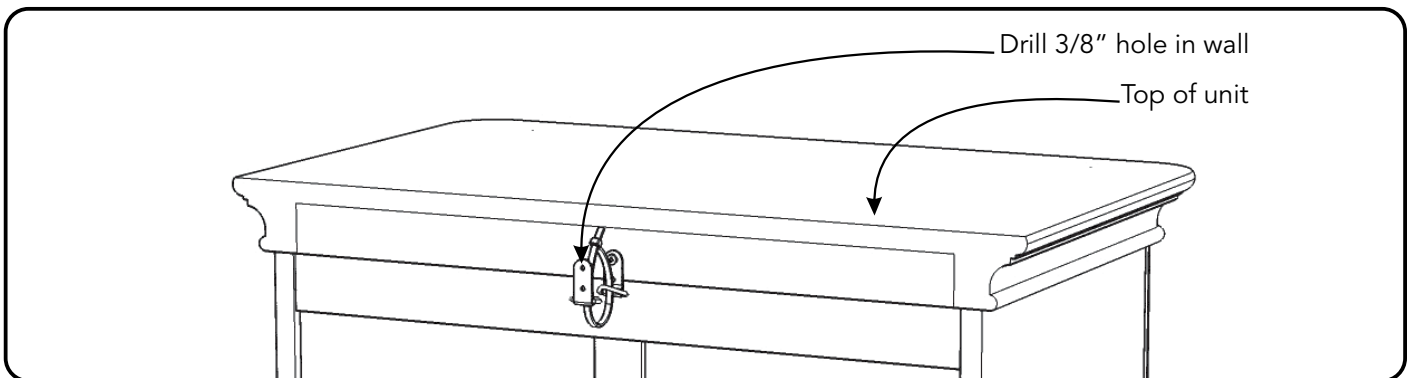 


Hardware List

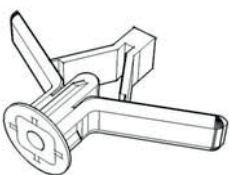 


Anchor
1 pc. (+1 extra)

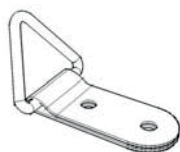 


Bracket
2 pcs. (+1 extra)

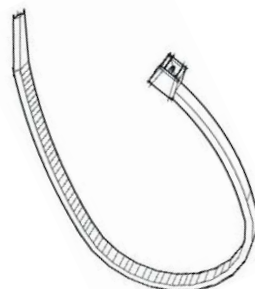 

Tip-over Restraint
1 pc. (+1 extra)

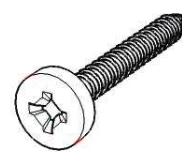 

M3.5x40
Wall Screw
1 pc. (+1 extra)

 

M3.5x16
Wood Screw
1 pc. (+1 extra)

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.
Absorption causes parts to warp
and split and finishes to delaminate.

NEVER

use glass cleaners on
finished furniture. Ammonia
chemically attacks the finish.



Do not use power tools
above 8 volts to assemble.
**PREVENT
CRACKING**



Do not place
in direct sunlight.
**PREVENT
FADING**



Do not write
directly on surface.
**PREVENT
MARKING**



Do not place hot
objects on surface.
**PREVENT
FINISH DAMAGE**



Do not use rubber
based placemats.
**PREVENT
DISCOLORING**



Do not use commercial
waxes and polishes.
**PREVENT
YELLOWING**

CLEAN

with a soft cloth moistened
in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319