## **home**styles<sup>®</sup>

## 88 5170 943


## Kitchen Island


### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

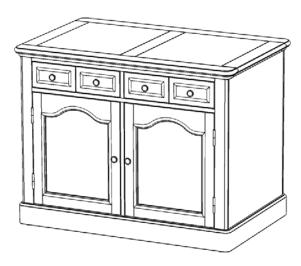

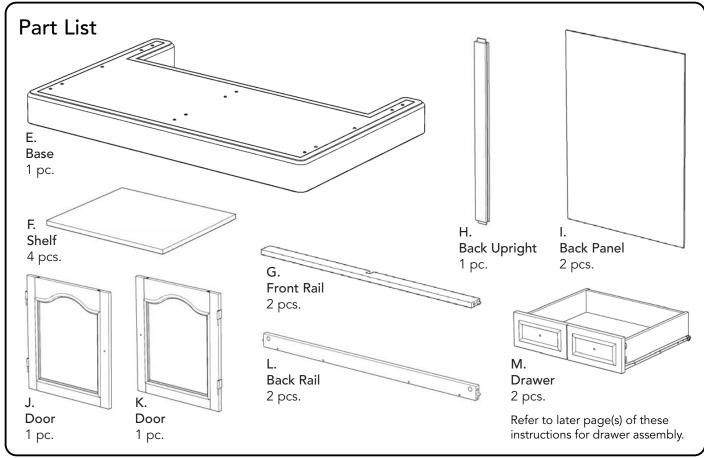

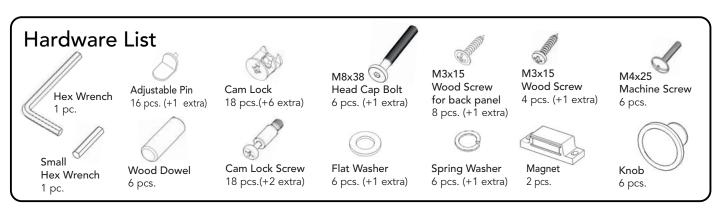

Cartons 88 5523 94Q1 or 941 and 942 are also needed for assembly.


Tool(s) required for assembly: Phillips screwdriver, Level, Drill (8 volts or less), 3/8" Drill Bit


Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

## Assembly Instructions 2/5


### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench in a safe place as the bolts may need to be tightened up in the future.

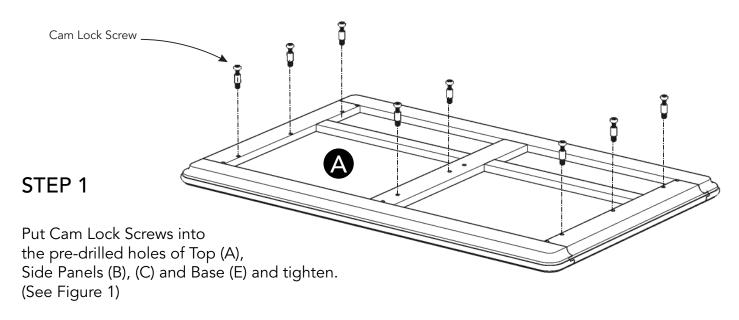

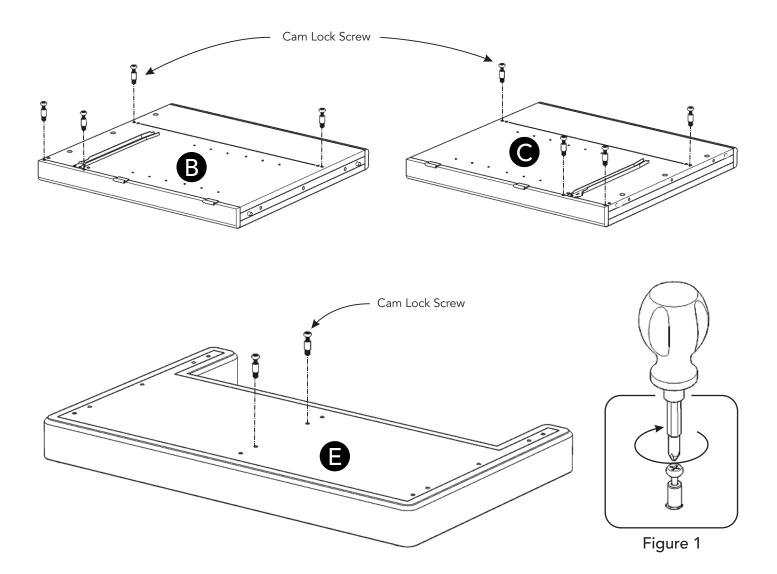


## Assembly Instructions 3/5

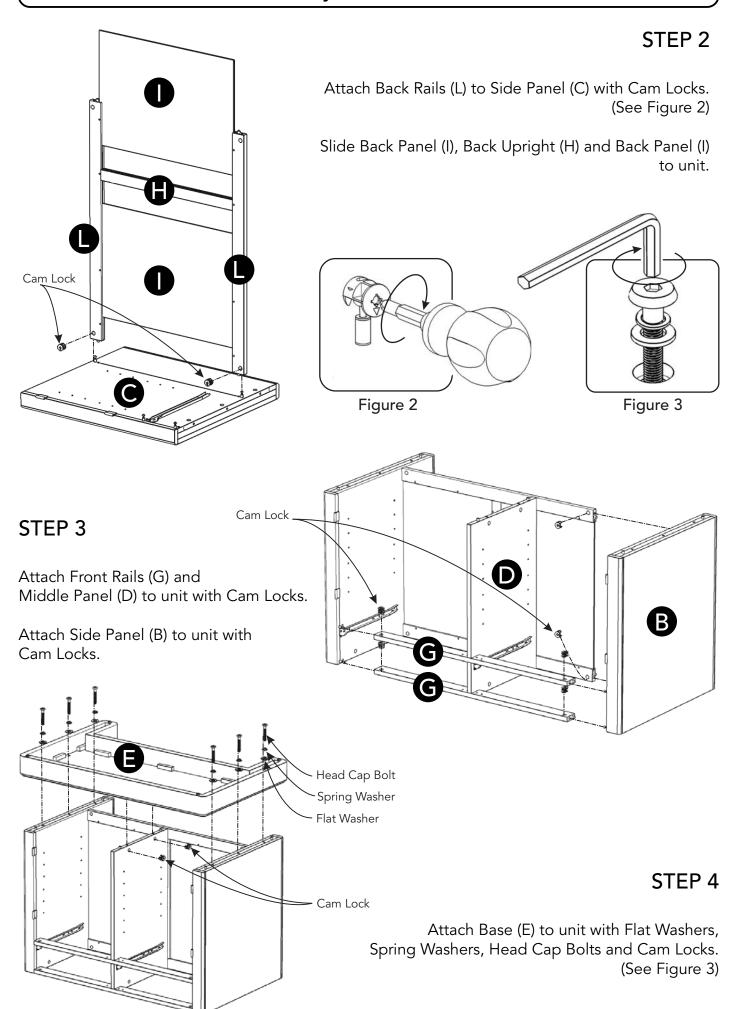


## Assembly Instructions 4/5

## Drawer (M)

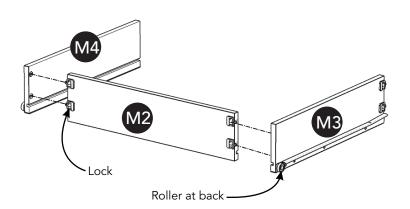

## STEP 5

Attach Drawer Sides (M3) and (M4) to Drawer Back (M2), then flip the locks. (See Figures 4 and 5)

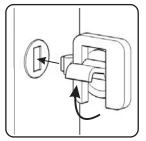

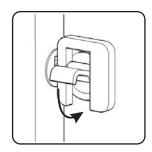



Figure 4


Figure 5




Slide Drawer Bottom (M5) into the grooves in Drawer Sides (M3) and (M4).

 Push Drawer Bottom (M5) all the way into Drawer Back (M2).




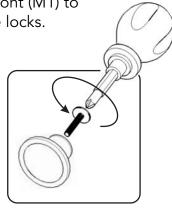

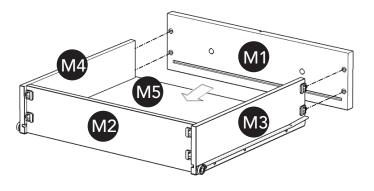

STEP 7

Attach Knob with Machine Screw.

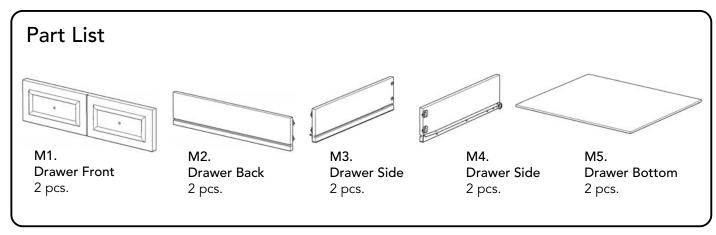

## Assembly Instructions 5/5

### STEP 8

Turn the unit to its' upright position, then insert Wood Dowels into side panels and middle panel.


Attach Top (A) to unit with Cam Locks.


Attach Magnets to unit with Wood Screws. (See Figure 6)

Level unit by adjusting the adjustable levelers on the bottom of unit. (See Figure 7)

Insert Wood Screws for back panel into pre-drilled holes of unit.

Note: Unit must be level before tightening these screws.

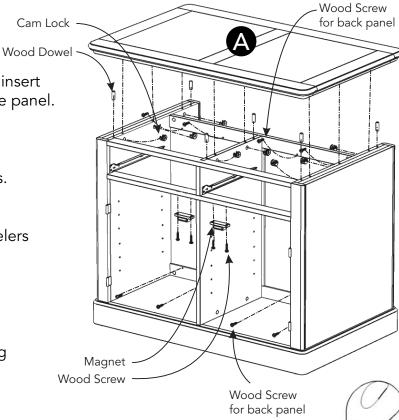

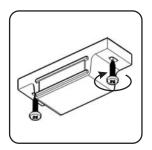



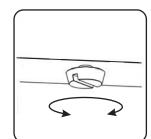


Figure 7

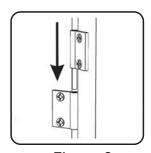


Figure 8


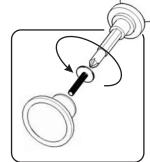


Figure 9

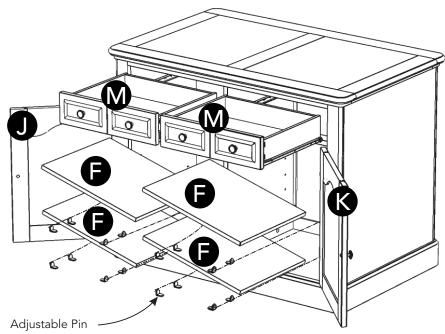

### STEP 9

Slide Drawers (M) into position.

Insert Adjustable Pins into side panel and middle panel at desired level, then place Shelves (F) into position.

Attach Doors (J) and (K) by sliding the door lift hinges into the side panels lift hinges. (See Figure 8)

Assemble Knobs to Doors (J) and (K) with Machine Screws. (See Figure 9)

# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT

PREVENT FADING



Do not write directly on surface.

PREVENT

MARKING



Do not place hot objects on surface.

PREVENT

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT

**DISCOLORING** 



Do not use commercial waxes and polishes.

PREVENT

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com, servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319