

FRIGIDAIRE

PROFESSIONAL®

GETTING

started

WITH YOUR

GAS RANGE

 
 


BEFORE YOU START



SET UP YOUR COOKTOP

Make sure your burner caps are centered on the burners and the cooking grates are in place.

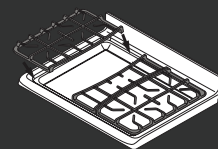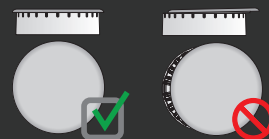


SET UP YOUR OVEN

Remove all packaging material and tape from the range. Make sure your oven racks are in place prior to operating the range. Check out your Use & Care Manual.



SET YOUR CLOCK

It's easy! Press , enter the time using **-** or **+** keys, then release the key. The range will sound when the new time is accepted.



BEFORE COOKING FOR THE FIRST TIME

 
Set your oven to bake at 350°F (177°C) for about 30 minutes. As the range gets settled in your home, it's normal to experience some noises and smoke.

YOU'RE IN CONTROL



YOUR OVEN CONTROLS

Using your oven starts with turning on your oven mode and oven temperature knobs. Temperature will appear in the display as you go.

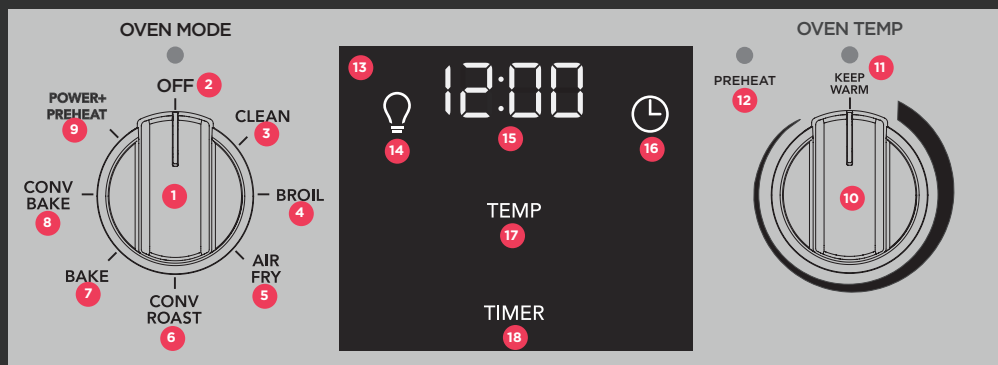

1. The OVEN MODE knob selects the cooking mode.
2. OFF turns off all cooking functions.
3. CLEAN sets a self-clean cycle.
4. BROIL is for broiling and grilling foods under direct, high heat.
5. AIR FRY quickly and evenly circulates heated air to deliver crispy, golden results with little to no oil.
6. CONV ROAST uses a convection fan to gently brown meats and seal in the juices.
7. BAKE is for foods that need heat to rise and move gently in the oven.
8. CONV BAKE uses a fan to circulate the oven's heat uniformly and continuously around the oven.
9. POWER+ PREHEAT is for single rack items only.
10. The OVEN TEMP knob selects the cooking temp for bake and convection cooking features.
11. KEEP WARM is used to keep cooked foods at serving temperature in the oven.
12. The PREHEAT light glows when the oven is first turned on, and turns off when the oven is preheated and ready to start cooking.
13. The DISPLAY shows the time, temp, active cooking feature, and the timer.
14. OVEN LIGHT turns the interior light on and off at a touch.
15. CLOCK is used to set the time of day.
16. The SET CLOCK button is used to set the time of day in the display.
17. The TEMP area of the display shows the current oven temp.
18. TIMER is used to set or cancel the minute timer.



 
REMEMBER

- Do not use aluminum foil or any other materials to line any part of the oven.
- All oven racks should be removed before a self clean operation.

AIR FRY

Deliver all of the flavor and none of the guilt. Our Air Fry mode allows you to make healthy and delicious meals for the entire family - right in your oven. Use a dark, nonstick baking sheet when using Air Fry.

For perfect crispy-golden results, we suggest our ReadyCook™ Air Fry Tray. The Air Fry Tray can be purchased from Frigidaire.com or from a Frigidaire authorized dealer.

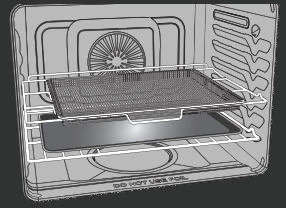

QUICK CARE



A little love goes a long way

Clean up spills as they happen. Quick ongoing care keeps your range working great for years to come!

Be gentle

Clean with warm water and mild soap, or use Frigidaire ReadyClean™ Oven and Microwave Cleaner.

Setting a self-clean cycle is easy

1. Remove the racks from your oven and clean by hand. Make sure you close the oven door.
2. Turn the OVEN MODE knob to CLEAN.
3. The default clean time 3 0 0 (3 hours) will appear in the display. To choose a different clean time, use the - or + keys to enter any time between 2 and 4 hours.
4. Once the control accepts the clean time, the display will flash a reminder for you to REMOVE RACKS.
5. After a few seconds you'll hear the door lock. Be careful around the oven during and after cleaning, things can get hot!

FAQs

Why does my range make noises when I'm cooking?

Temperature changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temperatures. Different fans run to heat up the oven or cool down different parts of oven, even when it's off. These sounds are normal.

My range is brand new - why doesn't my cooktop work?

Your installer may have left the lever for the gas supply off while working to set up your range. Check out the installation instructions for how to turn the lever back on.

This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for your recipes. Your Use & Care Manual has rack position and bakeware recommendations to help you get the best baking results. For instructions on how to adjust temperature offset, consult your Use & Care Manual or call us if you need help!

Why does my oven smoke when I use Air Fry?

Air Fry circulates super-heated air all around food and bakeware. Some smoke is normal. Drippings from high-fat or greasy foods combined with hot air from the oven can cause smoke to occur. Visit Frigidaire.com for additional FAQs and Air Fry Tips.

 


Find more troubleshooting tips in the back of your Use & Care Manual.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new range and discovering more benefits.

Look for the PhotoregisterSM icon on your registration card.

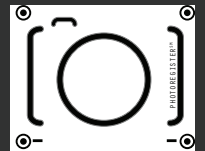

WE ARE
here



Have a question?



Want help?



Need service?

owner support

FOR YOU frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

