

KitchenAid®


30" ELECTRIC BUILT-IN COOKTOP

MODELS:

KCES550HBL00 (Black)

KCES550HSS00 (Stainless)

COOKTOP PARTS

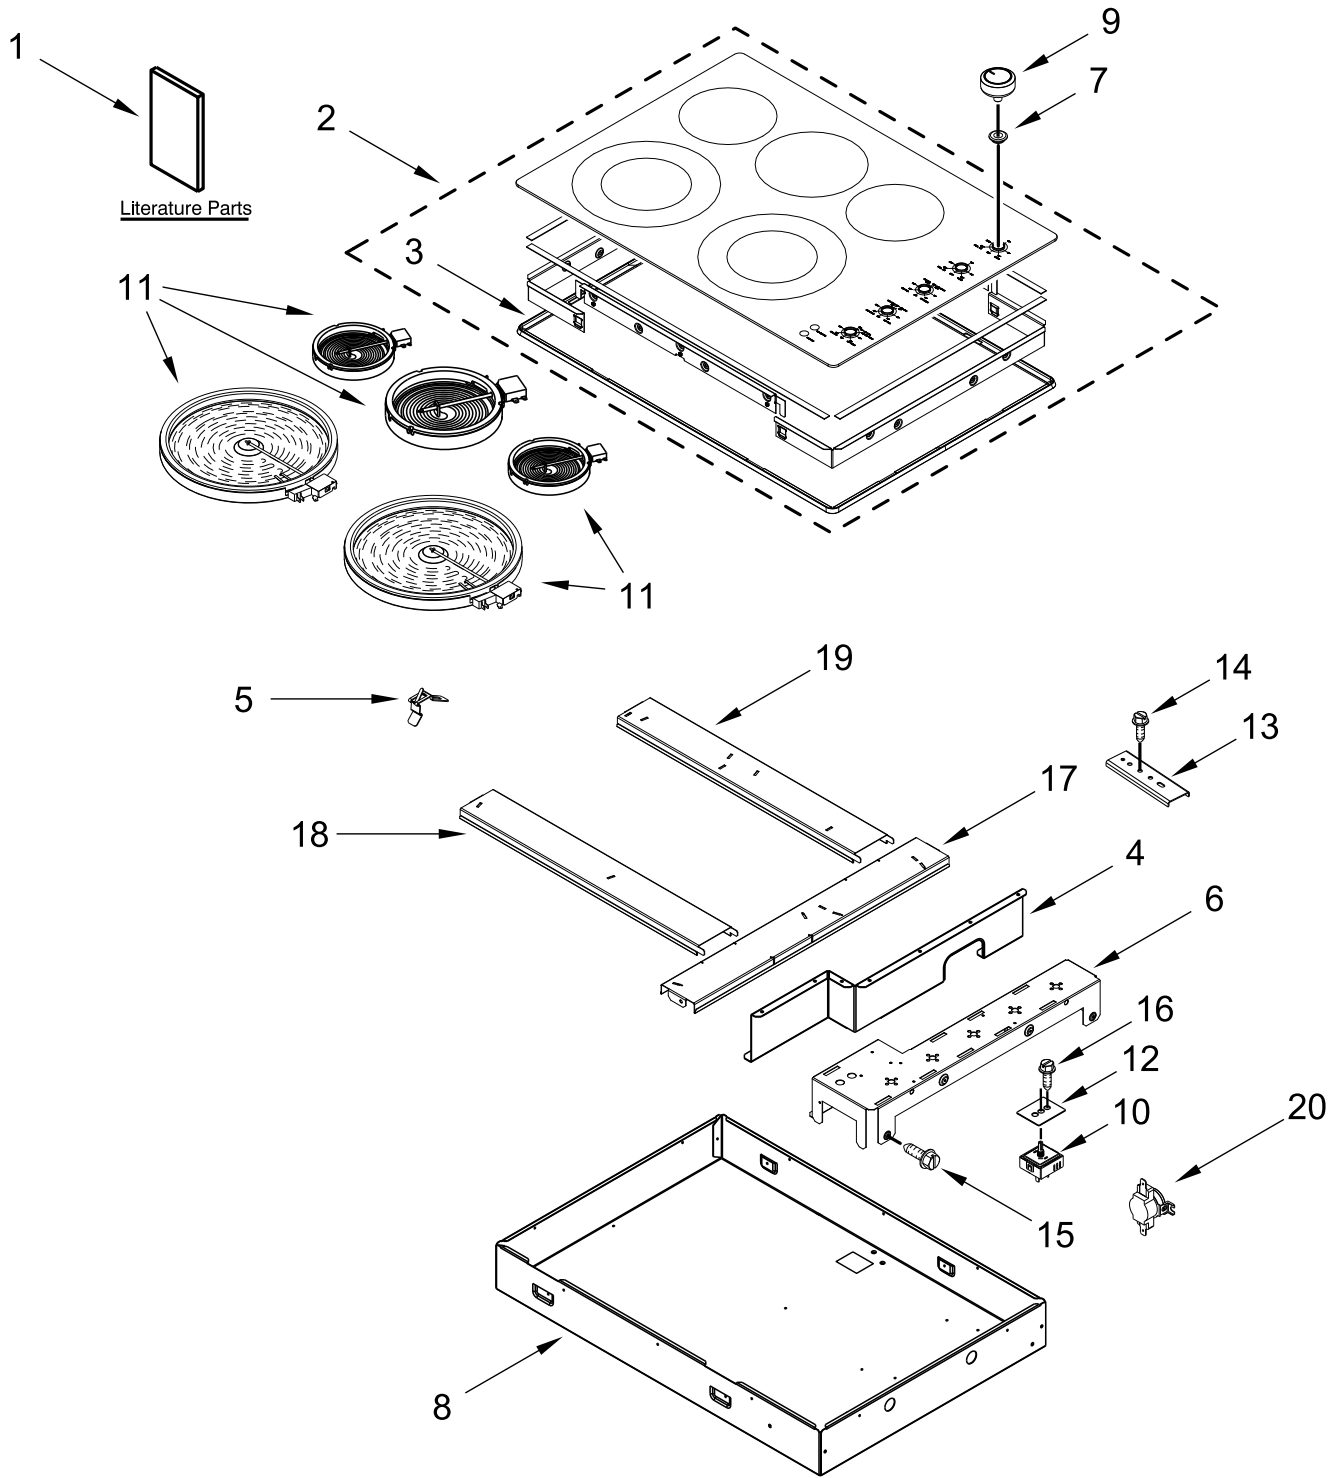

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	10	W10437092	Switch, Infinite (Left Front)	13	4455917	Bracket, Cooktop Mounting
	W11206696	Instructions, Installation		W10578768	Switch, Infinite (Left Rear)	14	3400093	Screw
	W11245478	Instructions, Undercounter Installation		W10843843	Switch, Infinite (Center Rear)	15	7101P426-60	Screw
	W11161586	Guide, Use & Care		W11117250	Switch, Infinite (Right Front)	16	7101P309-60	Screw
	W11238365	Diagram, Wiring		W10437094	Switch, Infinite (Right Rear)	17	W11171778	Rail, Vertical
2		Cooktop				18	W11175475	Rail, Horizontal Front
	W11120989	Black				19	W11171776	Rail, Horizontal Rear
	W11120990	Stainless	11	W10275048	Element (3000/1400W)	20	W10464566	Switch, TOD High Limit
3		Trim, Stainless (Not Serviced)						FOLLOWING PARTS NOT ILLUSTRATED
4	W11172720	Shield, Switch		8273994	Element (1200W) (Left Rear)	W11110552		Harness, Main
5	W10225448	Spring, Element				3192439		Seal, Limiter
6	W11215837	Plate, Switch		8273993	Element (1800W) (Center Rear)	7101P426-60		Screw (For Main Harness)
7		Grommet					8286642	Tape, Foam
	W10593536	Stainless		W11117008	Element (3200W) (Right Front)	W11161211		Insulation, Cooktop (Knob)
8		Box, Burner (Not Serviced)		W10342780	Element (1300W) (Right Rear)			
9		Knob, Control	12	3183956	Seal, Switch Cover			
	W10884728	Stainless						

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORIES
	WA906B	Scraper, Cooktop
	W10355051	Cleaner, Cooktop
	31605	Kit, Cooktop Care