


**KitchenAid®**

**30" DUAL-FUEL FREESTANDING RANGE**

**MODELS:**

KFDC500JAV00 (Matte Avocado)


# BURNER BOX PARTS

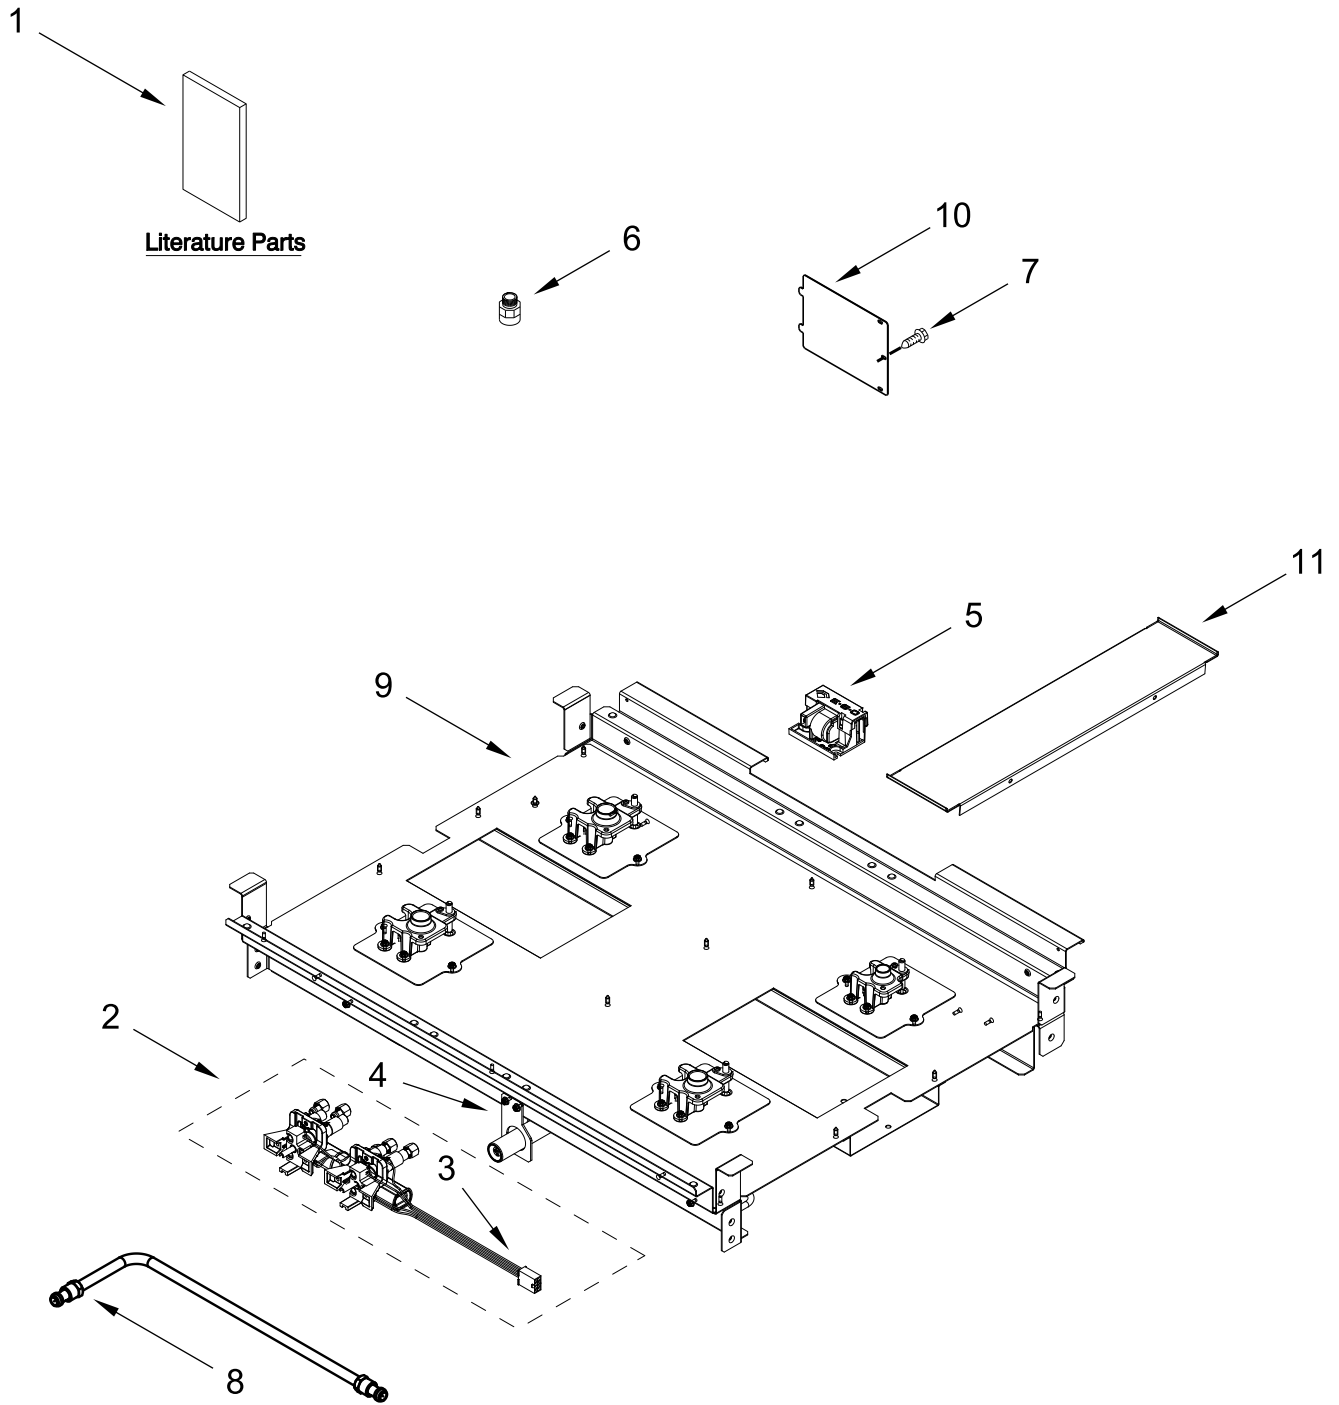

# BURNER BOX PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	11	W11121361	Filler, Cooktop
	W11114331	Guide, Use And Care	4	W11121194	Bracket, Manifold			FOLLOWING PARTS NOT ILLUSTRATED
	W11114334	Instructions, Installation	5	W11121317	Module, Spark		W11200301	Harness, Main (30")
	W11184759	Guide, Internet Connectivity	6	4453116	Adapter, Male		W11200328	Harness, Cooktop
	W11202391	Diagram, Wiring (Cooktop)	7	7101P426-60	Screw		W10780278	Harness, Door Lock
	W11202385	Diagram, Wiring (Oven)	8	W10892281	Tube, Manifold Supply (Left)		W11200325	Harness, Communication
	W11202289	Sheet, Tech		W10892292	Tube, Manifold Supply (Right)		W11242785	Harness, WIFI
	W11114332	Guide, Quick Start	9		Box, Burner (Not Serviced)		W11212216	Cord, Power
2	W10892994	Assembly, Valve Manifold  (Left Front, Left Rear)	10	W10115843	Cover, Ignition		9759877	Retainer, Strain Relief
	W10892997	Assembly, Valve Manifold  (Right Front, Right Rear)					4450800	Screw, Grounding
							9757778	Bushing, Snap Split
							W10253333	Bracket, Anti-Tip
							7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


# COOKTOP, BURNER AND GRATE PARTS

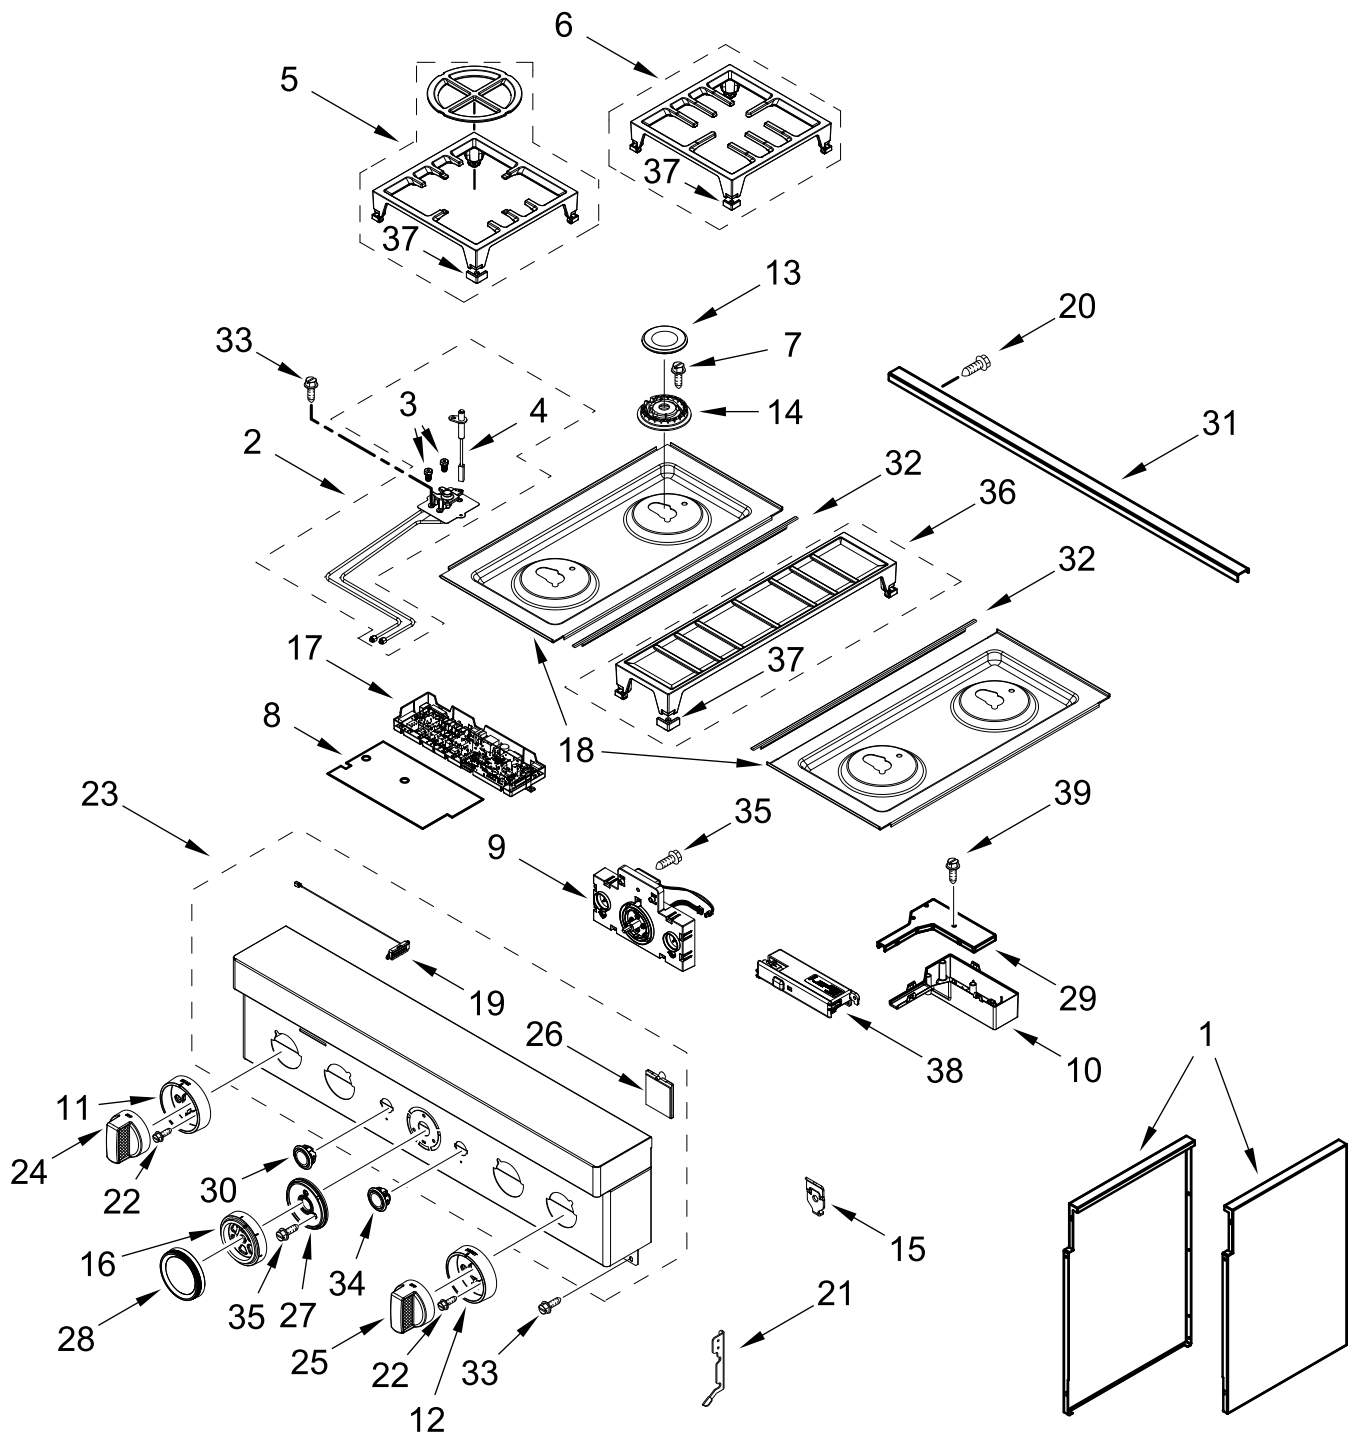

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI
	W11106880	Panel, Cabinet Side (Right)	6	W11291179	Burner, Grate	20	7101P338-60	Screw
2	W10892774	Assembly, Orifice Holder (Left Front)	7	W11323261	Screw (8-18 X 1")	21	W10130760	Bracket, Moving Console (Left)
	W10892484	Assembly, Orifice Holder (Left Rear)		W11323309	Screw (8-18 X 1/2")		W10130759	Bracket, Moving Console (Right)
	W10892479	Assembly, Orifice Holder (Right Front)	8	W11281269	Barrier, Appliance Manager	22	W10919387	Screw
	W10892735	Assembly, Orifice Holder (Right Rear)	9	W11096037	Interface, User	23	W10877949	Panel, Console Knob, Single
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	10	W11205795	Cover, WIFI Outer	24	W10912166	Stainless Knob, Dual
	W10892419	Orifice, Main (15K) (Left Rear)	11	W10883433	Bezel (Rear Burners)	25	W10883172	Stainless
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	12	W10881642	Bezel (Front Burners)	26	W10896366	Assembly, Light Pipe
	W10892438	Orifice, Simmer (5K) (Right Rear)	13		Cap, Burner	27		Bezel, Oven
4	W11238757	Igniter (Left Front, Right Front)		W11121389	Black (Set Of 4)		W10913810	Stainless
	W10892340	Igniter (Left Rear)	14	W10891746	Spreader, Flame (High) (Left Front, Right Front)	28		Knob, Oven Temperature
	W11114379	Igniter (Right Rear)		W10891974	Spreader, Flame (Low) (Left Rear)		W11249669	Stainless
				W10891978	Spreader, Flame (AUX) (Right Rear)	29	W11205794	Cover, WIFI Inner
			15	W11036559	Spring Clip, Range	30	W11241511	Button Assembly, Oven Light
			16		Knob, Oven Mode	31	W11156414	Trim, Island
				W11249667	Stainless	32		Trim, T-Strip
			17	W11100279	Manager, Appliance (Powermax)		W10271524	Black
			18		Panel, Cooktop	33	7101P426-60	Screw
				W11038235	Black (Left)	34	W11241510	Button Assembly, Oven Start
				W11038245	Black (Right)	35	3400814	Screw
						36	W11291178	Kit, Grate Filler
						37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module
						39	7101P624-60	Screw


# CHASSIS PARTS

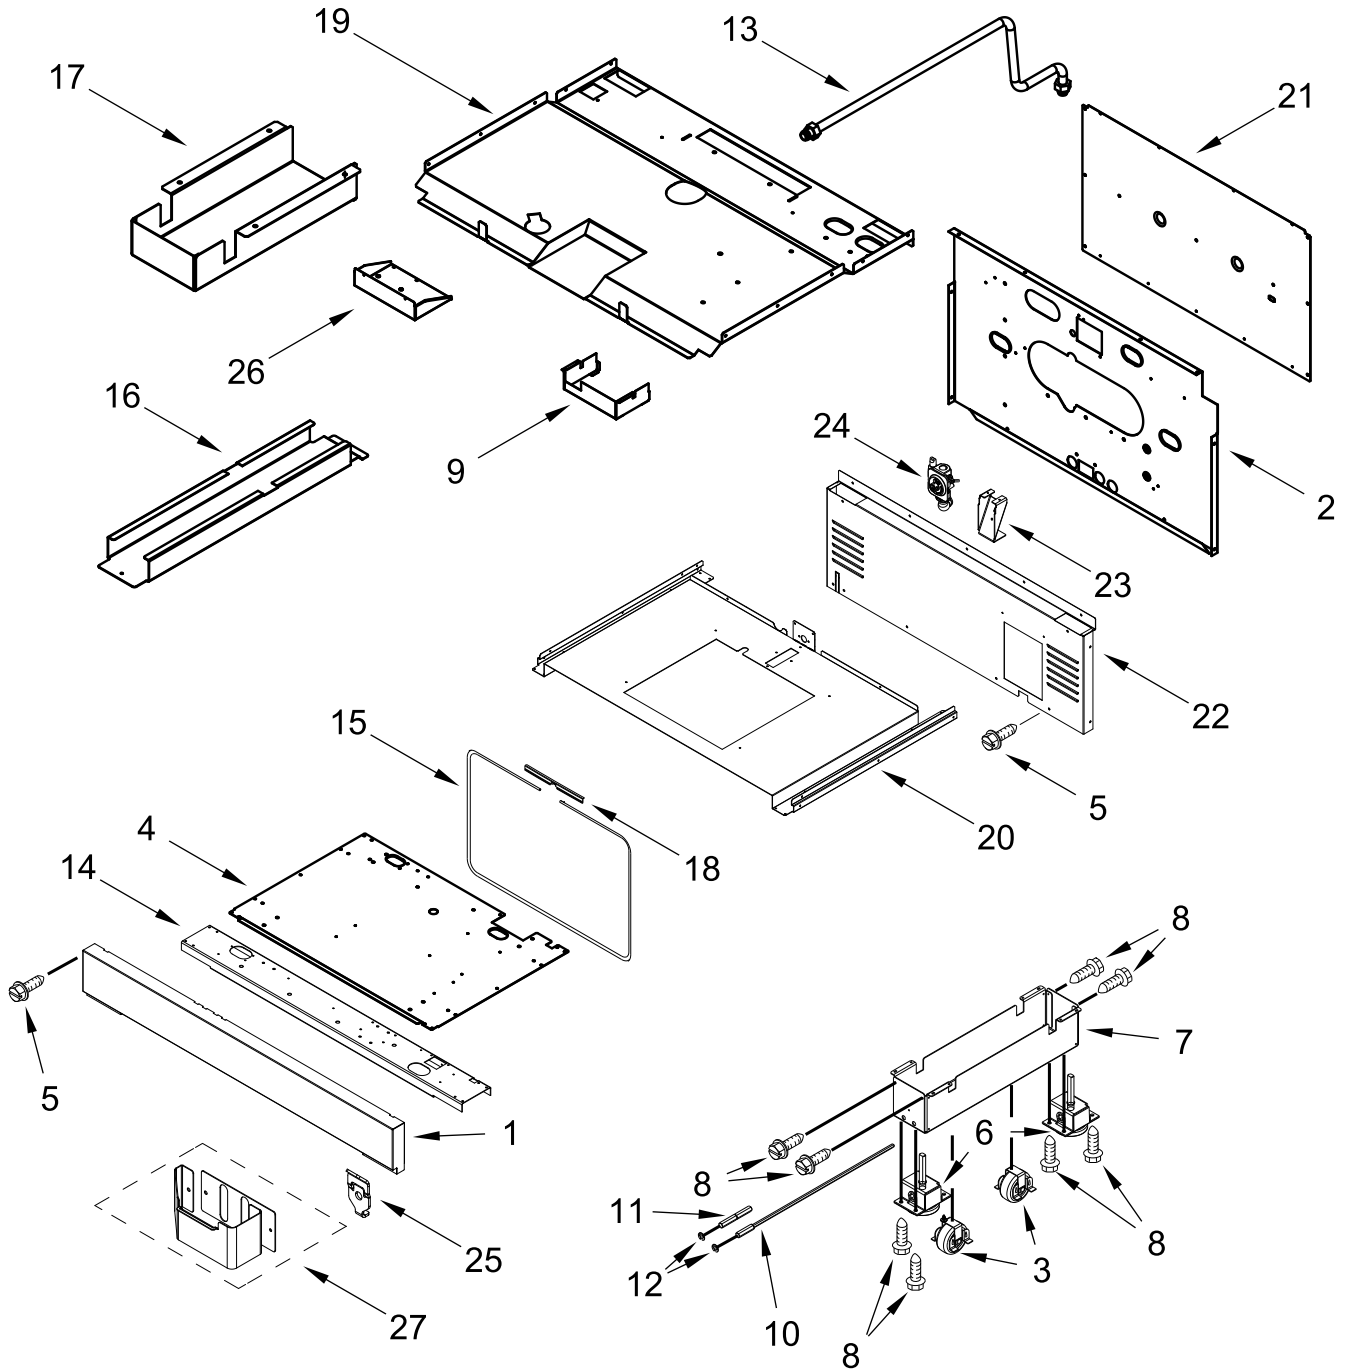

# CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394781	Kickplate	12	489504	E-Ring	22	W11034134	Panel, Back Bottom
2	W11105911	Back, Chassis	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
3	W10138054	Assembly, Roller	14	W11087491	Support, Channel	24	W10449140	Regulator, Pressure
4	W11109583	Duct, Bottom (30")	15	W11115328	Gasket, Oven (30")	25	W11036559	Spring Clip, Range
5	7101P426-60	Screw	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
6	9760860	Leveler	17	W11084360	Channel, Wire	27	W11199181	Cover, Foot (Left)
7	W10908710	Base, Leveling Leg	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
8	4449743	Screw	19	W11037137	Top, Chassis			
9	W11106335	Cabinet, Appliance Manager	20	W11040802	Chassis, Bottom			
10	W10115869	Shaft, Long	21	W11103334	Panel, Back Top			
11	W10115793	Shaft, Short						

# OVEN PARTS

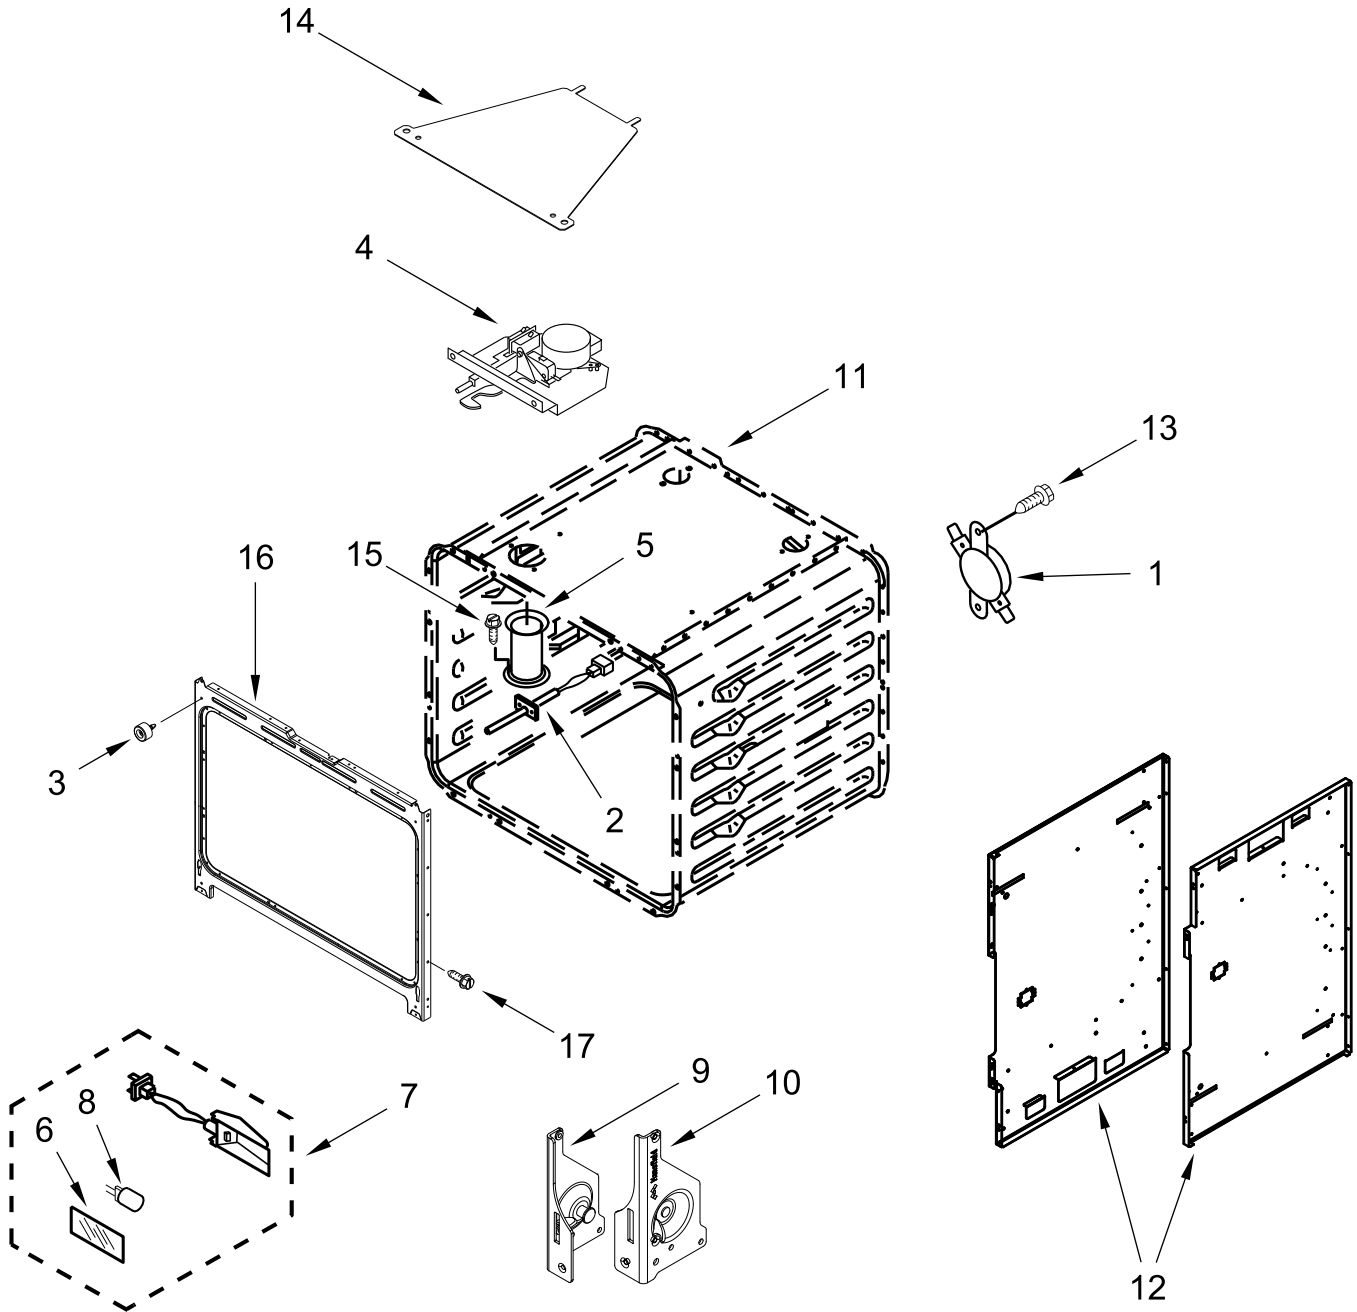




# OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	11		Liner, Oven (Not Serviced)	17	4449040	Screw
2	W10622170	Probe, Sensor						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	12	W11102297	Chassis, Side (Left)	W10282810		Insulation, Wrap, 30"
4	W10830016	Latch, Motorized		W11102296	Chassis, Side (Right)	W10282816		Insulation, Back, 30"
5	W11290663	Tube, Vent	13	7101P426-60	Screw	3400968		Nut
6	W10169756	Lens, Light	14	W10160858	Cover, Latch			
7	W11223932	Assembly, Oven Light	15	3196176	Screw			
8	W10169757	Bulb, Light	16	W11192755	Frame, Front			
9	W11096294	Receiver, Hinge (Left)						
10	W11096293	Receiver, Hinge (Right)						


# VENTING PARTS

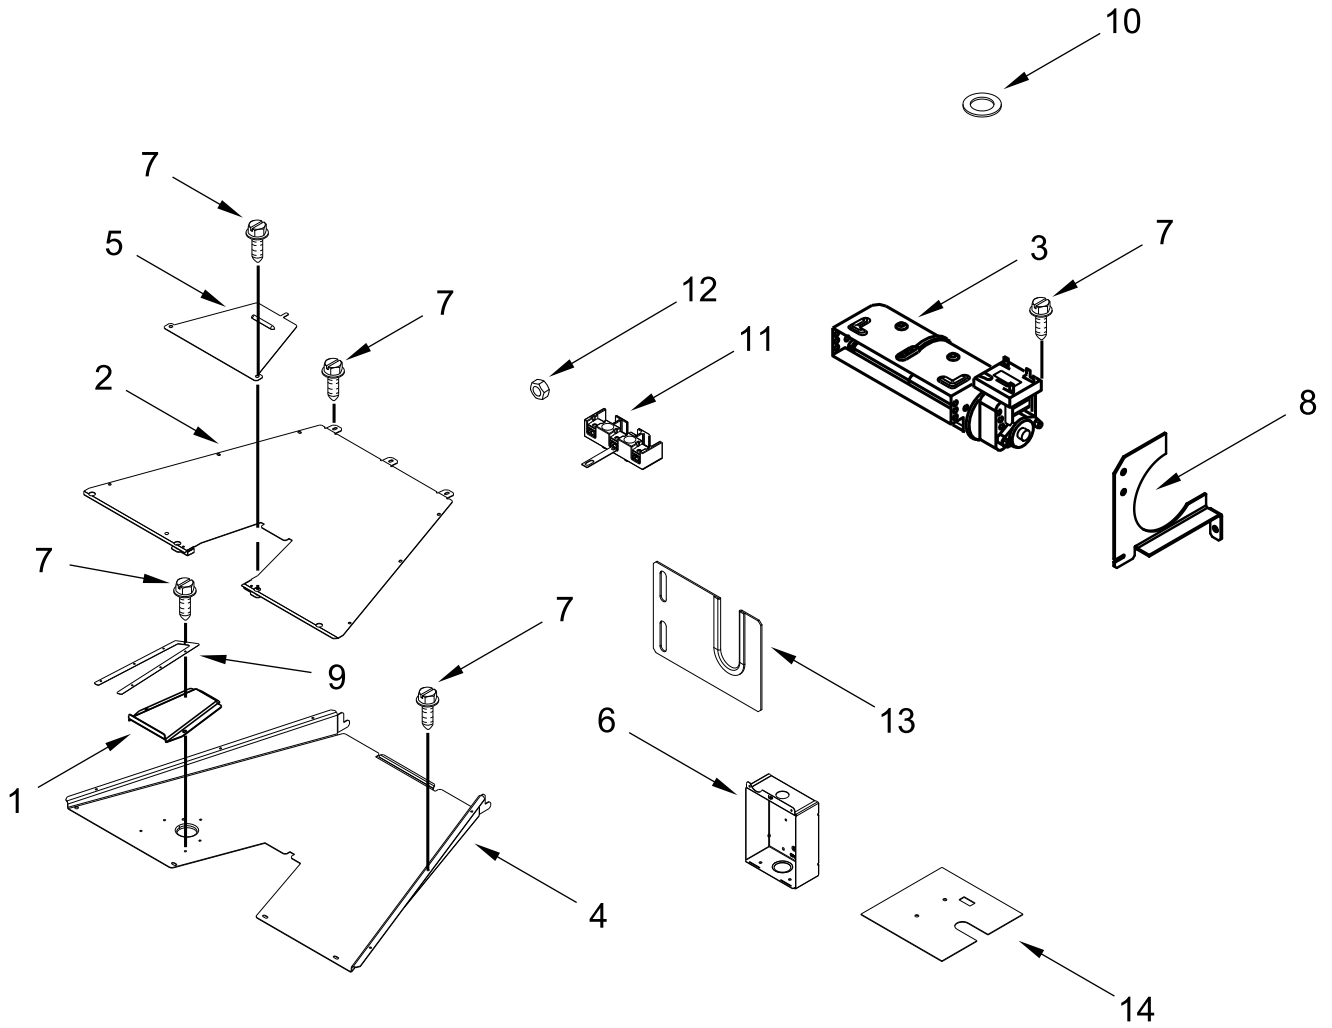

# VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W10467022	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	9759721	Insulator, Terminal Box
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


# OVEN DOOR PARTS

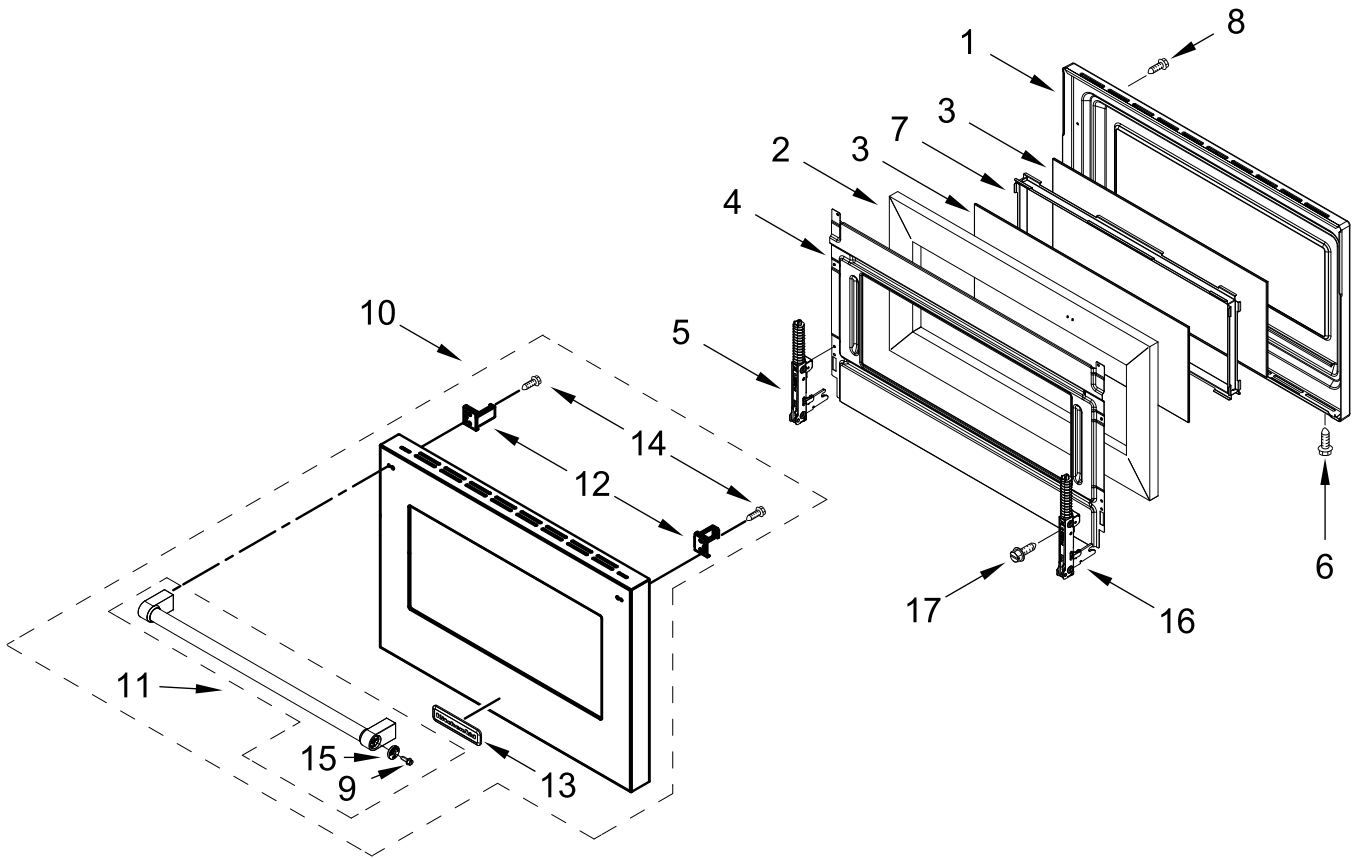

# OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	7	W10272594	Frame, Glass	12	W11197830	Bracket, Handle
2	W10321285	Insulation, Door	8	W10898280	Screw	13	W10518672	Badge
3	W11184409	Glass, Inner	9	W10656499	Screw	14	W10276043	Screw
4	W11194821	Retainer, Glass	10	W11389289	Assembly, Outer Door (Includes Handle)	15	W11221410	Medallion, Handle
5	W11390105	Hinge, Door (Left)	11	W11221412	Assembly, Door Handle	16	W11390124	Hinge, Dual (Right)
6	W10162096	Screw				17	W10607120	Screw

# INTERNAL OVEN PARTS

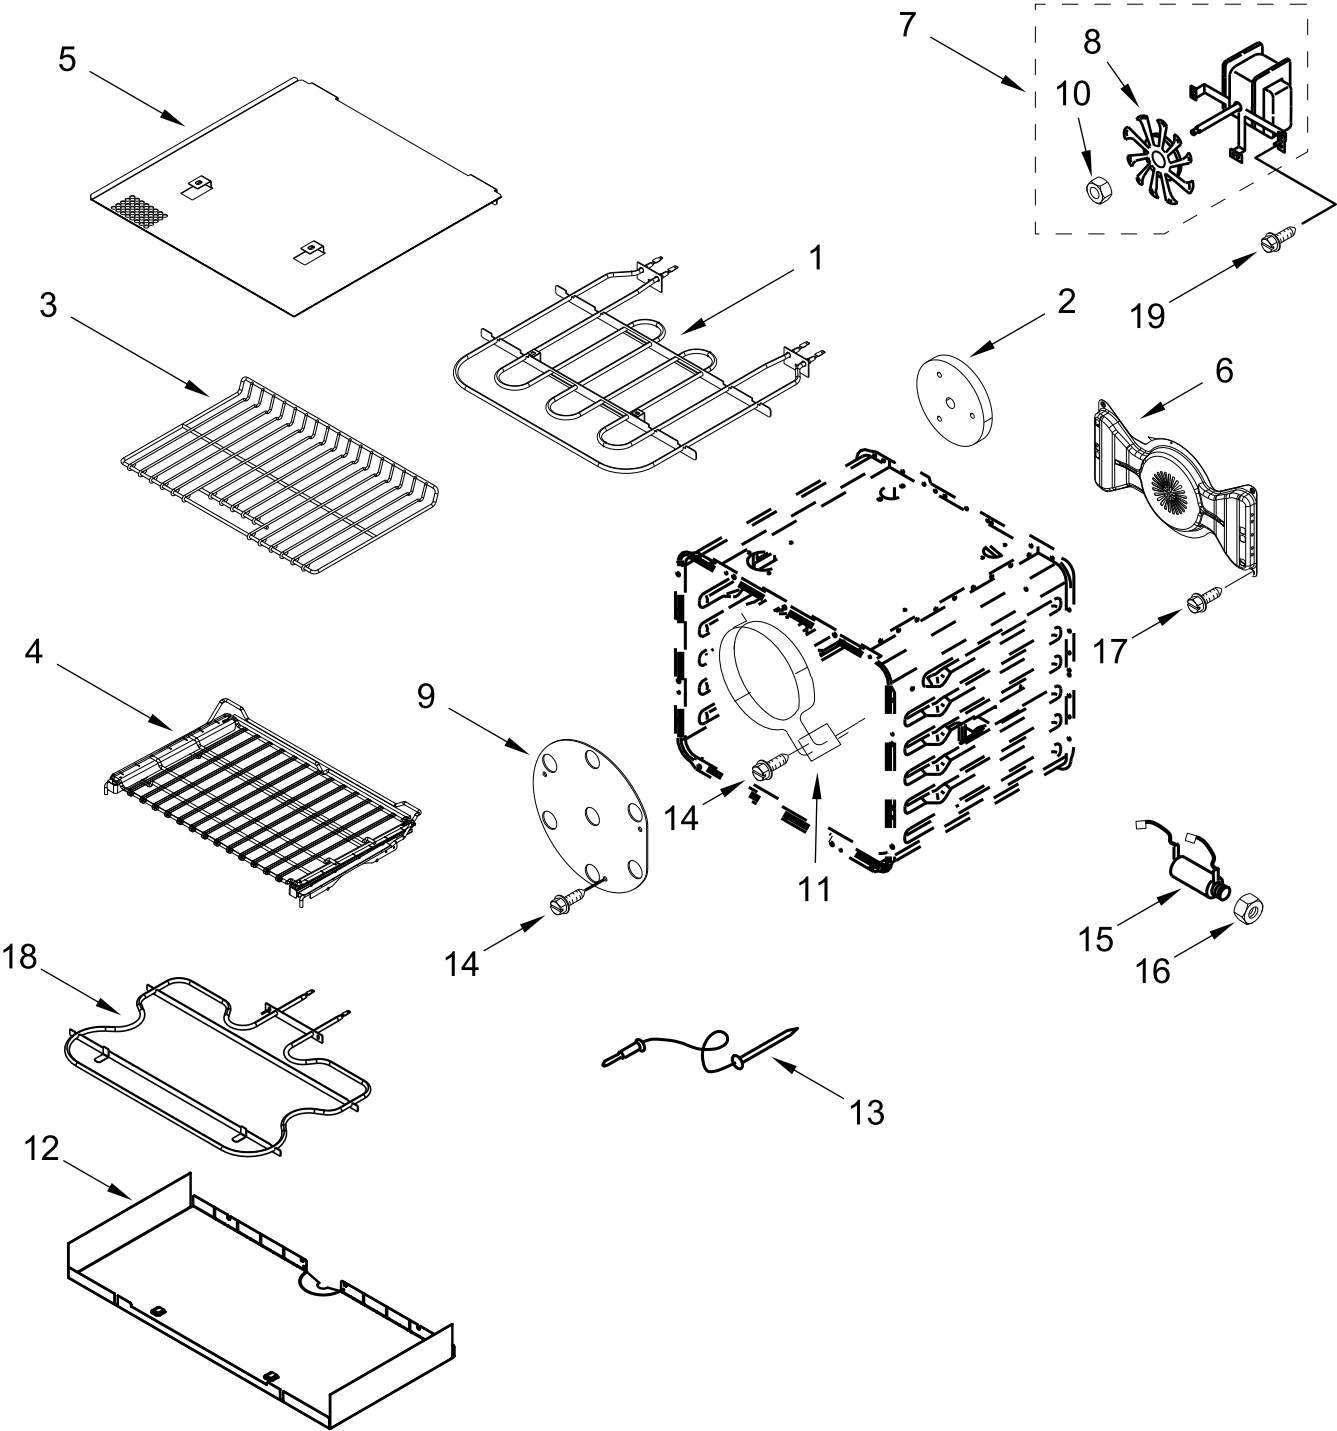

# INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	9	W10261523	Plate, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	18	W10115995	Element, Hidden Bake
3	W10570887	Rack, Oven	11	9762242	Element, Convection Steam	19	W10720084	Screw
4	W11108461	Rack, Oven (Sliding)	12	W11109421	Tray, Hidden Bake			
5	W10160856	Shield, Element Broil	13	9755542	Probe, Temperature			
6	W11212180	Baffle, Convection	14	4449154	Screw			
7	W10722667	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W10631503	Blade, Fan	16	W11033111	Nut, Locking			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude  Medallion, Handle
	W11368841SI	Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue