


KitchenAid®

36" DUAL-FUEL FREESTANDING RANGE WITH 6 BURNERS

MODELS:

KFDC506JAV00 (Matte Avocado)


BURNER BOX PARTS

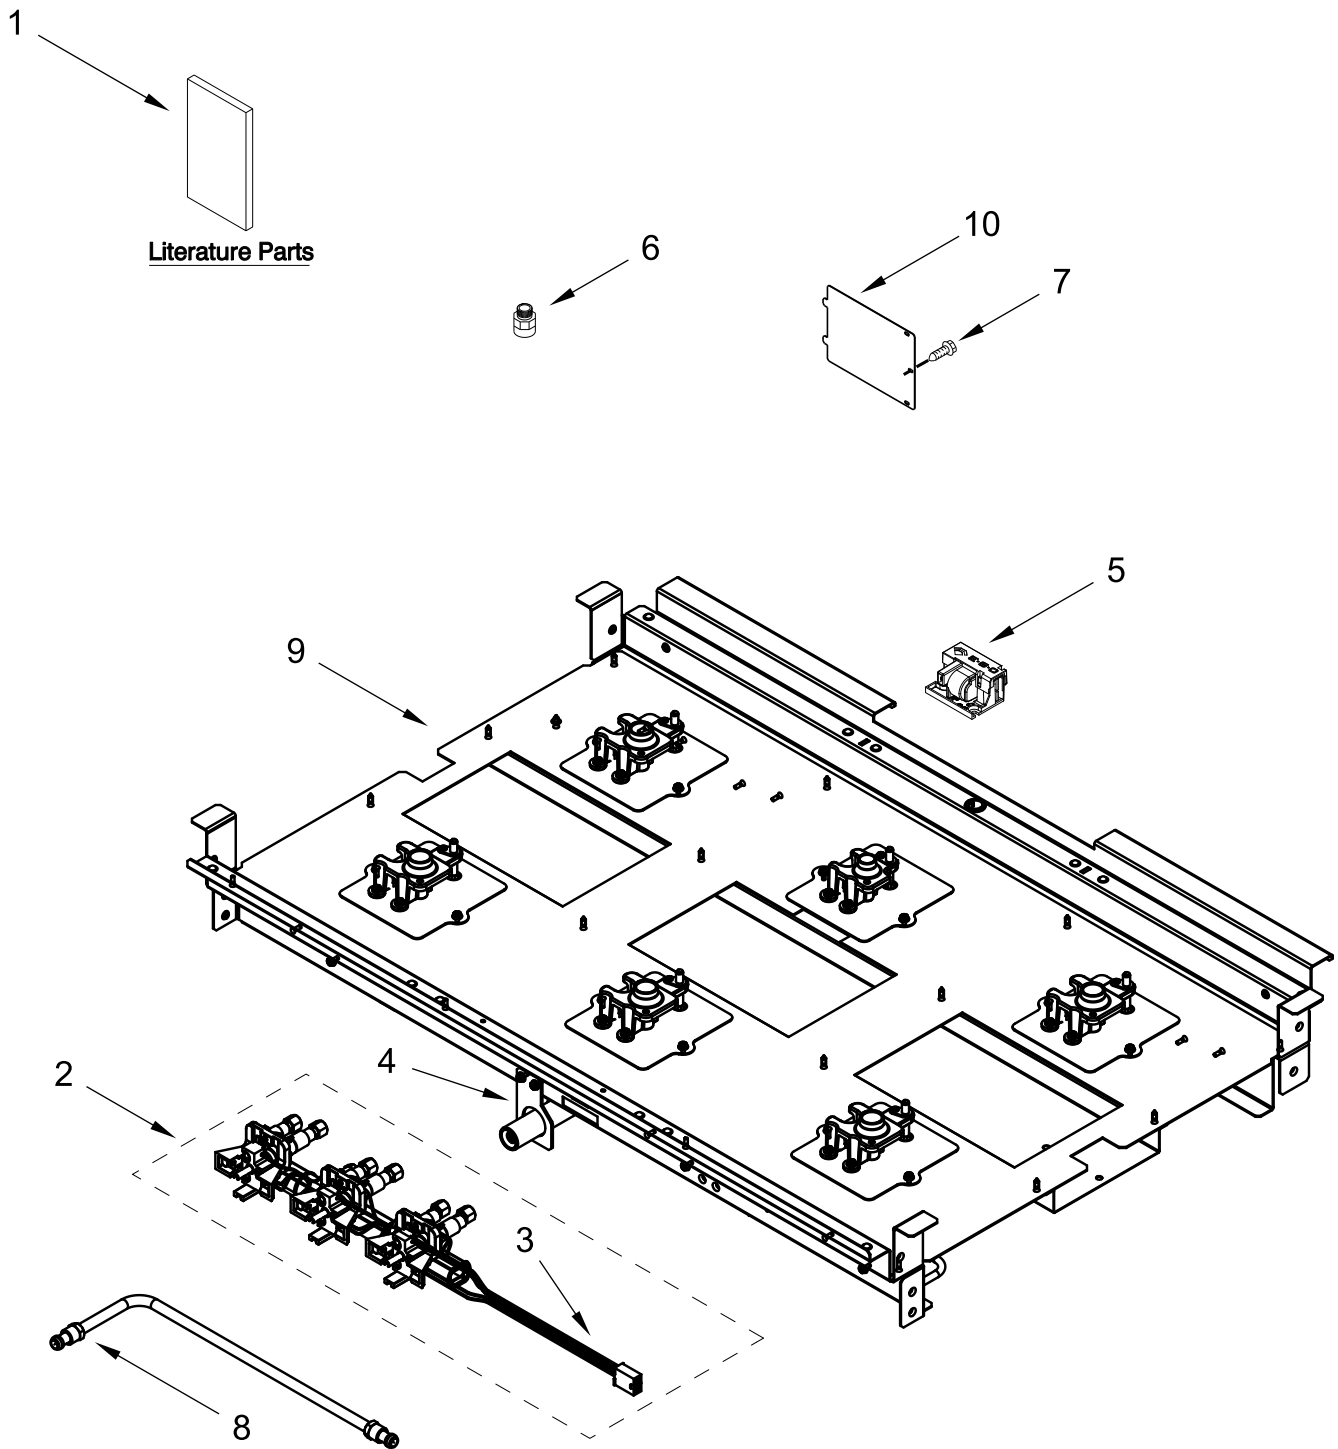

BURNER BOX PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	2	W10892995	Assembly, Valve Manifold	10	W10115843	Cover, Ignition
	W11114331	Guide, Use And Care			(Left Front, Left Rear, Center Rear)			FOLLOWING PARTS NOT ILLUSTRATED
	W11114334	Instructions, Installation		W10893005	Assembly, Valve Manifold		W11200303	Harness, Main (36")
	W11184759	Guide, Internet Connectivity			(Center Front, Right Front, Right Rear)		W11200332	Harness, Cooktop
	W11202391	Diagram, Wiring (Cooktop)					W10780278	Harness, Door Lock
	W11202385	Diagram, Wiring (Oven)	3	W10903729	Switch, Harness		W11200325	Harness, Communication
	W11202289	Sheet, Tech	4	W11121194	Bracket, Manifold		W11242785	Harness, WIFI
	W11114332	Guide, Quick Start	5	W11121317	Module, Spark		W11212216	Cord, Power
			6	4453116	Adapter, Male		9759877	Retainer, Strain Relief
			7	7101P426-60	Screw		4450800	Screw, Grounding
			8	W10892073	Tube, Manifold Supply (Left)		9757778	Bushing, Snap Split
				W10892334	Tube, Manifold Supply (Right)		W10253333	Bracket, Anti-Tip
			9		Box, Burner (Not Serviced)		7101P485-60	Screw, Anti-Tip Kit
							W11238042	Kit, LP Conversion


COOKTOP, BURNER AND GRATE PARTS

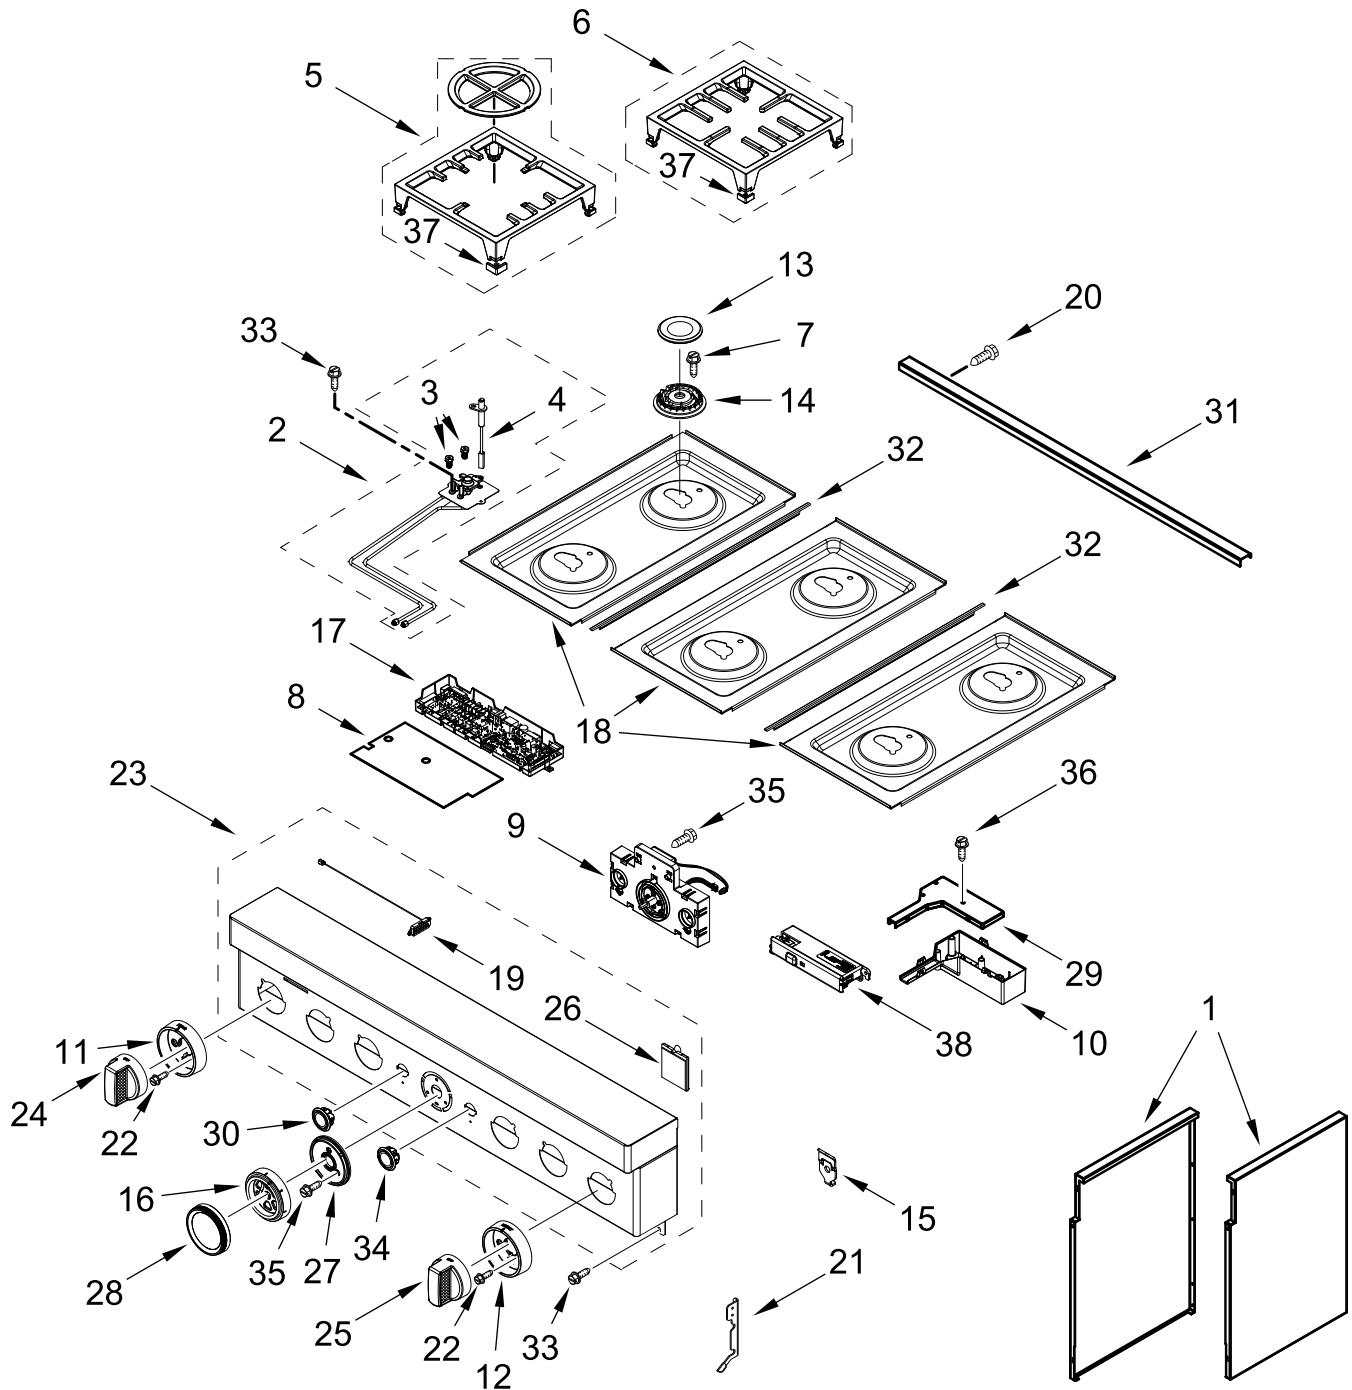

COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11106881	Panel, Cabinet Side (Left)	4	W11238757	Igniter (Left Front, Right Front)	18		Panel, Cooktop Black (Left)
	W11106880	Panel, Cabinet Side (Right)		W10892340	Igniter (Center Front, Center Rear)		W11038235	Black (Left)
2	W10892774	Assembly, Orifice Holder (Left Front)		W11114379	Igniter (Left Rear, Right Rear)		W11038257	Black (Center)
	W10892492	Assembly, Orifice Holder (Left Rear)					W11038248	Black (Right)
	W11159467	Assembly, Orifice Holder (Center Front)	5	W11291183	Burner, Grate (With Wok Ring)	19	W11130078	Antenna, WIFI
	W10892725	Assembly, Orifice Holder (Center Rear)	6	W11291179	Burner, Grate	20	7101P338-60	Screw
	W10892731	Assembly, Orifice Holder (Right Front)	7	W11323261	Screw (8-18 X 1")	21	W10130760	Bracket, Moving Console (Left)
	W10892477	Assembly, Orifice Holder (Right Rear)		W11323309	Screw (8-18 X 1/2")		W10130759	Bracket, Moving Console (Right)
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Front)	8	W11281269	Barrier, Appliance Manager	22	W10919387	Screw
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Front)	9	W11095711	Interface, User	23	W10877950	Panel, Console Knob, Single
	W10892419	Orifice, Main (15K) (Left Rear, Center Front, Right Rear)	10	W11205795	Cover, WIFI Outer	24	W10912166	Stainless Knob, Dual
	W10892438	Orifice, Simmer (5K) (Center Rear)	11	W10883433	Bezel (Rear Burners)	25	W10883172	Stainless
			12	W10881642	Bezel (Front Burners)	26	W10896366	Assembly, Light Pipe
			13	W11121390	Cap, Burner Black (Includes 6)	27		Bezel, Oven Stainless
			14	W10891746	Spreader, Flame (High) (Left Front, Right Front)	28	W10913810	Knob, Oven Temperature
				W10891974	Spreader, Flame (Low) (Left Rear, Center Front, Right Rear)		W11249669	Stainless
				W10891978	Spreader, Flame (AUX) (Center Rear)	29	W11205794	Cover, WIFI Inner
			15	W11036559	Spring Clip, Range	30	W11241511	Button Assembly, Oven Light
			16	W11249667	Knob, Oven Mode Stainless	31	W11156416	Trim, Island
			17	W11100280	Manager, Appliance (Powermax)	32	W10271524	Trim, T-Strip Black
						33	7101P426-60	Screw
						34	W11241510	Button Assembly, Oven Start
						35	3400814	Screw
						36	7101P624-60	Screw
						37	W11042504	Bumper, Grate
						38	W11110768	Assembly, WIFI Module


CHASSIS PARTS

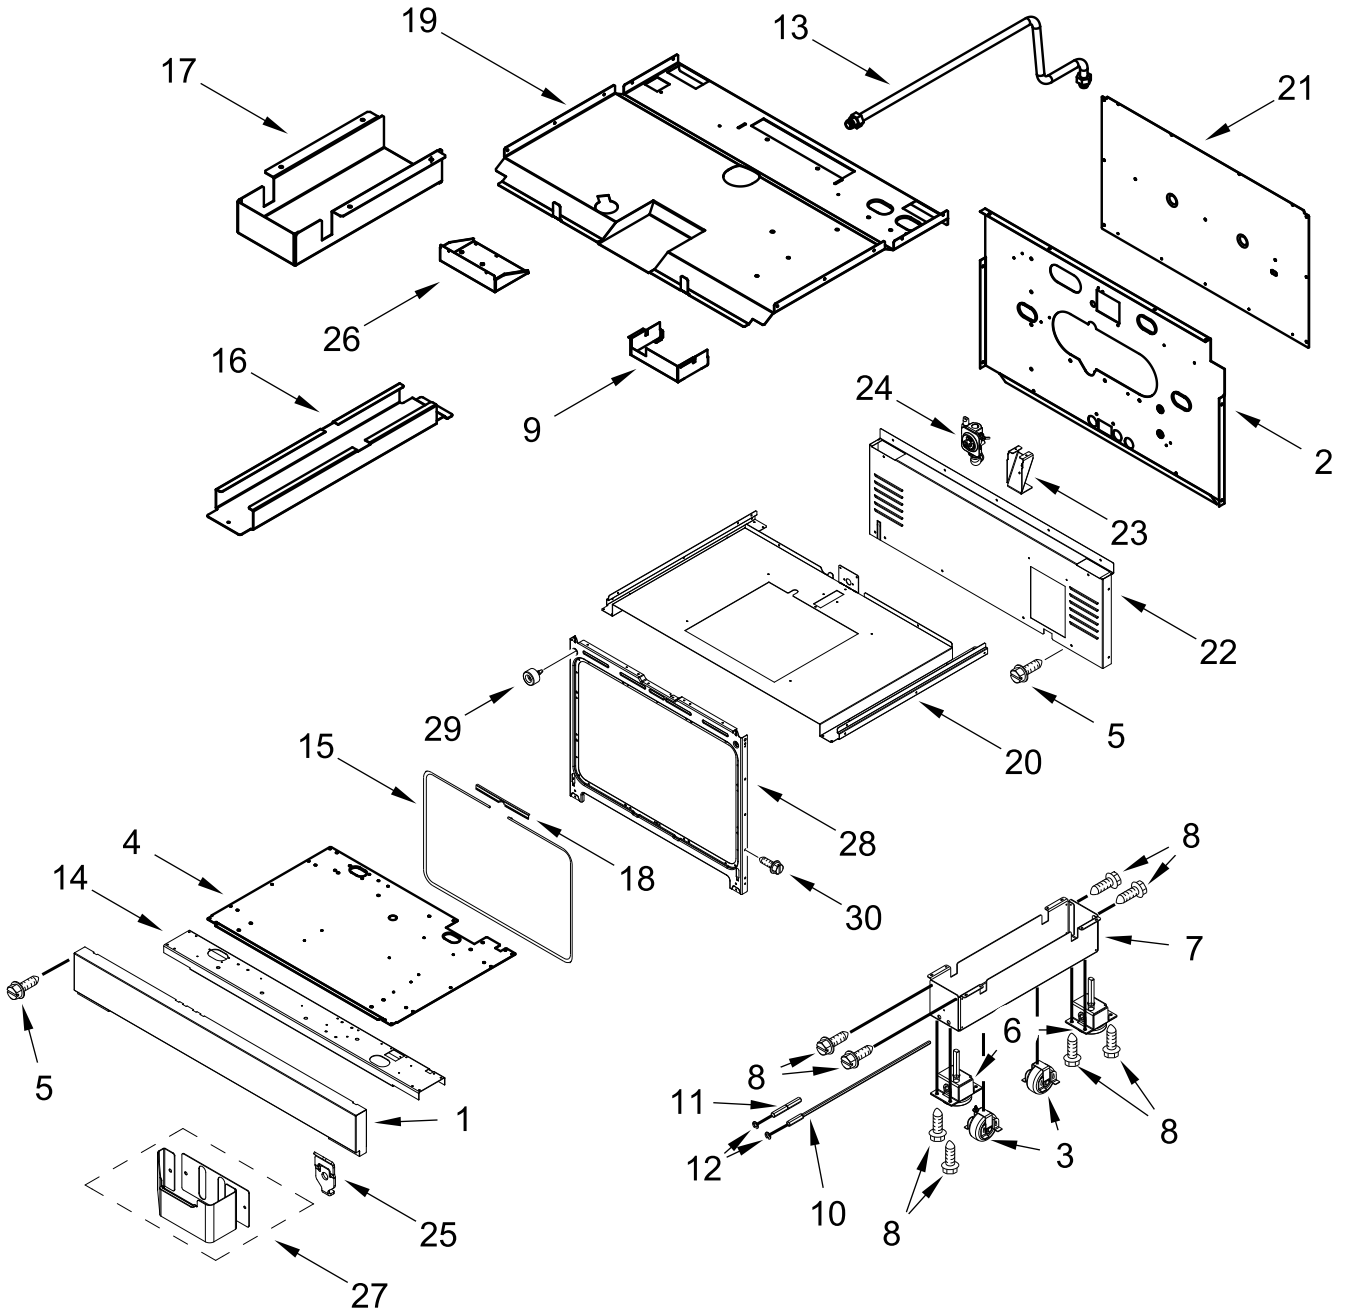

CHASSIS PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394790	Kickplate	13	W11106963	Tube, Pressure Regulator	23	W11096823	Bracket, Pressure Regulator
2	W11089589	Back, Chassis	14	W11087493	Support, Channel	24	W10449140	Regulator, Pressure
3	W10138054	Assembly, Roller	15	W11115330	Gasket, Oven (36")	25	W11036559	Spring Clip, Range
4	W11095572	Duct, Bottom (36")	16	W11050145	Duct-Chassis, Rear	26	W11106341	Drawer, Appliance Manager
5	7101P426-60	Screw	17	W11084360	Channel, Wire	27	W11199181	Cover, Foot (Left)
6	9760860	Leveler	18	W11362015	Retainer, Gasket (9" Long)		W11199178	Cover, Foot (Right)
7	W10908710	Base, Leveling Leg	19	W11037135	Top, Chassis	28	W11192749	Frame, Front
8	4449743	Screw	20	W11040801	Chassis, Bottom	29	W10351278	Bumper & Screw
9	W11106335	Cabinet, Appliance Manager	21	W11103333	Panel, Back Top	30	3196560	Screw
10	W10115869	Shaft, Long	22	W11034133	Panel, Back Bottom			
11	W10115793	Shaft, Short						
12	489504	E-Ring						


OVEN PARTS

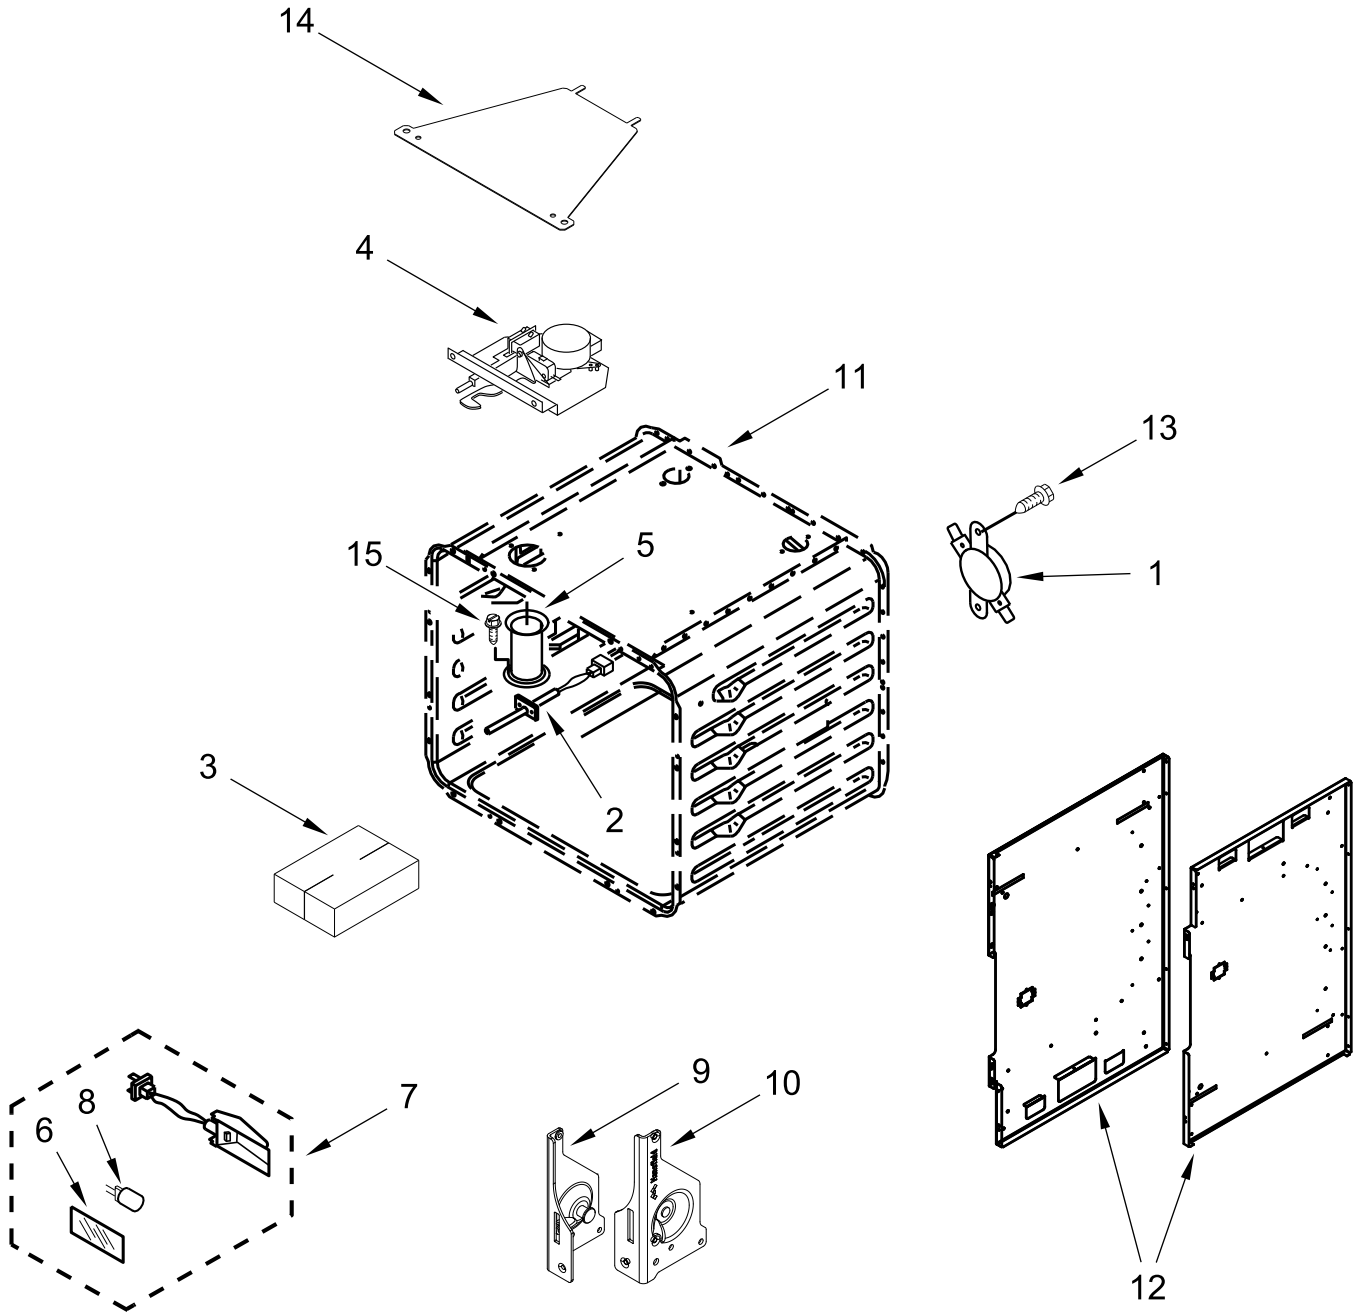

OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	4449751	Thermostat (TOD)	9	W11096294	Receiver, Hinge (Left)	14	W10160858	Cover, Latch
2	W10622170	Probe, Sensor	10	W11096293	Receiver, Hinge (Right)	15	3196176	Screw
3	W10311009	Insulation, Broil Cover						FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized	11		Liner, Oven (Not Serviced)		W10282811	Insulation, Wrap
5	W11290663	Tube, Vent	12	W11102297	Chassis, Side (Left)		W11108226	Insulation, Back, 36"
6	W10169756	Lens, Light		W11102296	Chassis, Side (Right)		3400968	Nut
7	W11223932	Assembly, Oven Light						
8	W10169757	Bulb, Light	13	7101P426-60	Screw			


VENTING PARTS

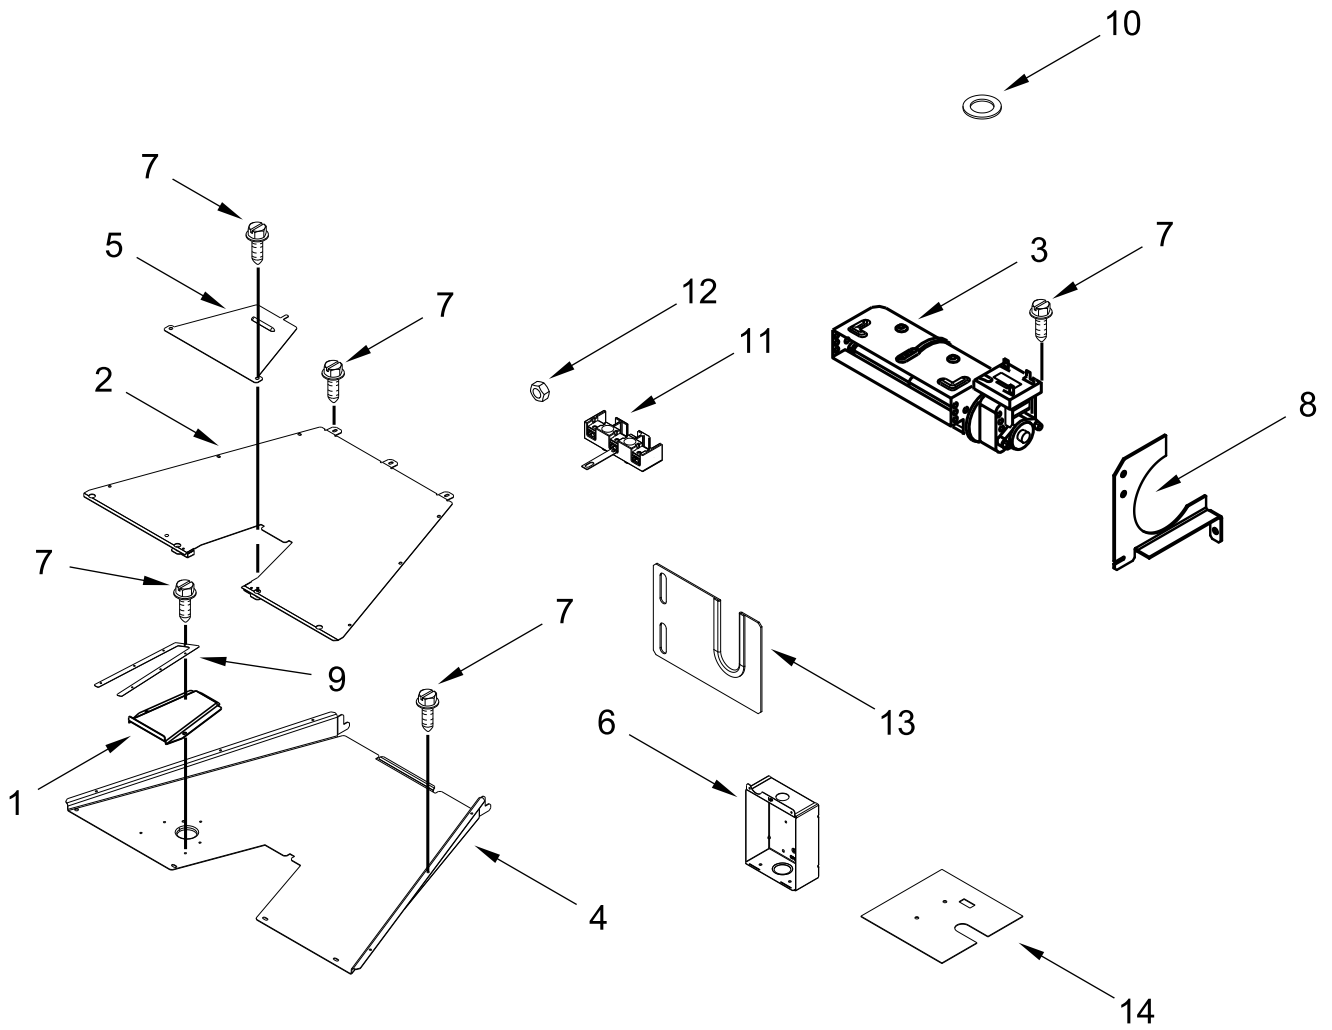

VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10818234	Slope, Exhaust Vent (30")	6	W10467022	Box, Terminal	13	W11106956	Cover, Channel
2	W11105223	Vent, Cooling Top (30")	7	7101P426-60	Screw	14	9759721	Insulator, Terminal Box
3	W11200129	Blower	8	W11047754	Bracket, Blower Mount			
4	W11105222	Vent, Cooling Bottom (30")	9	W10270397	Seal, Vent Slope (30")			
5	W11109518	Plate, Cooling Latch	10	W10270396	Seal, Chimney			
			11	9761958	Block, Terminal			
			12	112432	Nut, Hex			


OVEN DOOR PARTS

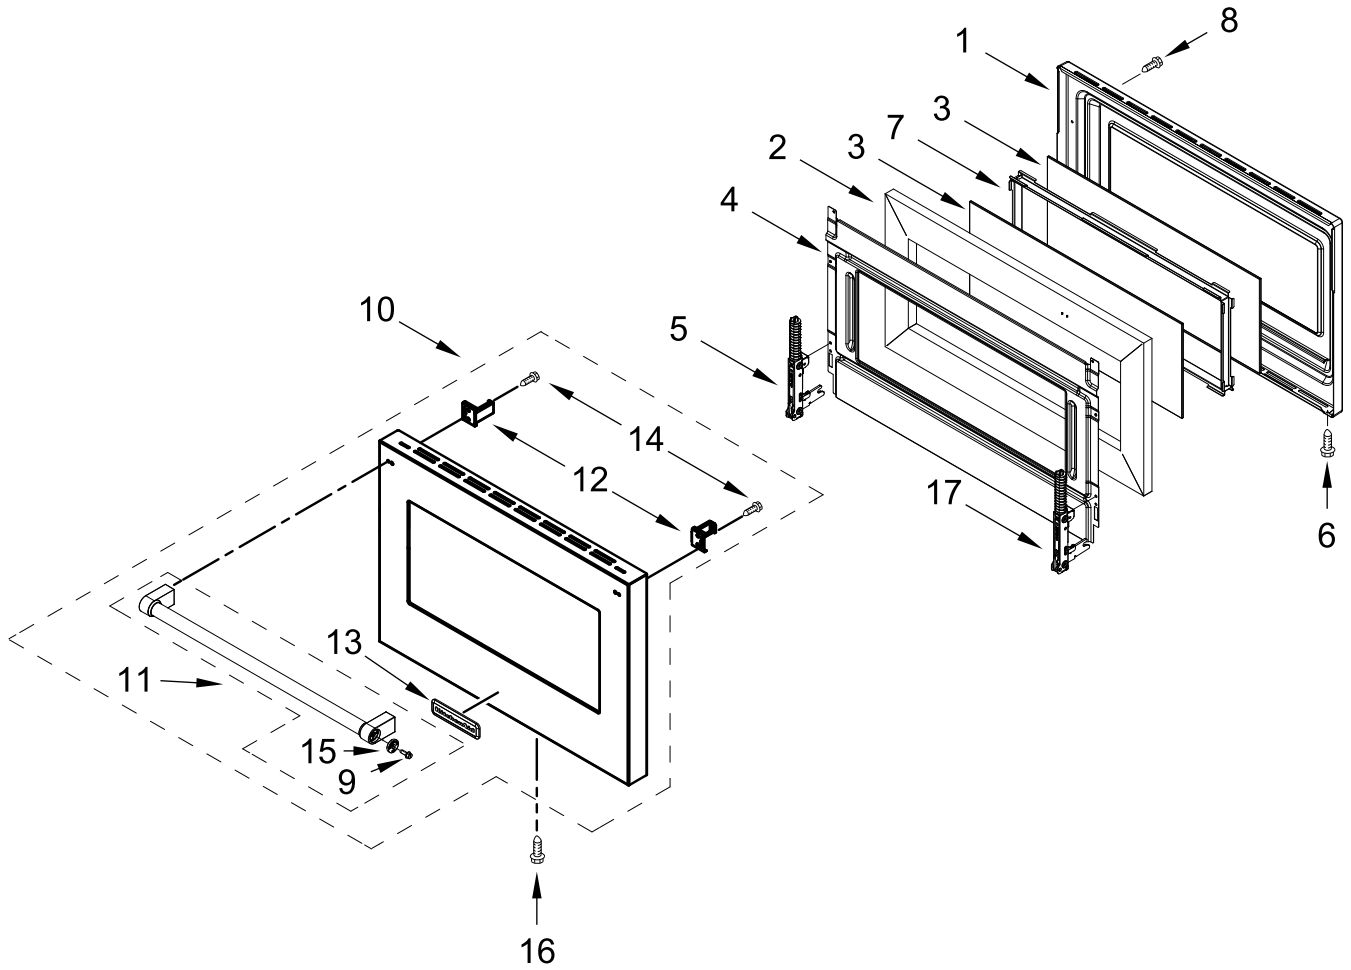

OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036772	Liner, Door	7	W11194814	Frame, Glass	12	W11197830	Bracket, Handle
2	W10884823	Insulation, Door	8	W10898280	Screw	13	W10518672	Badge
3	W11036791	Glass, Inner	9	W10656499	Screw	14	W10276043	Screw
4	W11194820	Retainer, Glass	10	W11389316	Assembly, Outer Door (Includes Handle)	15	W11221410	Medallion, Handle
5	W11096978	Hinge, Door (Left)	11	W11221411	Assembly, Door Handle	16	W10162096	Screw
6	W10607120	Screw				17	W11096977	Hinge, Door (Right)

INTERNAL OVEN PARTS

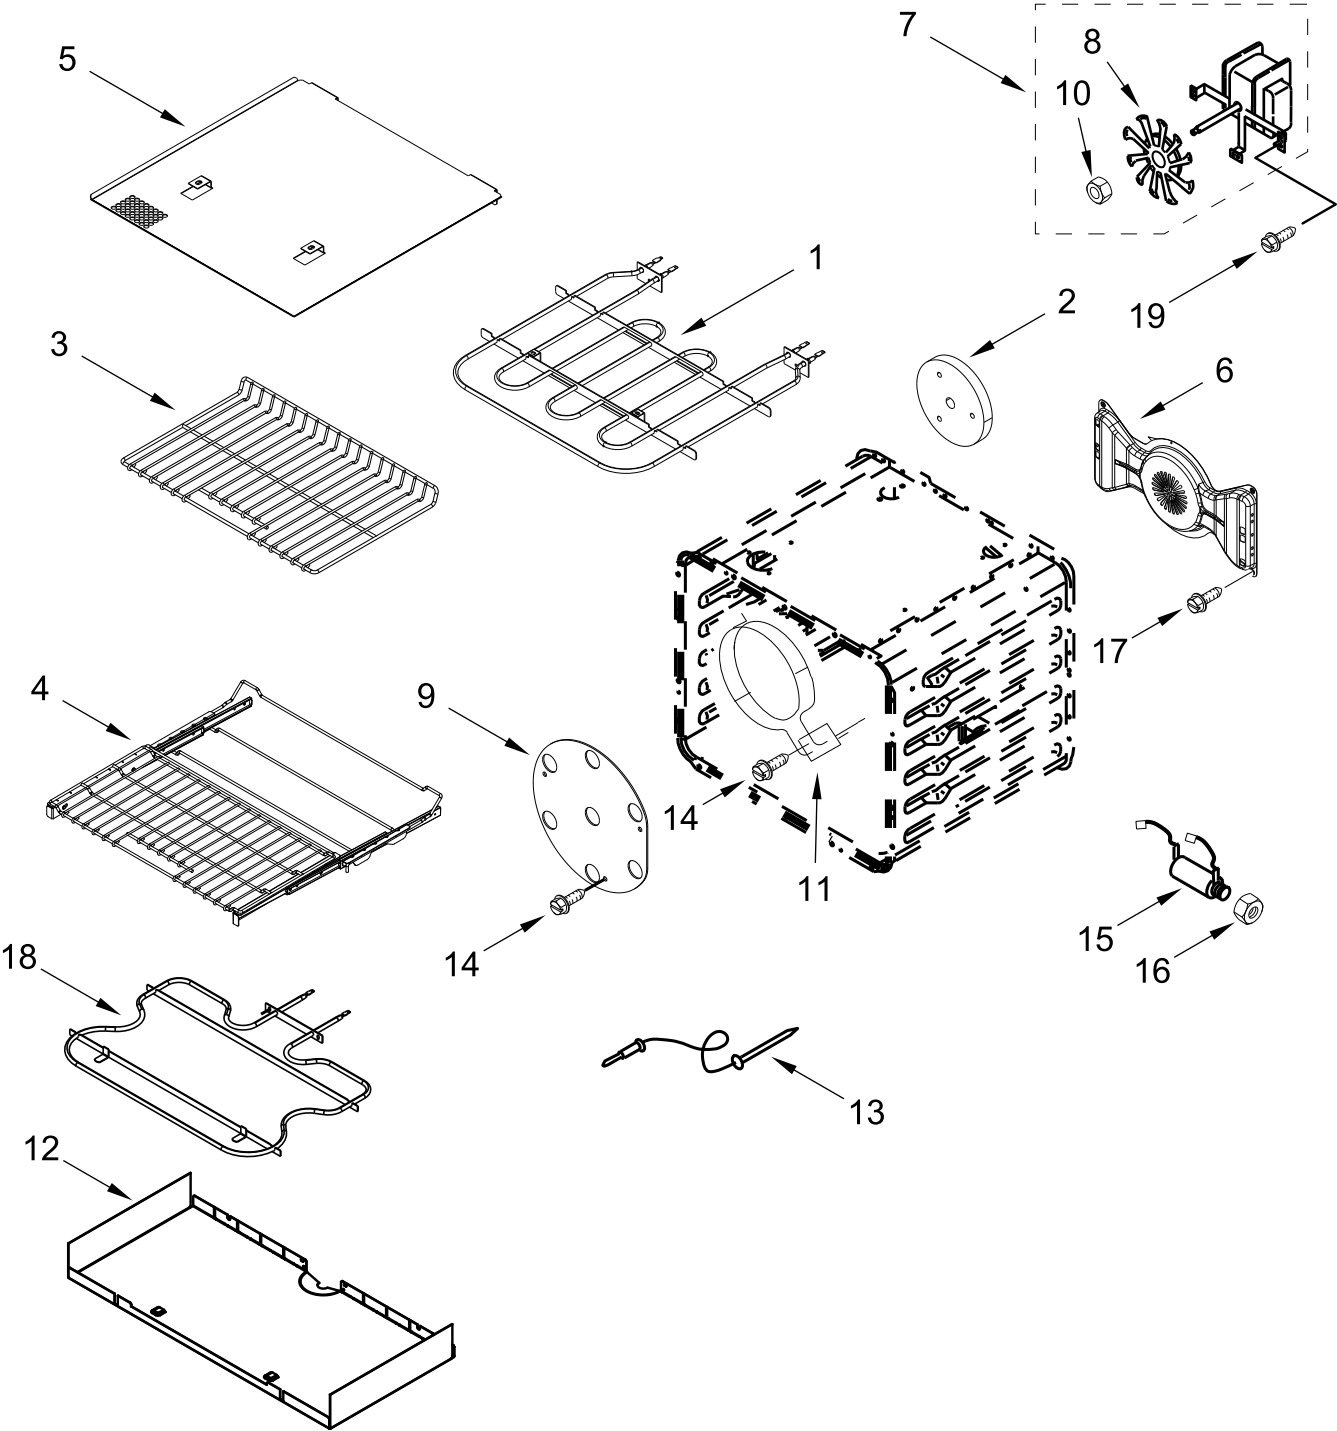

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10115994	Element, Broil	9	W10261523	Plate, Fan	17	W10739592	Screw
2	W10282821	Insulation, Convection Cover	10	W10631504	Nut, Acorn (LH)	18	W10115992	Element, Hidden Bake
3	W10822069	Rack, Oven	11	9762242	Element, Convection Steam	19	W10720084	Screw
4	W11108464	Rack, Sliding Oven	12	W11106922	Tray, Hidden Bake			
5	W10160856	Shield, Element Broil	13	9755542	Probe, Temperature			
6	W11212180	Baffle, Convection	14	4449154	Screw			
7	W10722667	Fan, Convection	15	9755543	Jack, Meat Probe			
8	W10631503	Blade, Fan	16	W11033111	Nut, Locking			

OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude Medallion, Handle
	W11368841SI	Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841CF	Copper
	W11368841BN	Bronze
	W11368841DD	Dark Blue