


**KitchenAid®**

**48" SMART COMMERCIAL-STYLE GAS RANGE  
Includes Griddle**

**MODELS:**

KFGC558JAV00 (Matte Avocado)


# BURNER BOX AND GRIDDLE PARTS

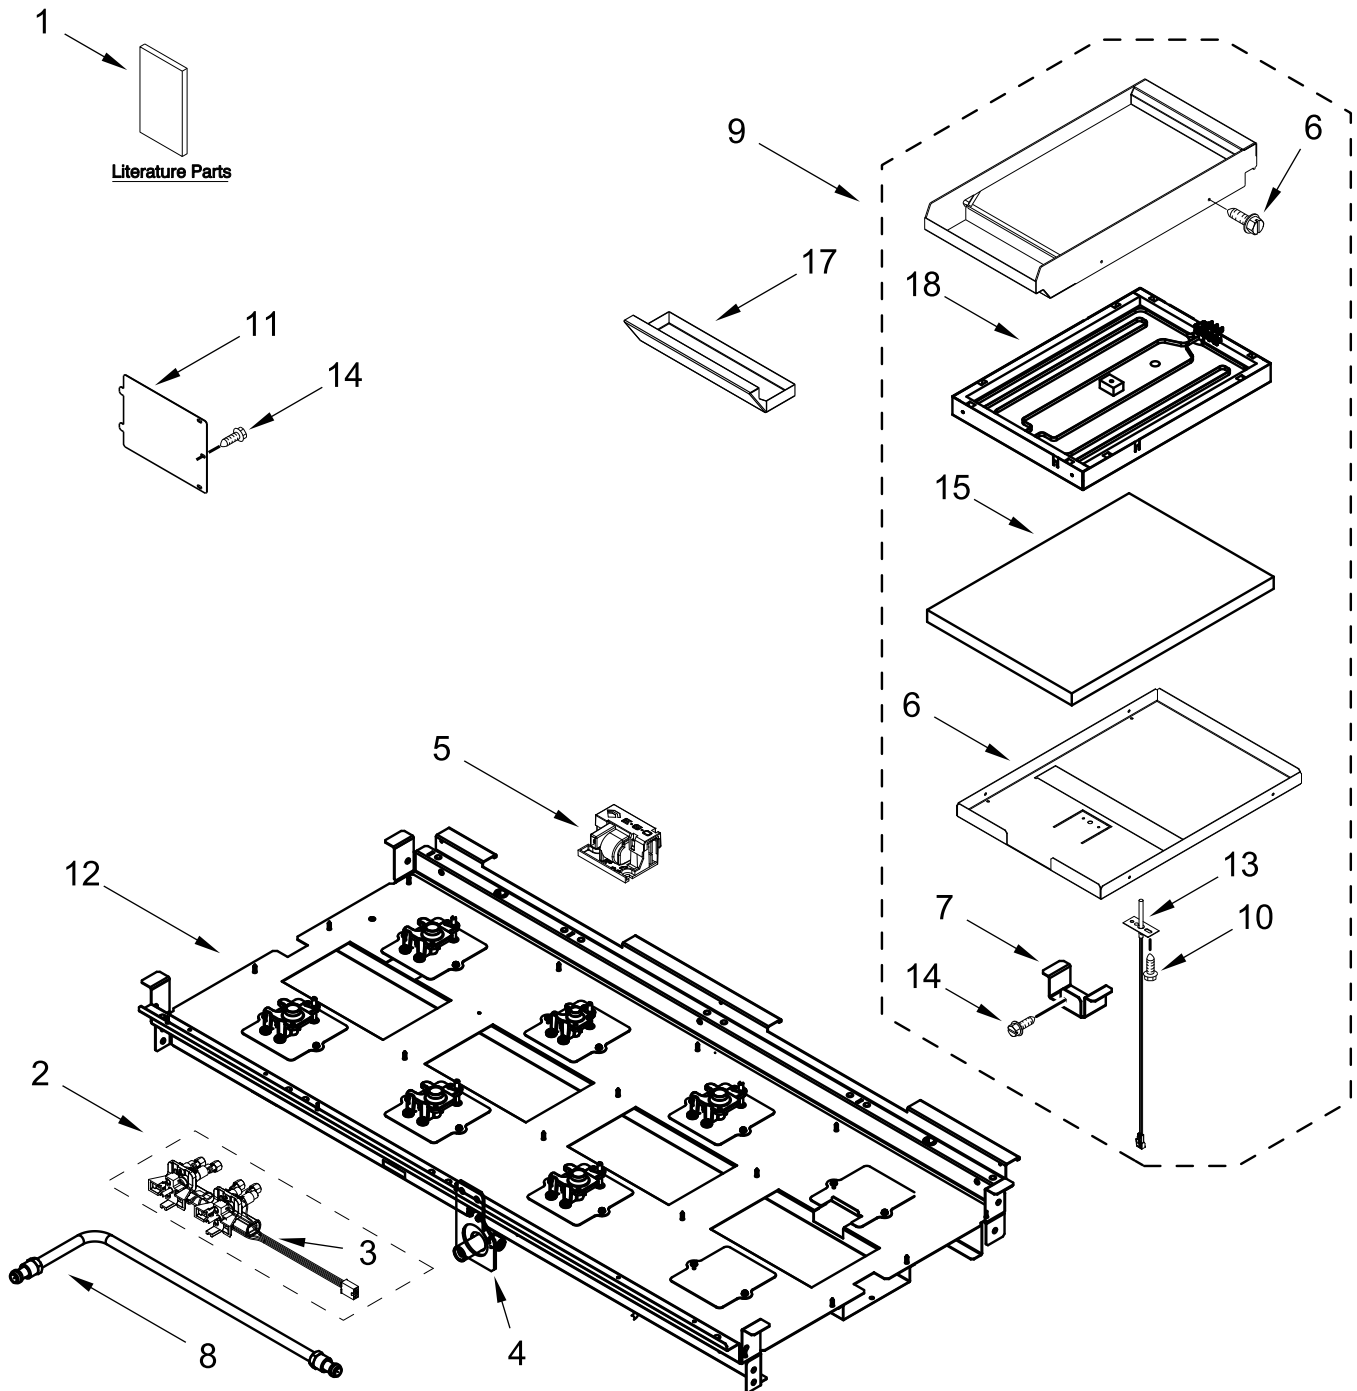

# BURNER BOX AND GRIDDLE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	3	W10903728	Switch, Harness	16	3196176	Screw
	W11177370	Guide, Use and Care	4	W11121194	Bracket, Manifold	17	W10276497	Tray, Griddle Drip
	W11177374	Instructions, Installation	5	W11121317	Module, Spark	18	W10891698	Element, Griddle
	W11184759	Guide, Internet Connectivity	6	W11330430	Tray, Griddle Insulation			FOLLOWING PARTS NOT ILLUSTRATED
	W11364680	Guide, Quick Start	7	W11121384	Bracket, Griddle-RTD		W11200304	Harness, Main (48")
	W11202390	Diagram, Wiring	8	W10892809	Tube, Manifold Supply (Left)		W10903727	Harness, Griddle
	W11202292	Sheet, Tech		W10892804	Tube, Manifold Supply (Left Center)		W11200329	Harness, Cooktop
2	W11183720	Assembly, Valve Manifold (Left Front And Left Rear)		W10892805	Tube, Manifold Supply (Right Center)		W10780278	Harness, Door Lock
	W11036612	Assembly, Valve Manifold (Left Center Front And Left Center Rear)	9	W10891745	Assembly, Griddle Module		W11200318	Harness, Communication
	W10892994	Assembly, Valve Manifold (Right Center Front And Right Center Rear)	10	3196160	Screw		W11242785	Harness, WIFI
			11	W10115843	Cover, Ignition		W10624584	Cord, Power
			12		Box, Burner (Not Serviced)		4450800	Screw, Grounding
			13	W10891584	Sensor, Griddle		W10253333	Bracket, Anti-Tip
			14	7101P426-60	Screw		7101P485-60	Screw, Anti-Tip Kit
			15	W11121383	Insulation, Griddle		W11238042	Kit, LP Conversion
							W11311196	Ignitor Wire, Wire-Electrode Bake
							W11311197	Ignitor Wire, Wire-Electrode Broil


# COOKTOP, BURNER AND GRATE PARTS

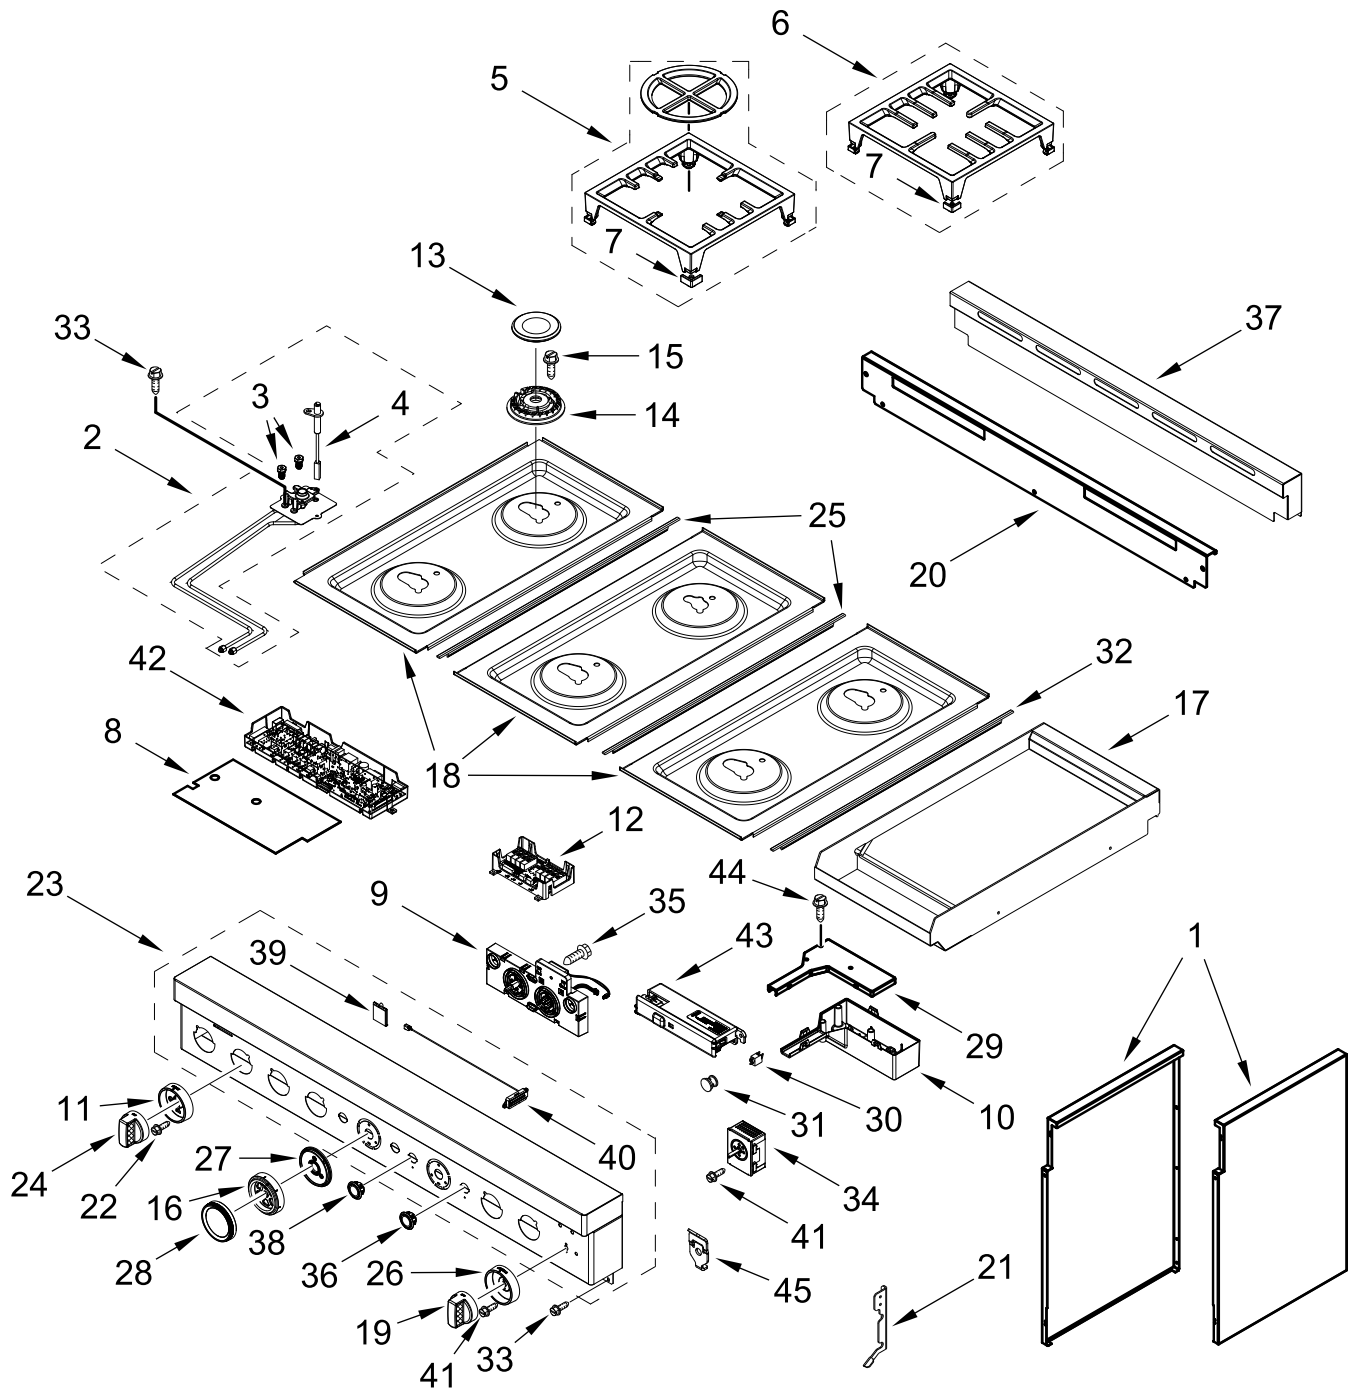

# COOKTOP, BURNER AND GRATE PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11111429	Panel, Cabinet Side (Left)	8	W11281269	Barrier, Appliance Manager	22	W10919387	Screw
	W11111428	Panel, Cabinet Side (Right)	9	W11219194	Interface, User	23	W10877951	Panel, Control
2	W10892793	Assembly, Orifice Holder (Left Front)	10	W11205795	Cover, WIFI Outer	24		Knob, Burner
	W10892492	Assembly, Orifice Holder (Left Rear)	11	W10881642	Bezel (Front Burners)	W10912166		Stainless (Left Rear, Left Center Front, Right Center Rear)
	W11159461	Assembly, Orifice Holder (Left Center Front)		W10883433	Bezel (Rear Burners)	W10883172		Stainless (Left Front, Left Center Rear, Right Center Front)
	W10892808	Assembly, Orifice Holder (Left Center Rear)	12	W10871065	Manager, Appliance (Expansion)	25		Trim, T-Strip
	W10892505	Assembly, Orifice Holder (Right Center Front)	13		Cap, Burner	W10271524		Black
	W10892446	Assembly, Orifice Holder (Right Center Rear)		W11121390	Black (Includes 6)	26	W10886700	Bezel, Griddle
3	W10892422	Orifice, Main (17.4K) (Left Front, Right Center Front)	14	W10891746	Spreader, Flame (High) (Left Front, Right Center Front)	27		Bezel, Oven
	W10892419	Orifice, Main (15K) (Left Rear, Left Center Front, Right Center Rear)		W10891974	Spreader, Flame (Low) (Left Rear, Left Center Front, Right Center Rear)	W10913810		Stainless Knob, Oven Temperature
	W10892435	Orifice, Simmer (2.6K) (Left Front, Right Center Front)			Spreader, Flame (AUX) (Left Center Rear)	W11264988		Stainless (For 18" Oven)
	W10892438	Orifice, Simmer (5K) (Left Center Rear)	15	W11323261	Screw (8-18 X 1")	W11249669		Stainless (For 30" Oven)
4	W11238757	Igniter (Left Front, Right Center Front)		W11323309	Screw (8-18 X 1/2")	29	W11205794	Cover, WIFI Inner
	W11114379	Igniter (Left Rear)	16		Knob, Oven Mode	30	W10116114	Light, Indicator Housing
	W10892340	Igniter (Left Center Front, Left Center Rear, Right Center Rear)		W11264991	Stainless (For 18" Oven)	31	W10294500	Lens, Indicator Light
5	W11291183	Burner, Grate (With Wok Ring)		W11264992	Stainless (For 30" Oven)	32	W10291193	Trim, L-Strip
6	W11291179	Burner, Grate	17		Assembly, Griddle Module (Part Number Shown On Burner Box and Griddle Parts Page)	33	7101P426-60	Screw
7	W11042504	Bumper, Grate				34	W11033497	Control, Griddle
			18		Panel, Cooktop	35	3400814	Screw
				W11038235	Black (Left)	36	W11241510	Button Assembly, Oven Start
				W11038257	Black (Left Center)	37	W11183087	Trim, Island
				W11038243	Black (Right Center)	38	W11241511	Button Assembly, Oven Light
			19		Knob, Griddle	39	W10896366	Assembly, Light Pipe
				W10912167	Stainless	40	W11130078	Antenna, WIFI
			20	W10323252	Trim, Island Insert	41	7101P309-60	Screw
			21	W10130760	Bracket, Moving Console (Left)	42	W11172295	Manager, Appliance (Powermax)
				W10130759	Bracket, Moving Console (Right)	43	W11110768	Assembly, WIFI Module
						44	7101P624-60	Screw
						45	W11036559	Spring Clip, Range


# 48" CHASSIS PARTS

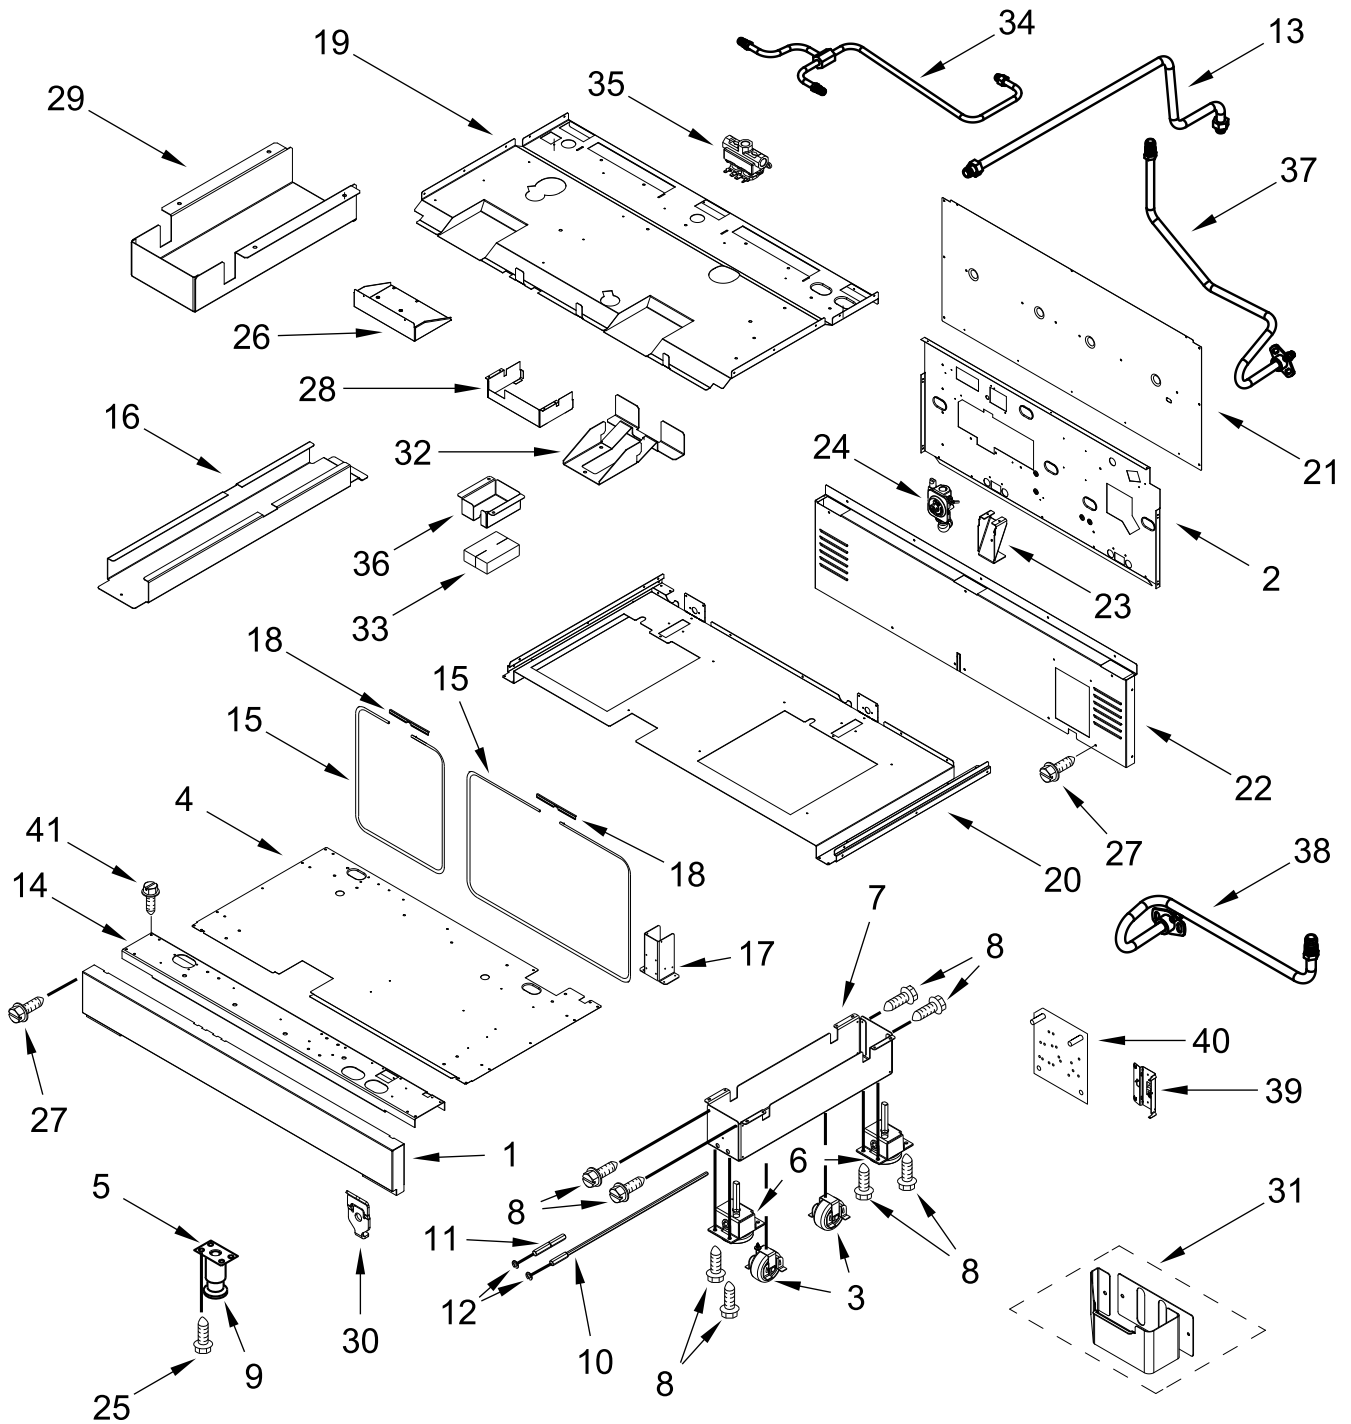

# 48" CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11394822	Kickplate	16	W11050145	Duct-Chassis, Rear	29	W11368831	Channel, Wire
2	W11324987	Back, Chassis	17	W10115819	Column, Central	30	W11036559	Spring Clip, Range
3	W10138054	Assembly, Roller	18	W11362015	Retainer, Gasket (9" Long)	31	W11199181	Cover, Foot (Left)
4	W11110260	Duct, Bottom (48")					W11199178	Cover, Foot (Right)
5	9759118	Plate, Mounting	19	W11324984	Top, Chassis	32	W11190223	Bracket, Bake Alignment
6	9760860	Leveler	20	W11040800	Chassis, Bottom	33	W10311009	Insulation, Broil Cover
7	W10908710	Base, Leveling Leg	21	W11103335	Panel, Back Top	34	W11112366	Tube, Valve (Double)
8	4449743	Screw	22	W11034123	Panel, Back Bottom	35	W10145680	Valve, Dual
9	9759117	Foot, Dual Fuel	23	W11096823	Bracket, Pressure Regulator	36	W10310985	Cover, Broil
10	W10115869	Shaft, Long	24	W10896959	Regulator, Pressure	37	W11109238	Tube, Broil
11	W10115793	Shaft, Short	25	3400518	Screw	38	W11106980	Tube, Bake
12	489504	E-Ring	26	W11106341	Drawer, Appliance Manager	39	W10145362	Bracket-Board, DSI
13	W11181648	Tube, Pressure Regulator	27	7101P426-60	Screw	40	W10511278	Module, Spark DSI
14	W11369238	Support, Channel	28	W11369237	Cabinet, Appliance Manager	41	3196560	Screw
15	W11115328	Gasket, Oven (30")						
	W11115326	Gasket, Oven (18")						

# 30" OVEN PARTS

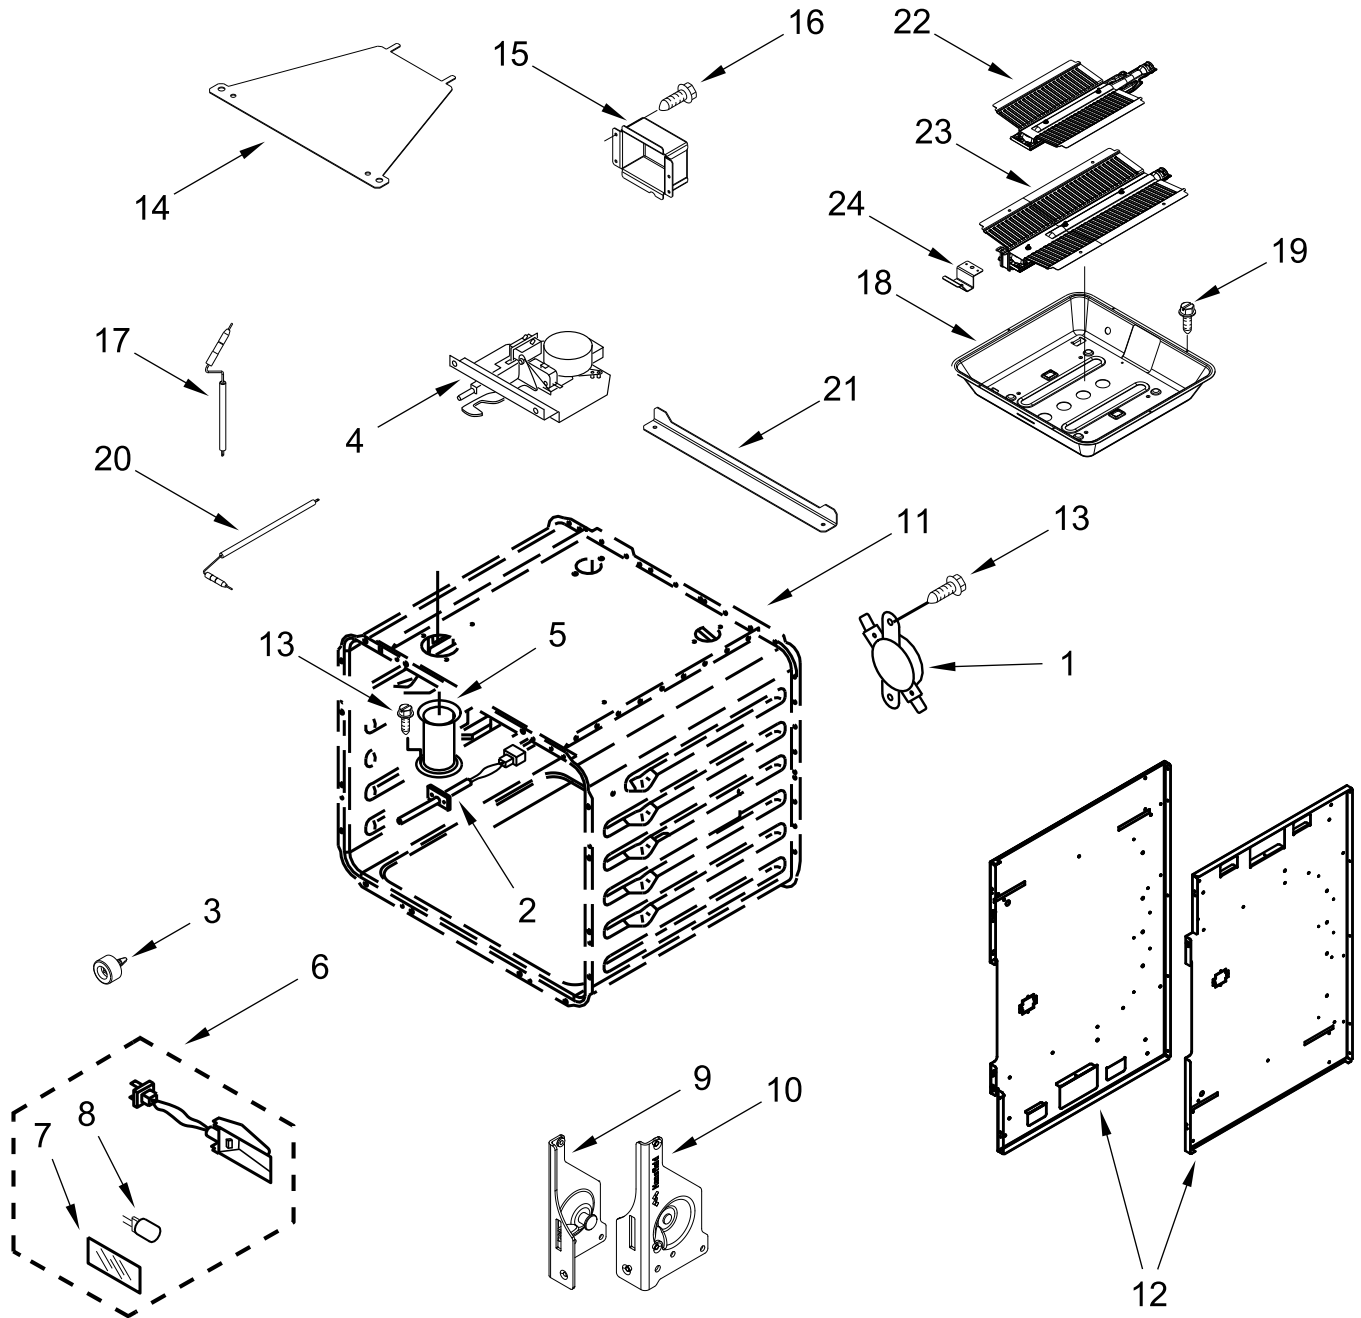




# 30" OVEN PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	4450249	Thermostat (TOD)	12	W11102297	Chassis, Side (Left)	23	W10311335	Burner, Broil
2	W10622170	Probe, Sensor		W11102296	Chassis, Side (Right)	24	W10308040	Bracket, Bake Burner
3	W10351278	Bumper & Screw						FOLLOWING PARTS NOT ILLUSTRATED
4	W10830016	Latch, Motorized	13	7101P426-60	Screw			
5	W10145743	Tube, Vent	14	W10160858	Cover, Latch	W10282810		Insulation, Wrap, 30"
6	W11223932	Assembly, Oven Light	15	W10308051	Box, Broil	W11109145		Insulation, Back, 30"
7	W10169756	Lens, Light	16	7101P434-60	Screw	W10299354		Insulation, Bottom
8	W10169757	Bulb, Light	17	W11182863	Electrode, Broil		3400968	Nut
9	W11096294	Receiver, Hinge (Left)	18	W10145744	Support, Bake Pan			
10	W11096293	Receiver, Hinge (Right)	19	12992902	Screw			
			20	W11205400	Electrode, Bake			
11		Liner, Oven (Not Serviced)	21	W10317437	Bracket, Broil Standoff			
			22	W10878504	Burner, Bake			


# 18" OVEN PARTS

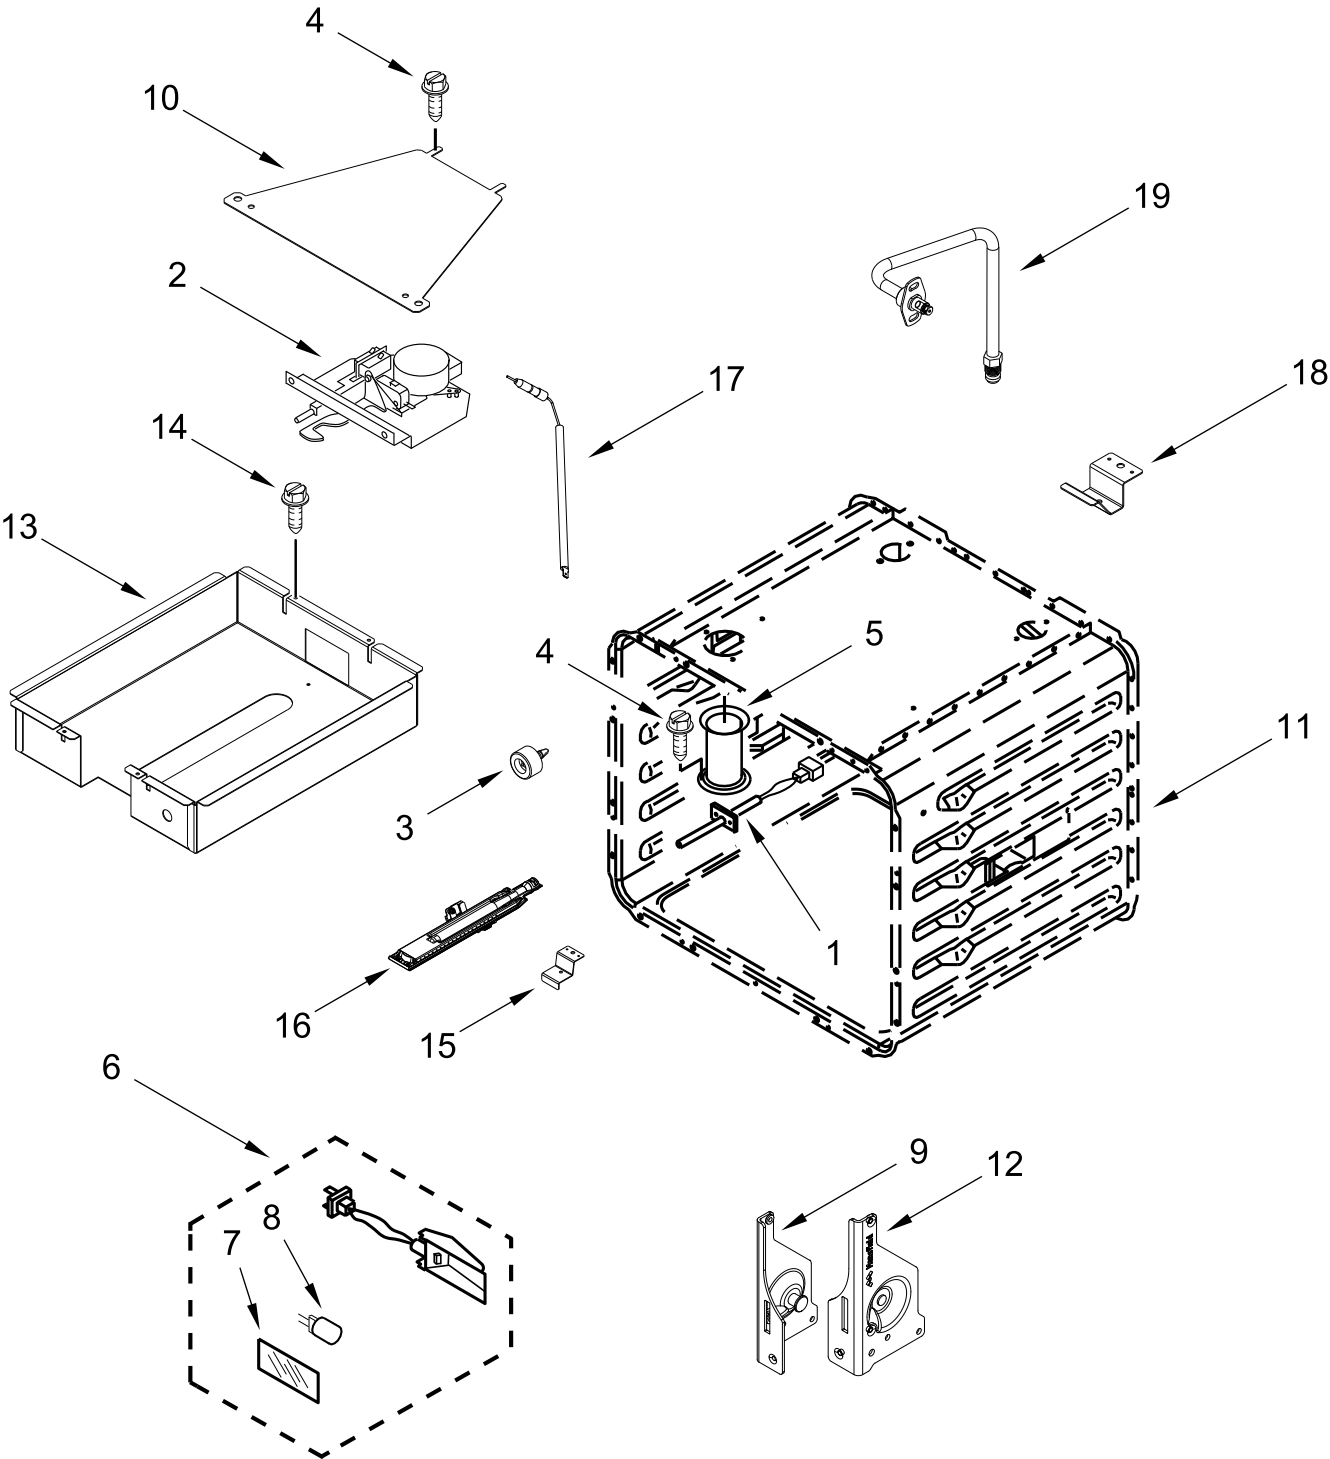

# 18" OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10622170	Probe, Sensor	12	W11096293	Receiver, Hinge (Right)	19	W10145706	Tube, Bake
2	W10830016	Latch, Motorized						FOLLOWING PARTS NOT ILLUSTRATED
3	W10351278	Bumper & Screw	13	W10145651	Support, Bake Pan			
4	7101P426-60	Screw	14	12992902	Screw		W10282820	Insulation, Wrap, 18"
5	W10145743	Tube, Vent	15	W10308041	Bracket, Bake Burner 18" Cavity		W10299353	Insulation, Back, 18"
6	W11223932	Assembly, Oven Light	16	W10878505	Burner, Bake W/O Spreader		W10299355	Insulation, Bottom
7	W10169756	Lens, Light					3400968	Nut
8	W10169757	Bulb, Light	17	W11205400	Electrode, Bake			
9	W11096294	Receiver, Hinge (Left)	18	W10308040	Bracket, Bake Burner			
10	W10160858	Cover, Latch						
11		Liner, Oven (Not Serviced)						


# VENTING PARTS

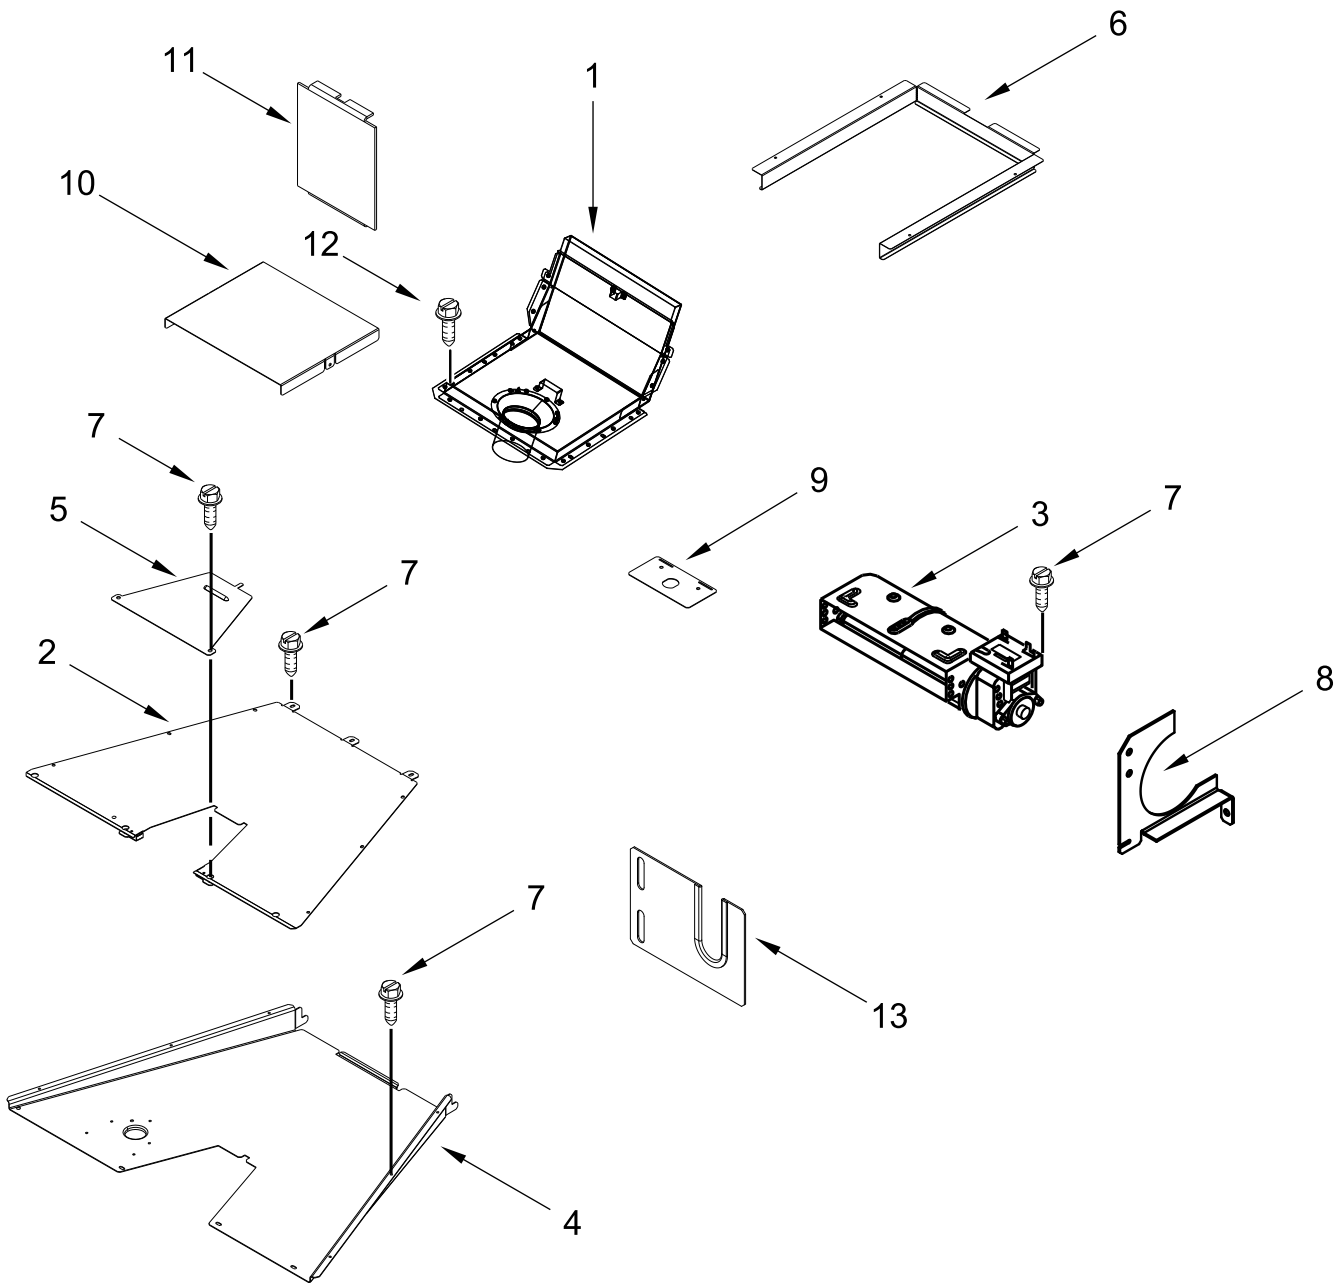

# VENTING PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10340579	Vent, Chimney Box (30" / 36")	4	W11091676	Vent, Cooling Bottom (30")	8	W11047754	Bracket, Blower Mount
	W10340583	Vent, Chimney Box (18")		W11113377	Vent, Cooling Bottom (18")	9	W10115855	Holder, Strain Relief
2	W11105221	Vent, Cooling Top (30")	5	W11109518	Plate, Cooling Latch	10	W10246086	Retainer, Insulation
	W11113379	Vent, Cooling Top (18")	6	W10145363	Duct, Primary Air (30")	11	W10246087	Insulation, Chimney
3	W11200129	Blower		W10145364	Duct, Primary Air (18")	12	3400805	Screw (Zinc)
			7	7101P426-60	Screw	13	W11106956	Cover, Channel


# 30" OVEN DOOR PARTS

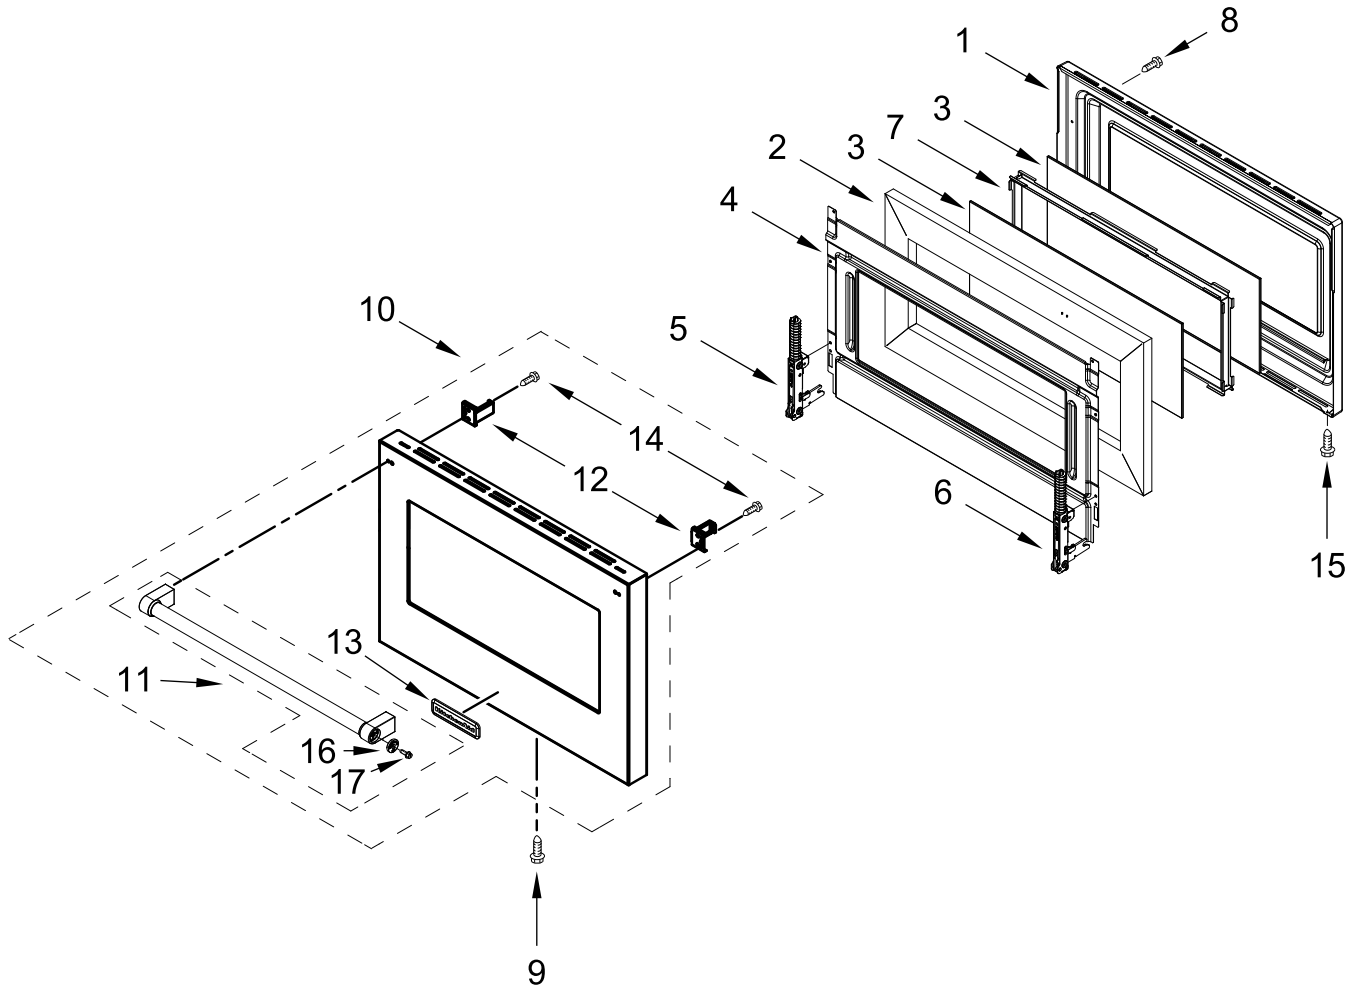

# 30" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036771	Liner, Door	8	W10898280	Screw	14	W10276043	Screw
2	W10321285	Insulation, Door	9	W10162096	Screw	15	W10607120	Screw
3	W11184409	Glass, Inner	10	W11389303	Assembly, Outer Door (Includes Handle)	16	W11221410	Medallion, Handle
4	W11194821	Retainer, Glass	11	W11221412	Assembly, Door Handle	17	W10656499	Screw
5	W11390105	Hinge, Door (Left)	12	W11197830	Bracket, Handle			
6	W11390124	Hinge, Dual (Right)	13	W10518672	Badge			
7	W10272594	Frame, Glass						

# 18" OVEN DOOR PARTS

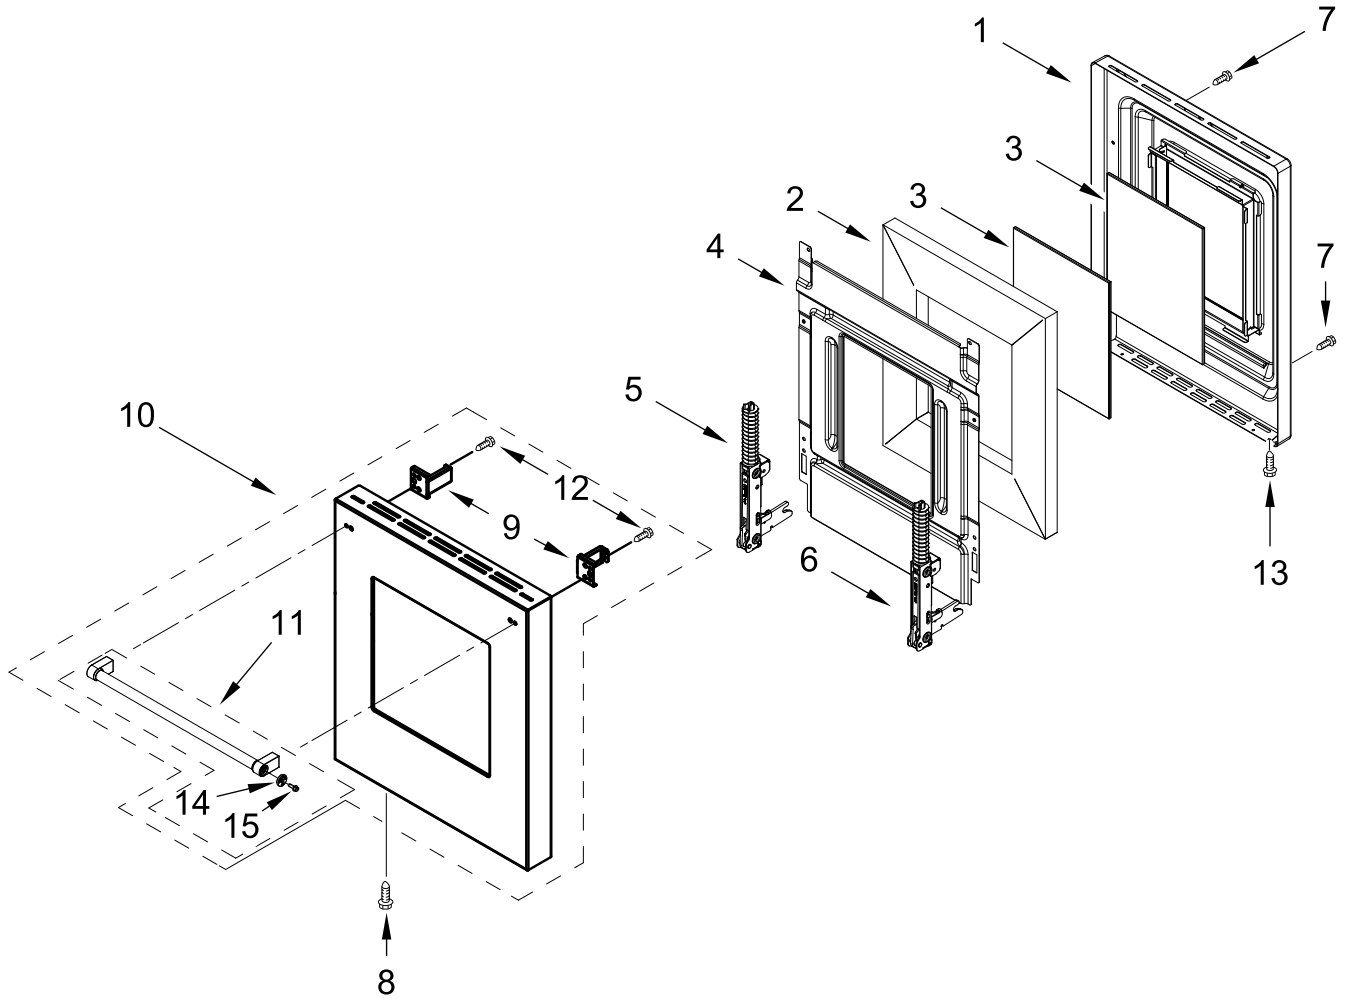




# 18" OVEN DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11036770	Liner, Door	7	W10898280	Screw	12	W10276043	Screw
2	W10884821	Insulation, Door	8	W10162096	Screw	13	W10607120	Screw
3	W11036789	Glass, Inner	9	W11197830	Bracket, Handle	14	W11221410	Medallion, Handle
4	W11194818	Retainer, Glass	10	W11389278	Assembly, Outer Door (Includes Handle)	15	W10656499	Screw
5	W11390106	Hinge, Door (Left)	11	W11221413	Handle, Door			
6	W11390125	Hinge, Door (Right)						


# 30" INTERNAL OVEN PARTS

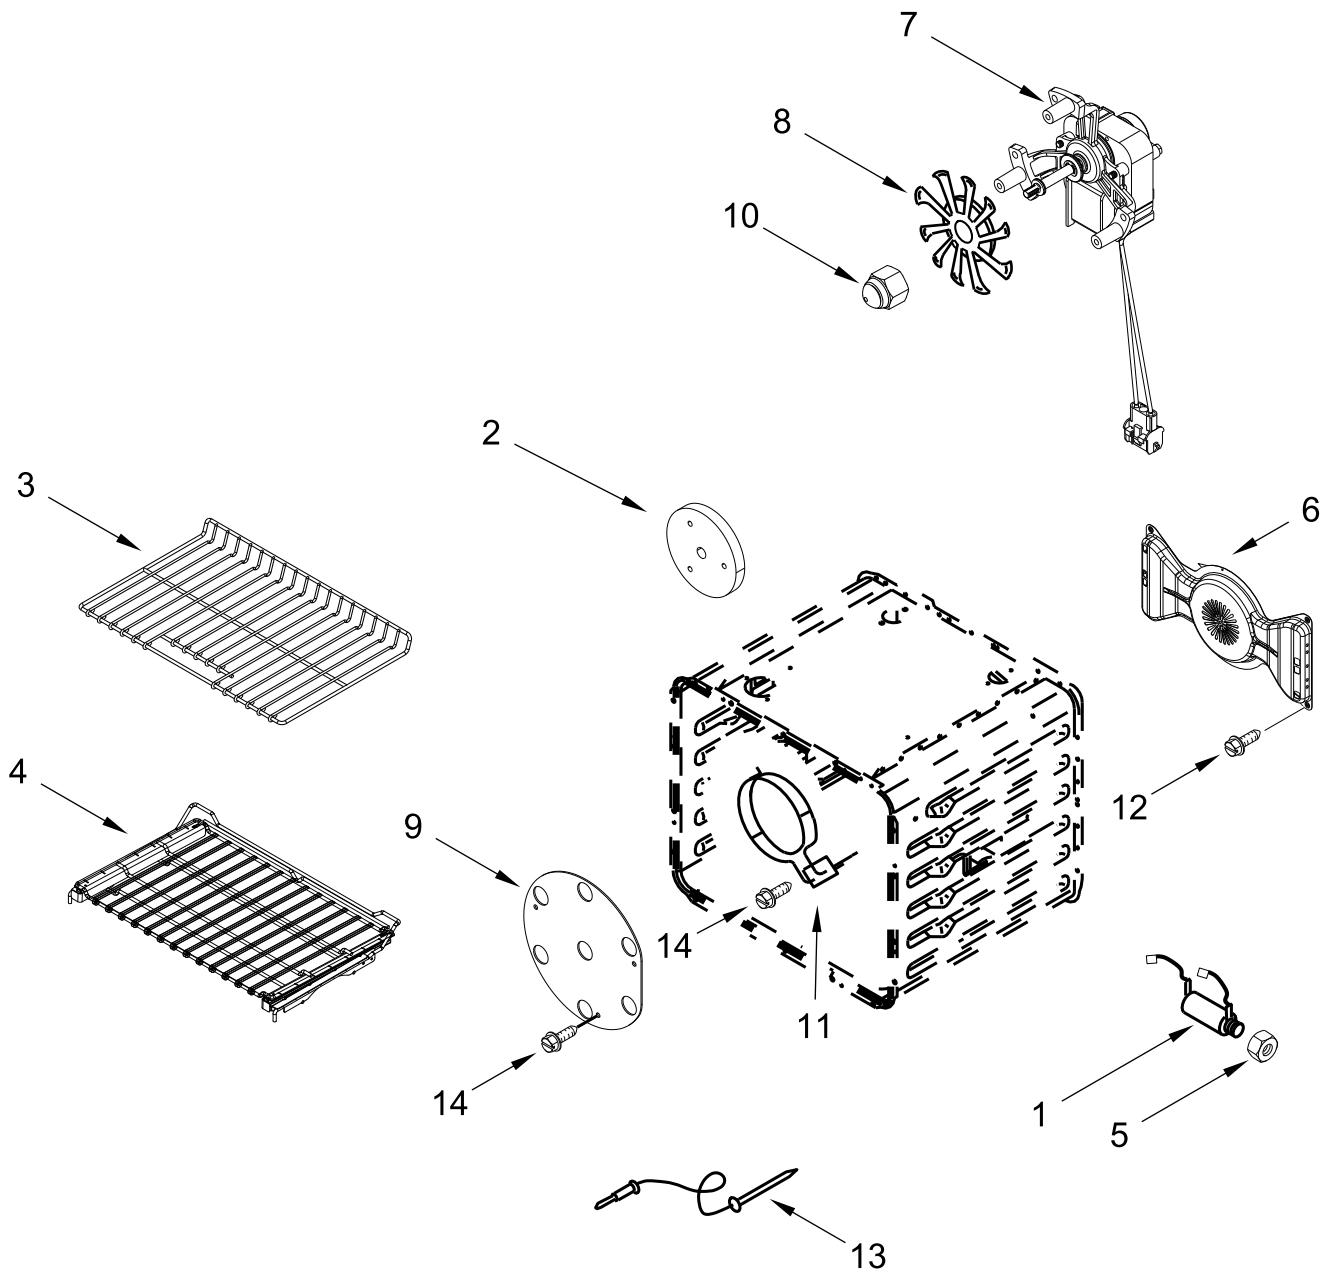

# 30" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	9755543	Jack, Meat Probe	7	W10631506	Motor, Convection	13	9755542	Probe, Temperature
2	W10282821	Insulation, Convection Cover	8	W10631503	Blade, Fan	14	4449154	Screw
3	W10570887	Rack, Oven	9	W10261523	Plate, Fan			
4	W11108461	Rack, Oven (Sliding)	10	W10631504	Nut, Acorn (LH)			
5	W11033111	Nut, Locking	11	W11098505	Element, Convection Heat			
6	W11212180	Baffle, Convection	12	W10739592	Screw			

# 18" INTERNAL OVEN PARTS

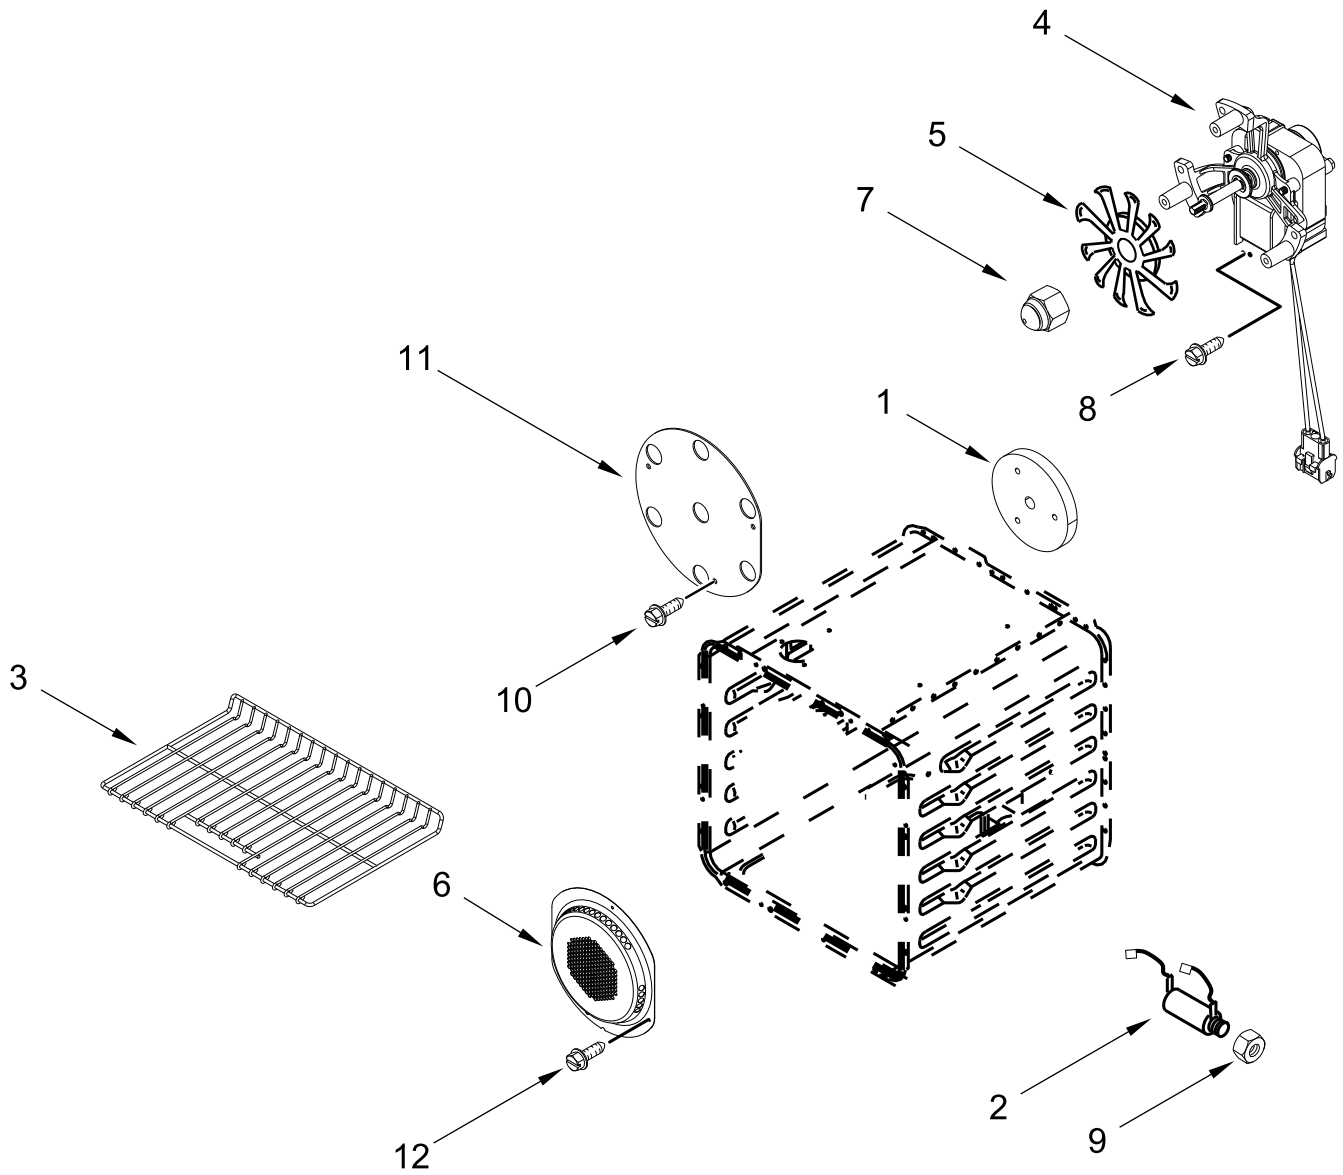

# 18" INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10282821	Insulation, Convection Cover	5	W10631503	Blade, Fan	10	W10720084	Screw
2	9755543	Jack, Meat Probe	6	W11211948	Cover, Fan	11	W10261523	Plate, Fan
3	W10570879	Rack, Oven (18")	7	W10631504	Nut, Acorn (LH)	12	W10739592	Screw
4	W10631506	Motor, Convection	8	4449154	Screw			
			9	W11033111	Nut, Locking			

# OPTIONAL PARTS (NOT INCLUDED)

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
		ACCESSORY PARTS
	4396920	Stainless Steel Cleaner & Polish
	W10160195	Cover, Grill/Griddle
	W10216179	Ring, Wok Backsplash
	W10285449	48" With Shelves
	31464	Cleaner, Cooktop
	W10123240	Rack, Broiler Pan & Roasting
	8284755	Backsplash (Adjustable)
	JXA9001CDP	Stainless Steel Wallsplash
	W11238043	Kit, High Altitude  Medallion, Handle
	W11368841SI	Silver
	W11368841BO	Black ANO
	W11368841RE	Red ANO
	W11368841MP	Marscapone (Cream)
	W11368841NE	New Gold
	W11368841BN	Bronze
	W11368841DD	Dark Blue