



KitchenAid®

30" ELECTRIC FREESTANDING DOUBLE OVEN RANGE

MODELS:

YKFED500ESS3 (Stainless)


COOKTOP PARTS

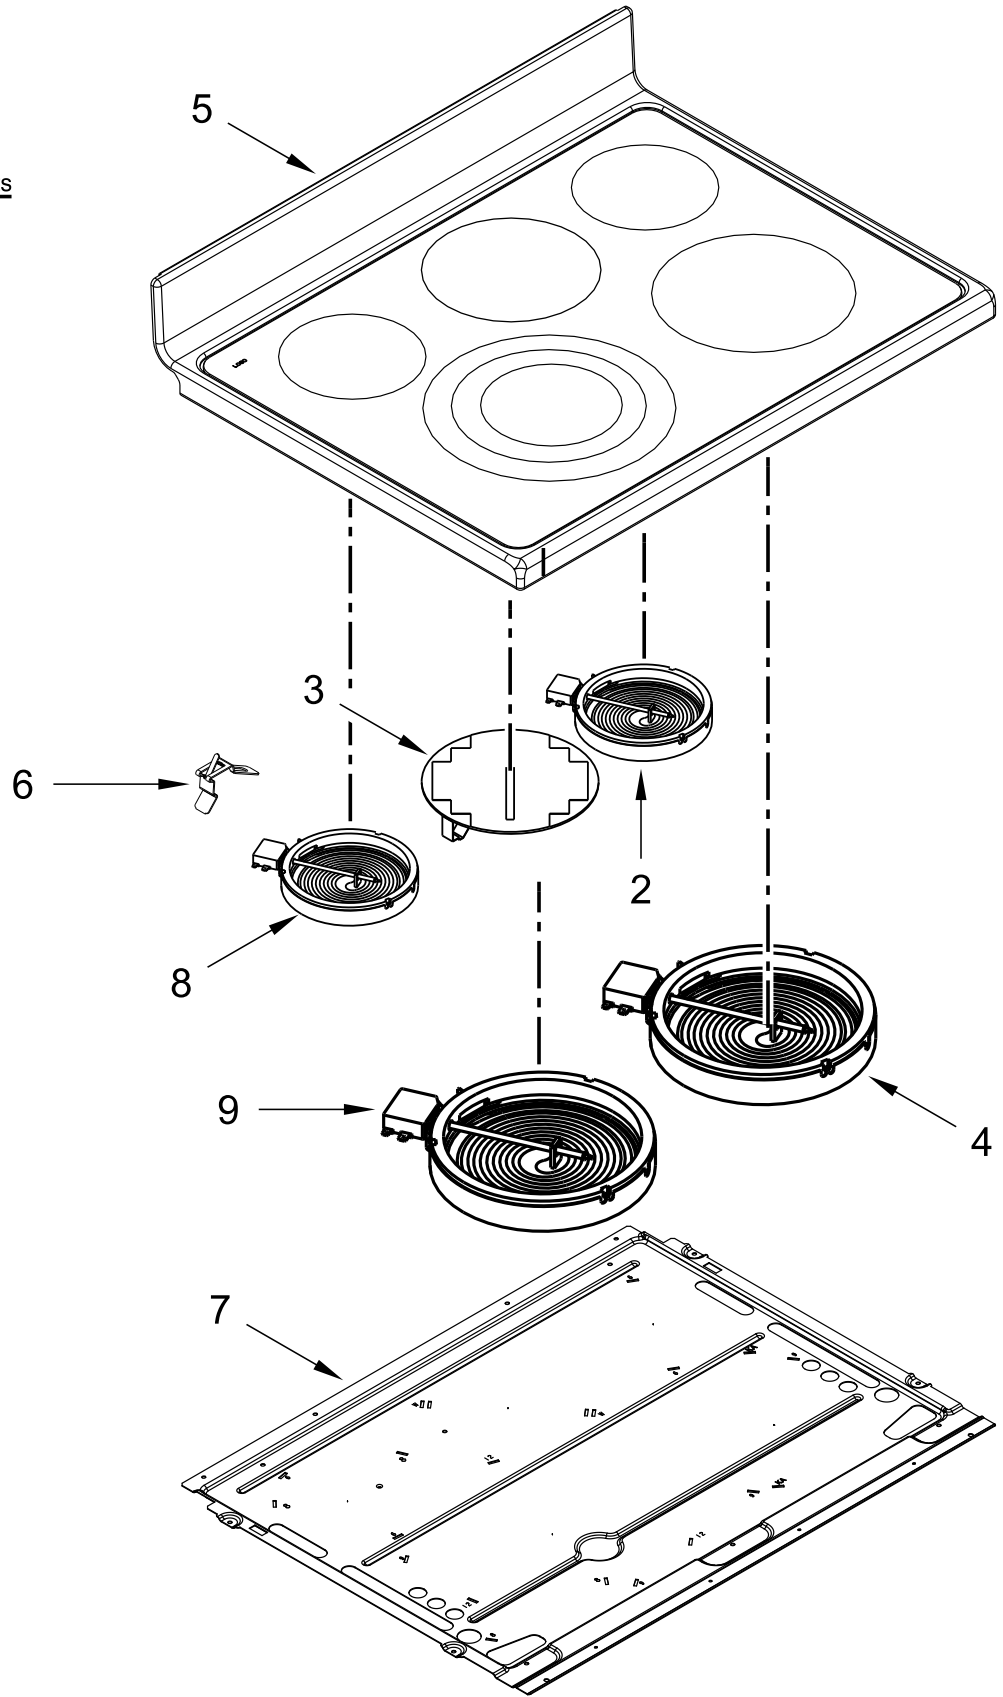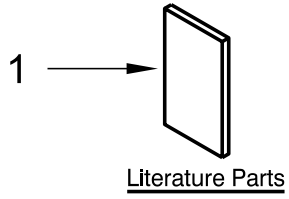

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	7	W10260946	Panel, Element Support	9	W10670279	Element (2700W) (Left Front)
	W10694055	Guide, Use & Care						FOLLOWING PARTS NOT ILLUSTRATED
	W10694065	Instructions, Installation	8	W10270604	Element (700W) (Left Rear)		W11190444	Harness, Main
	W10647745	Sheet, Tech					W11172425	Harness, Infinite Switch (Left)
	9762761	Tips, Safe Cooking (English)					W11172427	Harness, Infinite Switch (Right)
	W10065852	Tips, Safe Cooking (French)					W11172428	Harness, EOL (DOFSR)
2	8273994	Element (1200W) (Right Rear)					W11172531	Harness, Sensor & Locks
3	W10799048	Element, Warm Zone					W11171874	Harness, Cooktop
4	W10251108	Element (3200W) (Right Front)					7101P027-60	Screw, Ground
5		Cooktop					8019P013-60	Clip, Wire Lock
	W10687991	Stainless						
6	W10225448	Spring, Element						


CONTROL PANEL PARTS

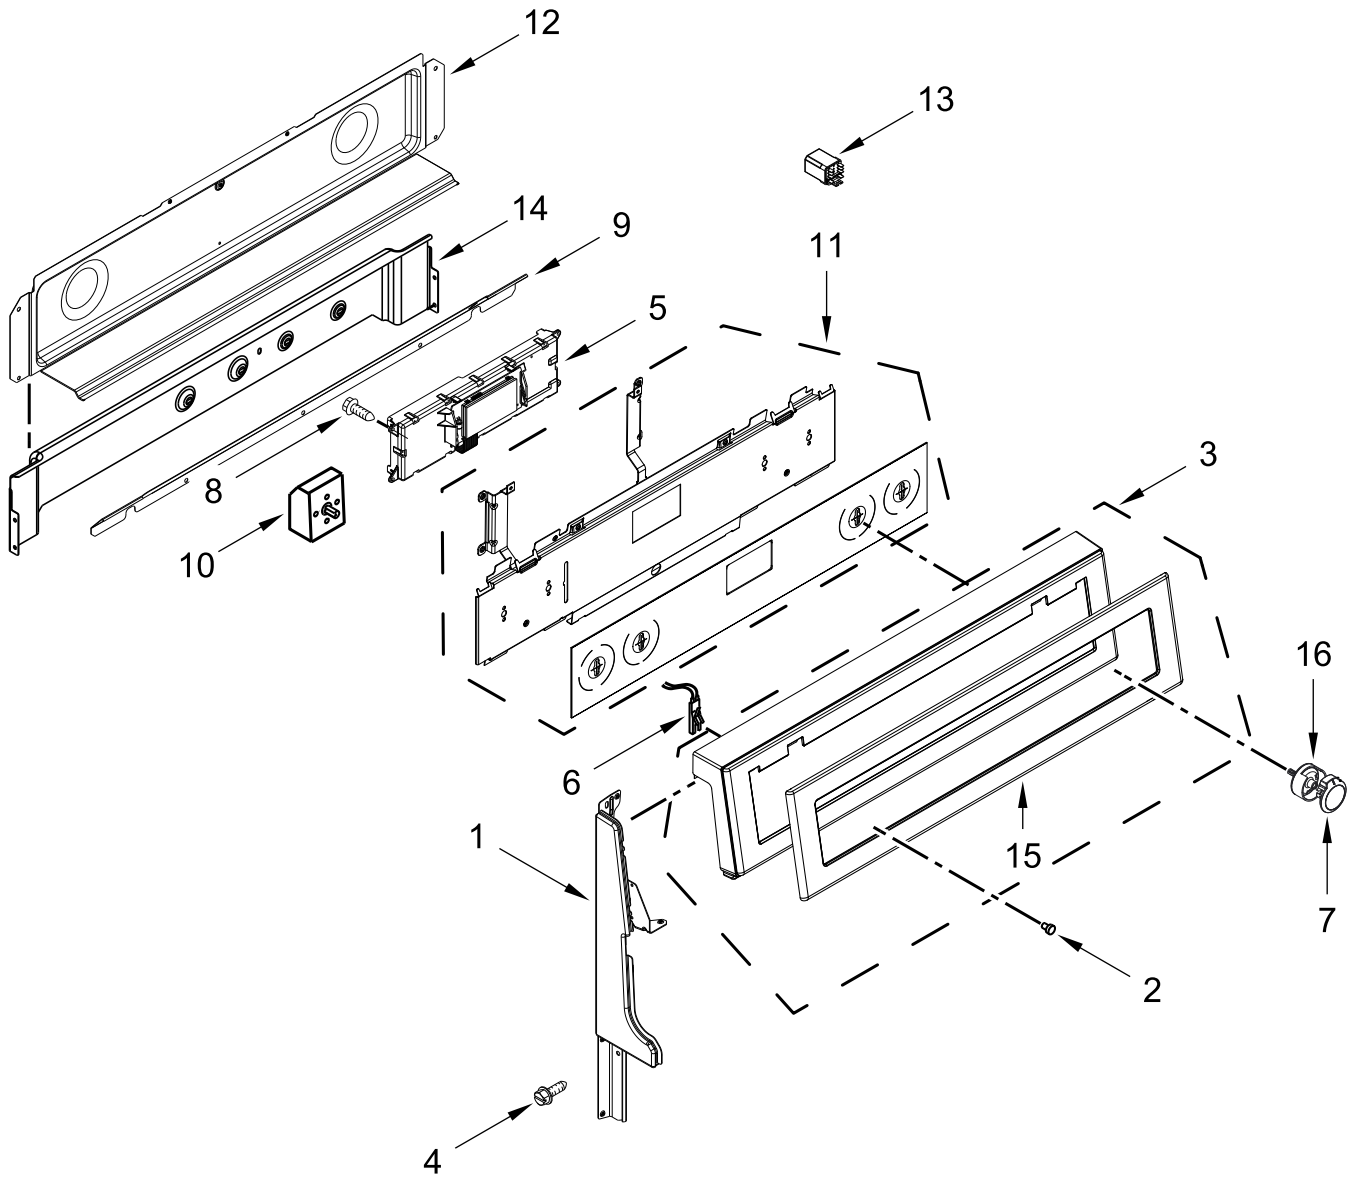

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Support, Backguard	9	W10299338	Shield, Wire Cover	13	W10326400	Relay (12V)
	W10319109	Black (Left)	10	W10296657	Switch, Infinite (Left Front)	14	W10278697	Shield, Vent
	W10319111	Black (Right)		W10295048	Switch, Infinite (Left Rear)	15		Skin, Control Panel (Not Serviced)
2	3196068	Lens, Indicator		W10312185	Switch, Infinite (Right Front)	16	W10645811	Bezel, Knob
3		Assembly, Control Panel		7403P373-60	Switch, Infinite (Right Rear)			
	W10645848	Stainless	11		Assembly, User Interface (Includes Light Feature)			
4	7101P633-60	Screw (Black)		W10692155	Black			
5	W10778305	Control, Electronic	12	W10776098	Cover, Backguard			
6	7407P136-60	Light, Indicator						
7		Knob						
	W10823529	Stainless						
8	7101P434-60	Screw						


CHASSIS PARTS

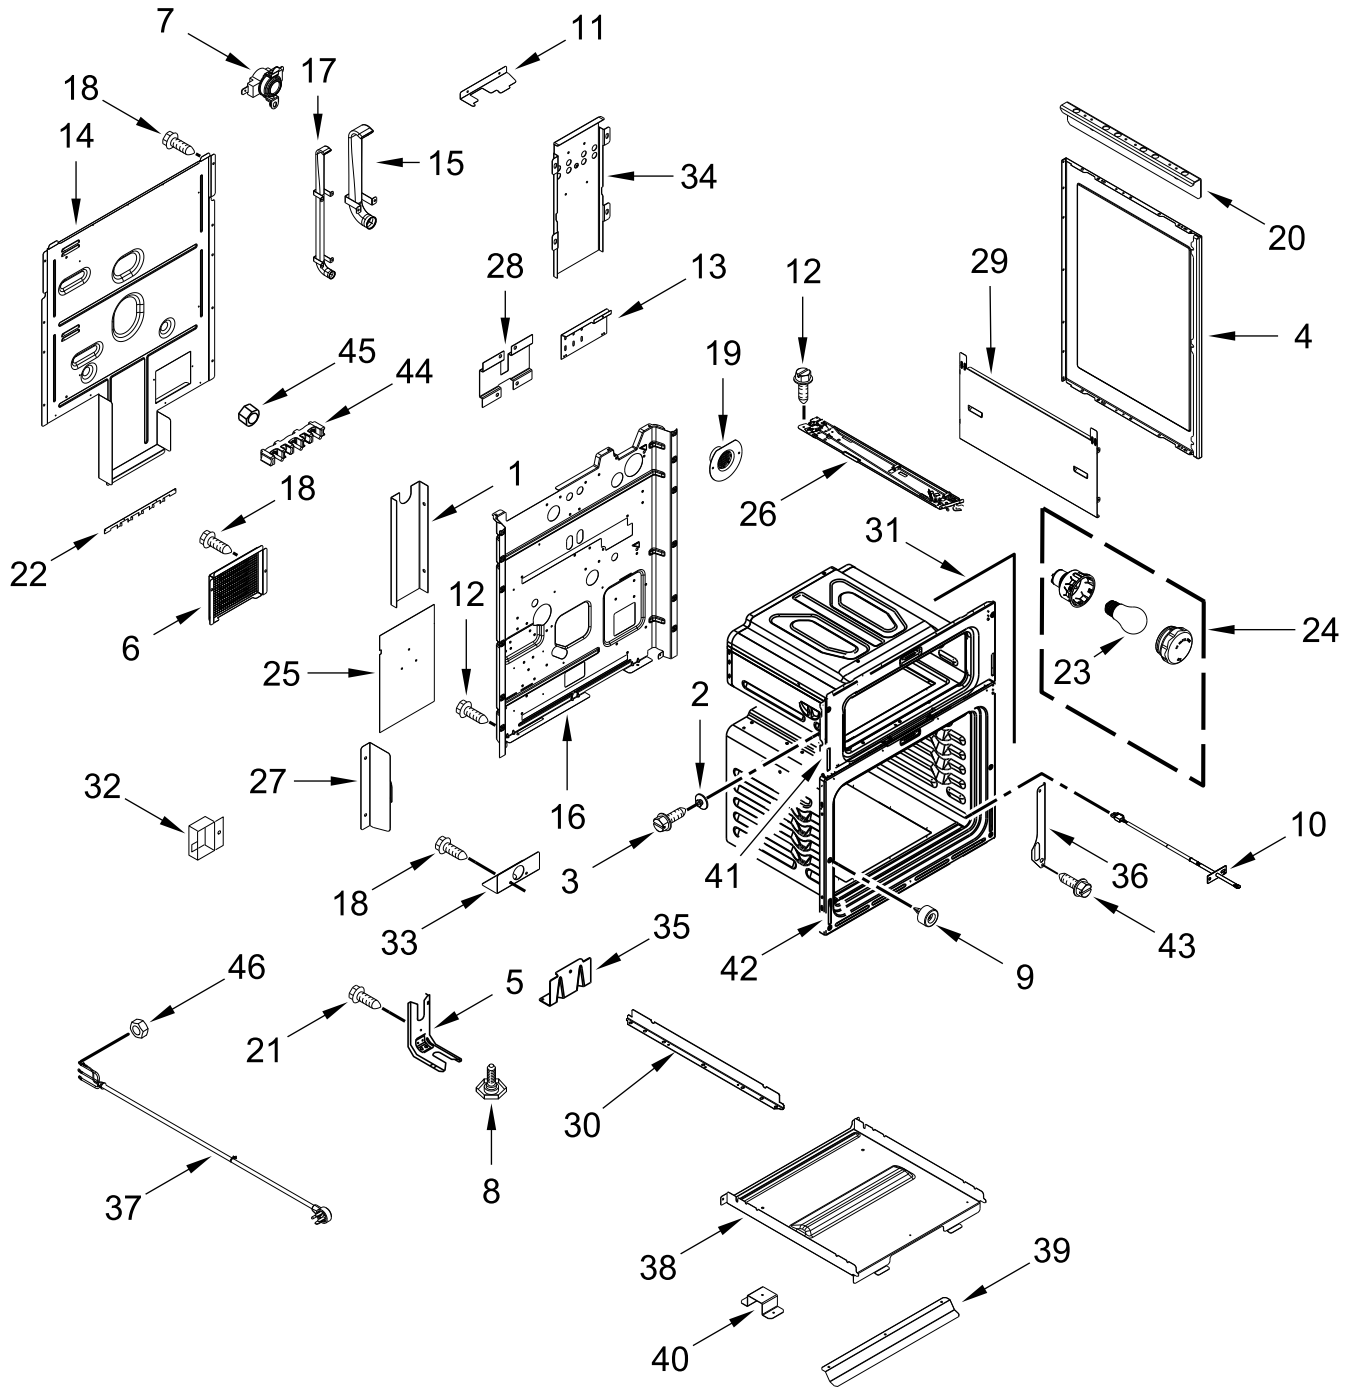

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10332459	Shield, Heat	21	7101P485-60	Screw, Anti-Tip Kit	37	W10624592	Cord, Power
2	W10237689	Spacer, Side Panel	22	8036P012-60	Shield, Power Cord	38	W10548601	Pan, Element
3	W10267456	Screw, Shoulder	23	7407P103-60	Bulb, Light	39	W10253470	Bracket, Retaining
4	W10668723	Panel, Side Black	24	W10454648	Assembly, Light	40	W10260545	Clip, Retaining
5	3801F656-51	Bracket, Anti-Tip	25	W10311987	Shield, Cord (Right)	41	W10606341	Front, Main (Upper)
6	W10312612	Cover, Access (Terminal Block)	26	W10683517	Lock, Rear Mount	42	W10308654	Front, Main (Lower)
7	7403P899-60	Switch, High Limit	27	W10268560	Cover, Wire Lower	43	4449040	Screw
8	7101P507-60	Foot, Leveler	28	7003P104-60	Insulator, Heat Shield	44	W10246624	Block, Terminal
9	W10105790	Bumper & Screw	29	W10538516	Shield, Side Insulation	45	3400029	Nut
10	7430P044-60	Sensor, Oven	30	W10357697	Bracket, Side Panel	46	7103P027-60	Nut
11	W10268559	Cover, Lower Wire	31	W10337392	Gasket, Oven Door (Upper)			FOLLOWING PARTS NOT ILLUSTRATED
12	7101P426-60	Screw		W10269069	Gasket, Oven Door (Lower)	W10271637		Insulation, Floor
13	W10332449	Shield, Cord	32	8285593	Cover, Connector	W10308393		Insulation, Wrapper
14	W10261386	Cover, Main Wire	33	W10190166	Bracket, Power Supply	W10322111		Insulation, Back
15	W10337391	Tube, Vent (Upper)	34	W10261388	Bracket, Terminal	W10204079		Insulation, Middle
16	W10668730	Back, Main	35	W10863342	Support, Lower Oven	W10204085		Insulation, Main Front Strip
17	W10323793	Tube, Vent (Lower)	36	W10410463	Cover, Hinge (Left)	W10272326		Insulation, Hidden Bake Pouch
18	7101P434-60	Screw		W10410461	Cover, Hinge (Right)			
19	W10322408	Adapter, Vent Tube						
20	W10319087	Bracket, U Channel						


INTERNAL OVEN PARTS

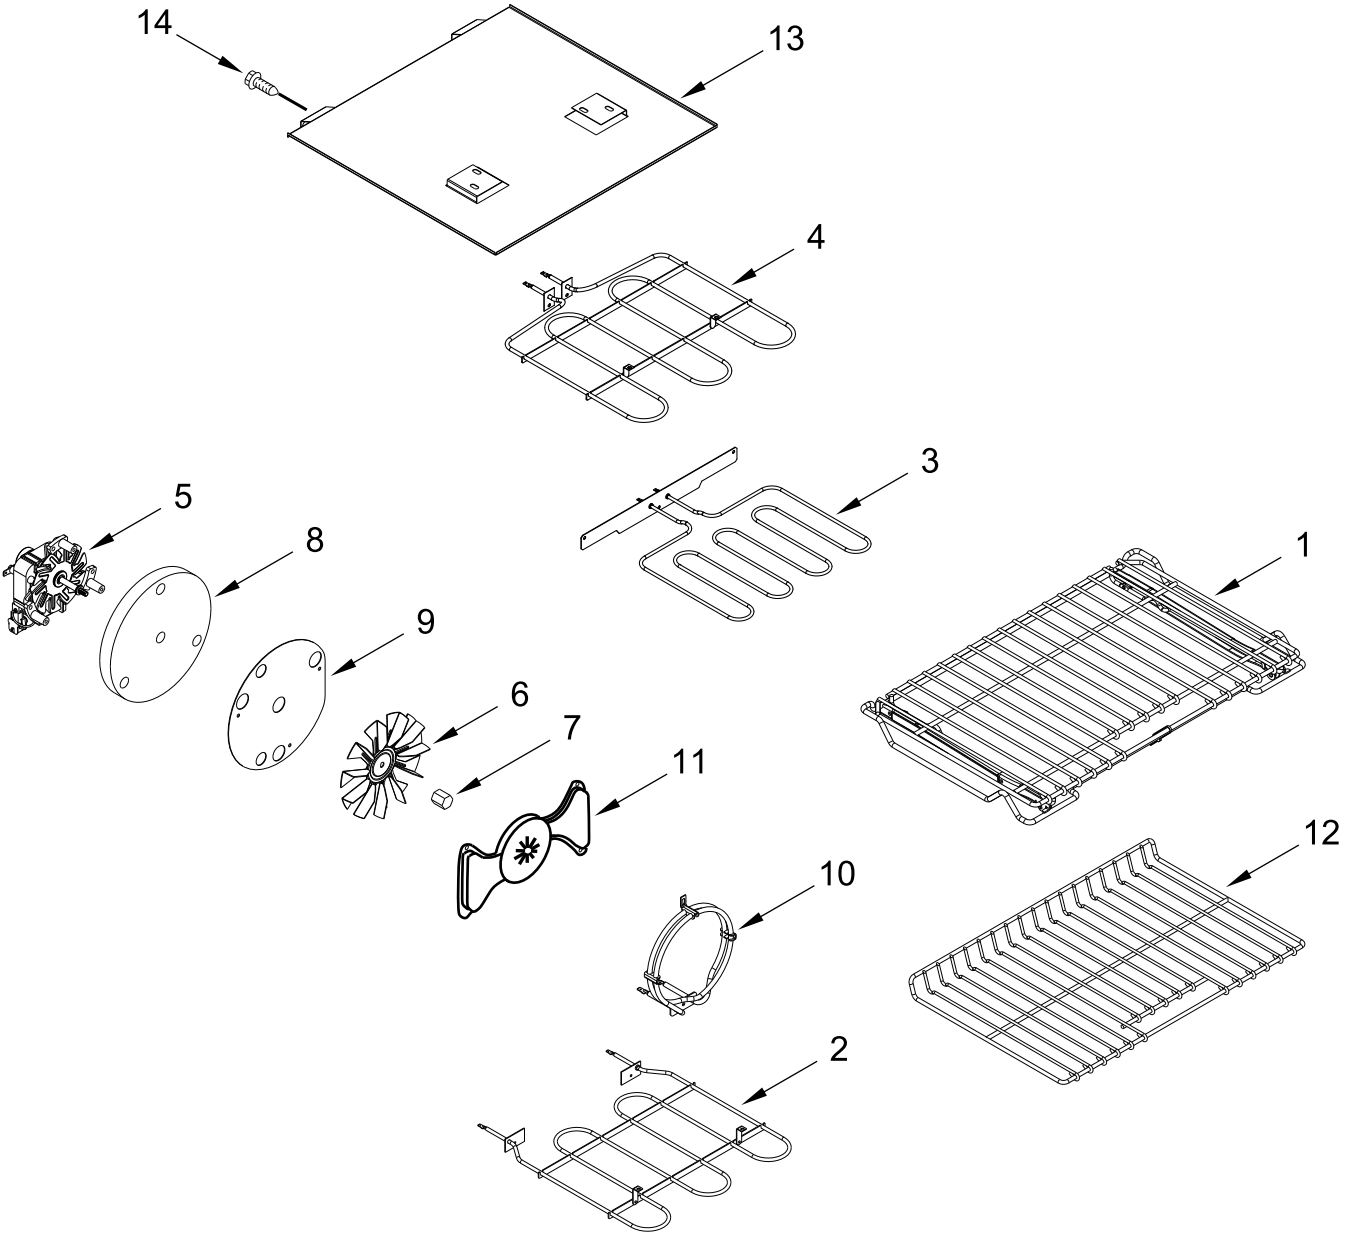

INTERNAL OVEN PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10570870	Rack, Oven (Telescoping)	5	W11190725	Motor, Convection	11	8303962BU	Cover, Fan
2	W10249979	Element, Broil (Lower)	6	W10631503	Blade, Fan	12	W10570887	Rack, Oven
3	W10249981	Element, Bake (Upper & Lower)	7	W10631504	Nut, Acorn (LH)	13	W10319762	Shield, Broil
4	W10317476	Element, Broil (Upper)	8	W10274268	Insulation, Convection Motor	14	7101P434-60	Screw
			9	W10339476	Plate, Insulation			
			10	W10271639	Element, Convection (240VAC)			


UPPER DOOR PARTS

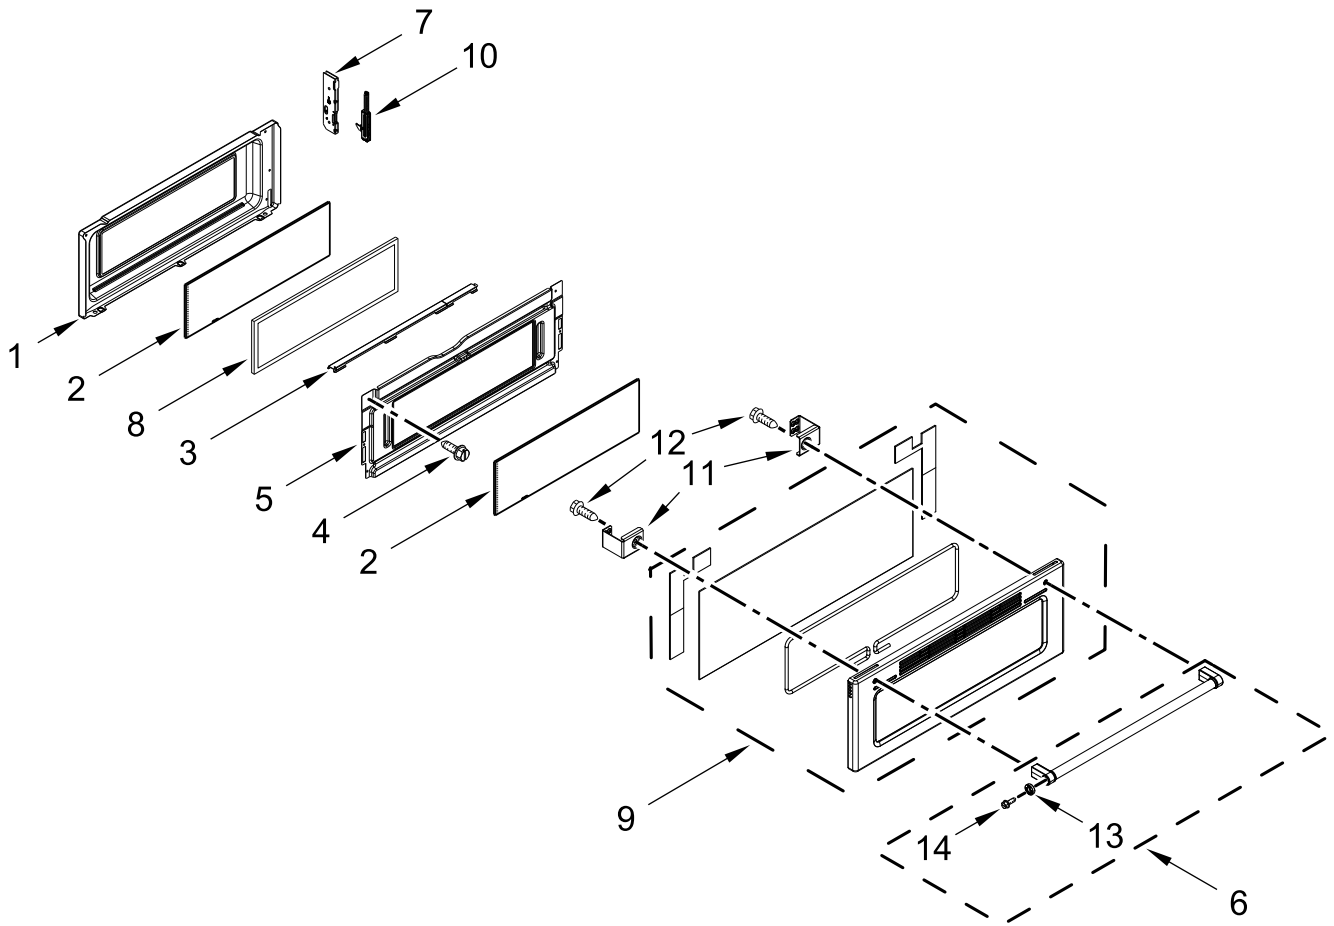

UPPER DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11051041	Lining, Door	6		Assembly, Door Handle	10	W10485733	Hinge, Door (Left)
2	W11099272	Glass, Inner					W10485732	Hinge, Door (Right)
3	W10272708	Frame, Glass		W10674701	Stainless	11	W10645182	Bracket, Door Handle
4	W10292297	Screw	7	W10289077	Receiver, Hinge	12	W10480830	Screw
5	W10485723	Retainer, Insulation	8	W10321271	Insulation, Door	13	W10551026	Medallion, Handle
			9		Assembly, Door	14	W10656499	Screw
				W10645192	Stainless			

LOWER DOOR PARTS

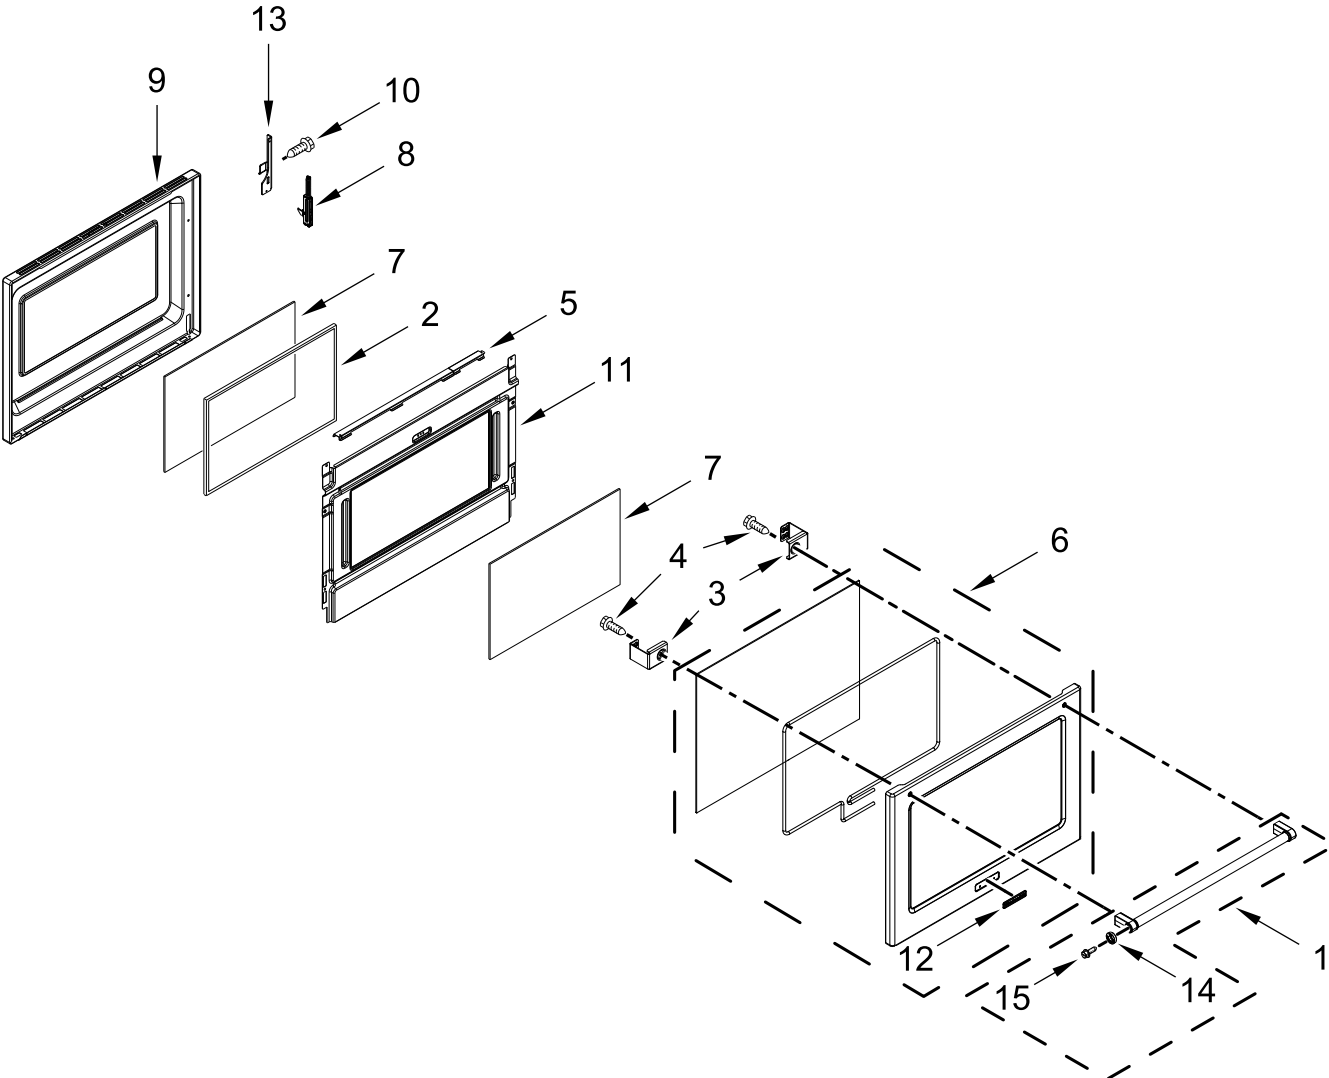

LOWER DOOR PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Assembly, Door Handle	6		Assembly, Door	11	W10340464	Retainer, Insulation
	W10674701	Stainless		W10645181	Stainless	12	W10518672	Badge
2	W10321285	Insulation, Door	7	9757706	Glass, Inner	13	W10272329	Receiver (Left)
3	W10645182	Bracket, Door Handle	8	W10335434	Hinge, Door (Left)		W10272328	Receiver (Right)
4	W10480830	Screw		W10335433	Hinge, Door (Right)	14	W10551026	Medallion, Handle
5	W10272594	Frame, Glass	9	W10292008	Lining, Door	15	W10656499	Screw
			10	4449040	Screw			

OPTIONAL PARTS (NOT INCLUDED)

PAIN, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	72032	Black
	4392899	Biscuit/Bisque
	511873	White Porcelain (2 oz.)

PAIN, SPRAY

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	4392901	Biscuit/Bisque
	285006	Black
	350956	Almond
	350938	Gray Primer
	350942	White Primer

ACCESSORIES

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting
	W10355016	Cleaner, Stainless Steel
	W10355049	Wipes, Stainless Steel Cleaning