



Dimensions

A - Seat Depth - 21" / 53cm B - Seat Height - 18" / 46cm

C - Arm Height - 26" / 66cm

Features

- Hardwood, softwood and engineered wood products, all joints pinned & glued for uniformity & strength
- Back: Premium elastic webbing offers consistent suspension for the life of the product
- Seat: 8 gauge sinuous wire springs for superior ride and comfort
- High resilience seat foam for superior durability and comfort

77494 JUNO



Dimensions shown as Width x Depth x Height. Specifications are correct at time of printing and are subject to change without notice. LHF - left hand facing RHF - right hand facing IA - inside arm to inside



01 Sofa 87 x 37 x 33" 221 x 94 x 84cm IA: 66" / 168cm



10 Armless Chair 23 x 37 x 33" 58 x 94 x 84cm



23 Angled Ottoman 32 x 32 x 17" 81 x 81 x 43cm



 
85 Wedge Seat 45 deg. 89 RHF Chair 42 x 37 x 33" 107 x 94 x 84cm



02 Chair 23 x 37 x 33" 58 x 94 x 84cm



11 Corner Square 37 x 37 x 33" 94 x 94 x 84cm



40 RHF Sofa Split 39 LHF Sofa Split 91 x 37 x 33" 231 x 94 x 84cm



88 LHF Chair 33 x 37 x 33" 84 x 94 x 84cm



03 Loveseat 65 x 37 x 33" 165 x 94 x 84cm IA: 44" / 112cm



13 RHF Sofa 12 LHF Sofa 77 x 37 x 33" 196 x 94 x 84cm



56 RHF Armless Chair 55 LHF Armless Chair 23 x 37 x 33" 58 x 94 x 84cm



91 Apartment Sofa 81 x 37 x 33" 206 x 94 x 84cm IA: 60" / 152cm



04 Ottoman 23 x 23 x 17" 58 x 58 x 43cm



14 Armless Loveseat 45 x 37 x 33" 114 x 94 x 84cm



64 Angled Storage Ottoman 44 x 29 x 17" 112 x 74 x 43cm



95 Chair w/Two Arms 43 x 37 x 33" 109 x 94 x 84cm IA: 22" / 56cm



08 RHF Loveseat 07 LHF Loveseat 55 x 37 x 33" 140 x 94 x 84cm



15 RHF Chaise 16 LHF Chaise 33 x 63 x 33" 84 x 160 x 84cm



74 Rectangle Ottoman 37 x 23 x 17" 94 x 58 x 43cm



09 Corner Curve 46 x 46 x 33" 117 x 117 x 84cm



19 RHF Bumper 20 LHF Bumper 54 x 42 x 33" 137 x 107 x 84cm



83 Wedge Seat 22 deg. 23 x 37 x 33" 58 x 94 x 84cm



98 RHF Angled Loveseat 97 LHF Angled Loveseat 65 x 48 x 33" 165 x 122 x 84cm



How We Measure

Height - measured from the highest point of the back pillow to the floor.

Depth - measured from the front edge of the seat cushion to the top of the back.

Width - measured from the widest point of the arm or arm pillow to the widest point of the opposite arm or arm pillow.

Arm Height - measured from the top of the arm to the floor.

Seat Height - measured from the crown of the seat cushion to the floor.

Warranty

Wood Frames, Springs or Webbing - ten year warranty

Metal Frames - two year warranty under normal household use

Motion Reclining Mechanisms - seven year warranty

Reclining Chairs, Sofabed Mechanisms and Sofabed Mattresses - two year warranty

 
Seat Cushion Foam and Fibre-filled **Components** - five year pro-rated warranty

77494 JUNO



Popular Configurations

Note: Always assemble configurations from right hand facing to left hand facing components.




6-Seat Corner Sectional

115 x 91" 292 x 231cm

Chaise

124 x 101"

 315 x 257cm




3-Seat Sofa Sectional with Chaise 5-Seat Corner Sectional


88 x 63" 224 x 160cm

151 x 51"


384 x 130cm

  6-Seat Corner Curve Sectional with 6-Seat Angled Wedge Sectional






234 x 231cm

 

92 x 91"

 

4-Seat Angled Wedge Corner Sectional with Bumper

 
113 x 92" 287 x 234cm



4-Seat Angled Sectional

129 x 48"

328 x 122cm



5-Seat Corner Curve Sectional

101 x 101"

257 x 257cm