

88 5520 944


Aspen Kitchen Island with Black Granite Insert Top

IMPORTANT NOTE

Carefully remove all the parts from the carton and put them individually on a soft cloth to prevent scratches or other damages occurring to the parts.


We have taken great care in the design of this product and request that you carefully and strictly follow our assembly instructions to ensure a completed product as it was designed.

*Home
Styles*

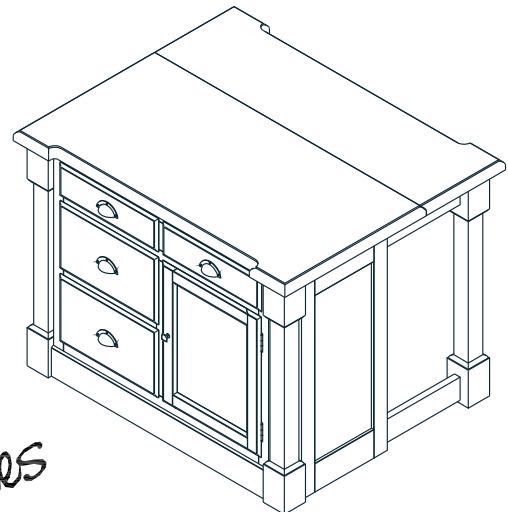


Patent 8,584,600 B2

Part List

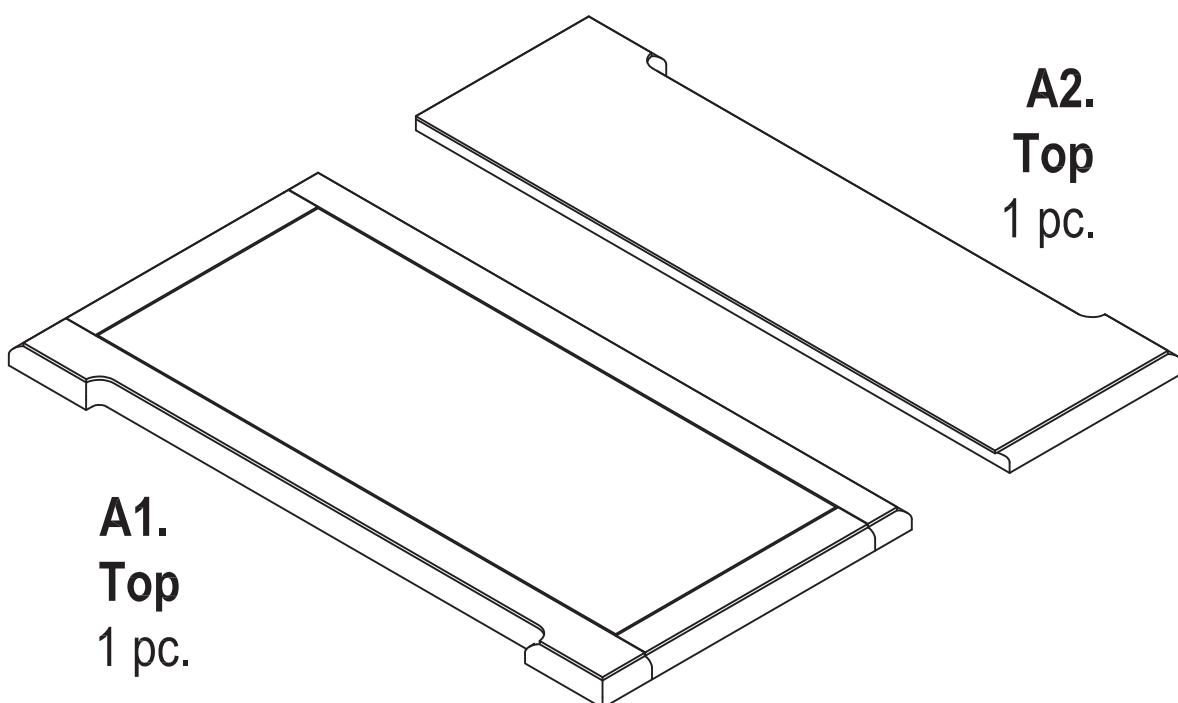

Hardware List

 

For assembly see instructions in carton 88 5520 942

Home Styles Consumer Assistance Line 888-680-7460 and 877-831-0319

servicedesk@homestyles-furniture.com

Revised date : 28 Nov 2013


HOW TO UNPACK THE GRANITE TOP

IMPORTANT


Please follow these step to unpack the granite top.

STEP 1

Open carton.

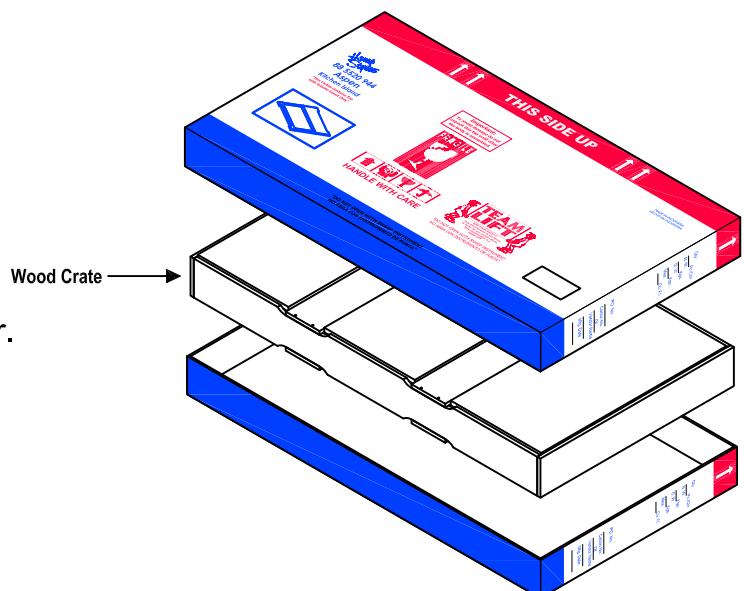

Remove wood crate and place it on the floor.

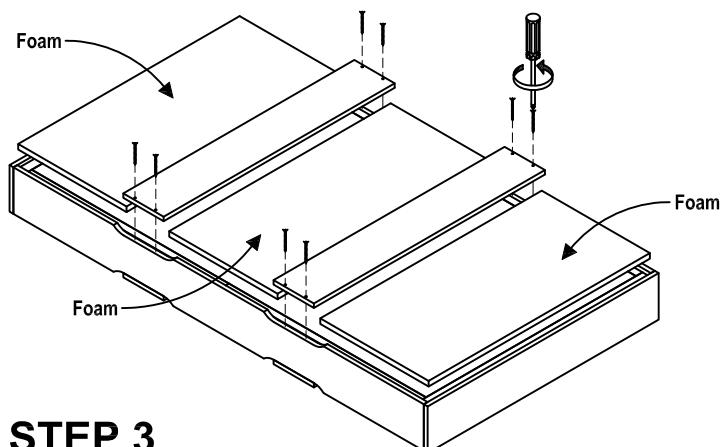

STEP 2

Unscrew the Wood Framing.

Remove the upper foam.

STEP 3

Use a hammer to knock out the wood framing.
(see Figure 1)

NOTE:
BE CAREFUL AND
DO NOT HIT THE
WOOD TOP OR GRANITE
WITH THE HAMMER.



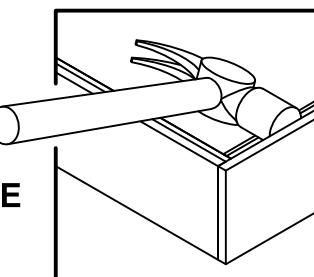


Figure 1

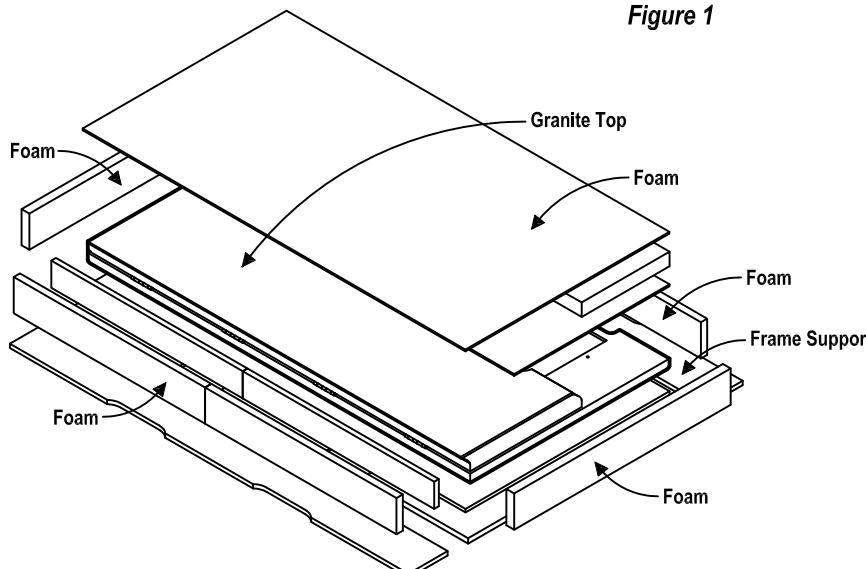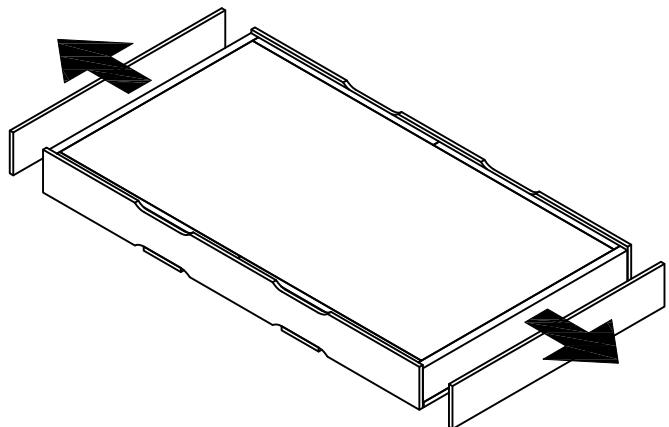

STEP 4

Remove wood frame supports and foam.

VERY IMPORTANT !!

CARE INSTRUCTIONS


NEVER

USE GLASS CLEANERS ON FINISHED FURNITURE. AMMONIA WILL CHEMICALLY ATTACK THE LACQUER.

NEVER

ALLOW LIQUIDS OF ANY KIND TO REMAIN ON THE FURNITURE. ABSORPTION CAUSES WOOD TO WARP AND SPLIT AND FINISHES TO DELAMINATE.

DO NOT
WRITE
DIRECTLY
ON
SURFACE.

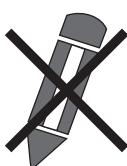


PREVENT MARKING

DO NOT
PLACE IN
DIRECT
SUNLIGHT.



PREVENT FADING

DO NOT USE
COMMERCIAL
WAXES AND
POLISHES.

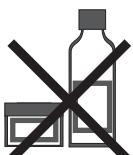

PREVENT YELLOWING

DO NOT
PLACE HOT
OBJECTS
ON SURFACE.



PREVENT FINISH DAMAGE

DO NOT
USE
RUBBER
BASED
PLACE MATS.



PREVENT DISCOLORING

TO CLEAN

USE A SOFT CLOTH MOISTENED IN LEMON OIL POLISH OR LUKEWARM SOAP AND WATER, THEN BUFF WITH A DRY CLEAN CLOTH.

