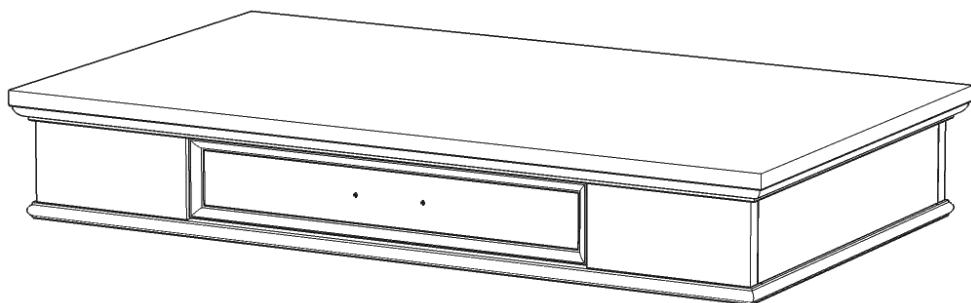


homestyles®20 05523 0931
Kitchen Island**IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List**

A.
Top
1 pc.

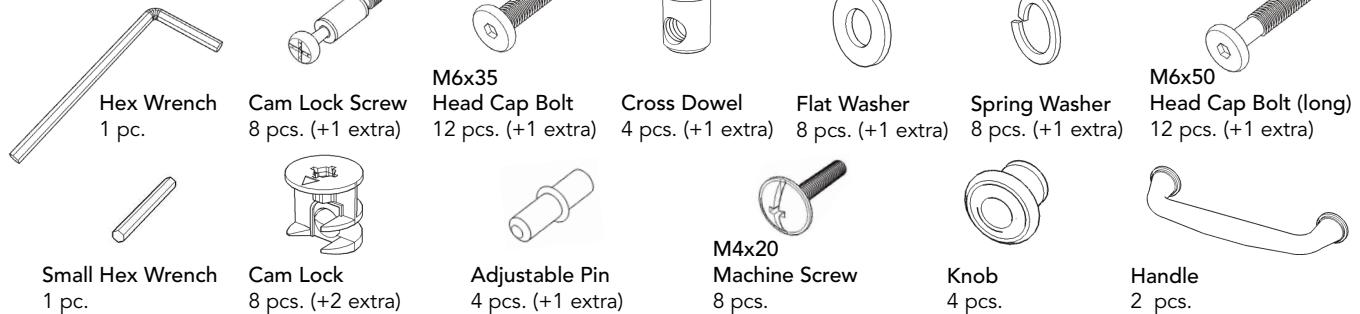Hardware List**Carton 20 05523 0932 is also needed for assembly.**

Tool(s) required for assembly: Phillips screwdriver, Level

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319


Assembly Instructions 2/6

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

STEP 1

Remove drawer from Top (A).

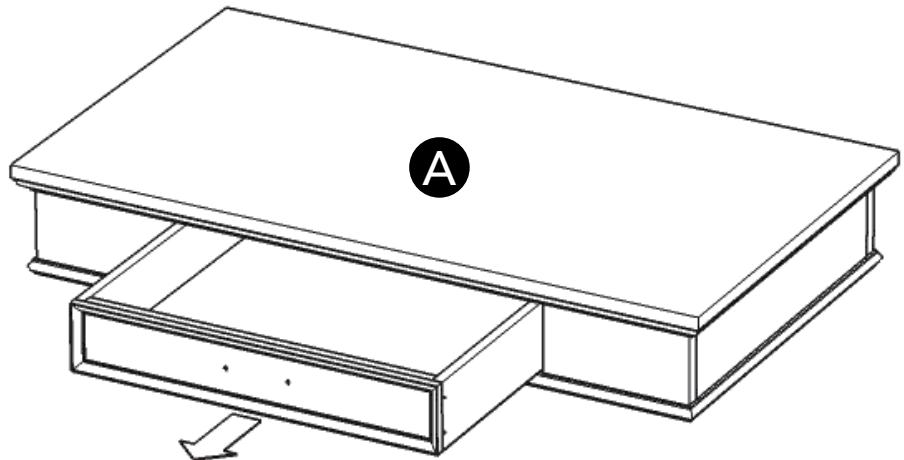

STEP 2

Place Top (A) and Side Panels (D) on a soft cloth.

Insert Cam Lock Screws into pre-drilled holes in Top (A) and Side Panels (D), then tighten. (See Figure 1)

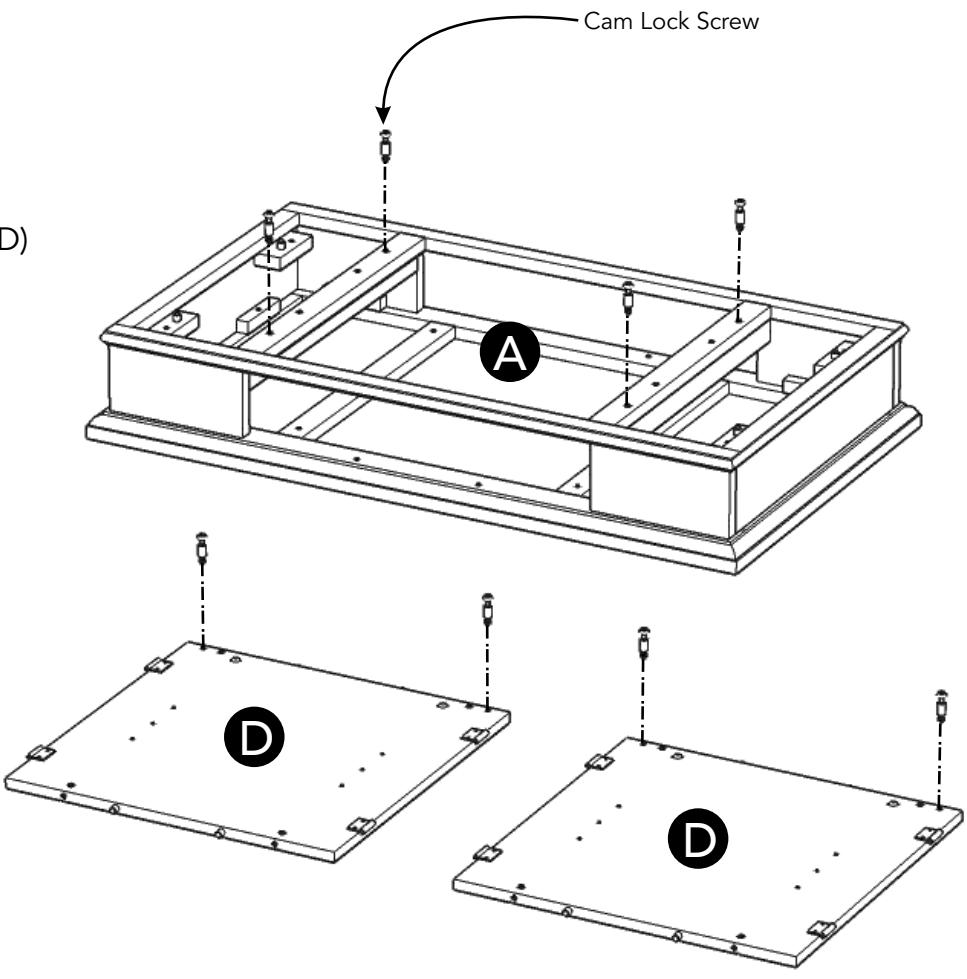


Figure 1

Assembly Instructions 3/6

STEP 3

Attach Side Panels (D) to Rails (H) with Cam Locks. (See Figure 2)

Attach unit to Top (A) with Cam Locks.



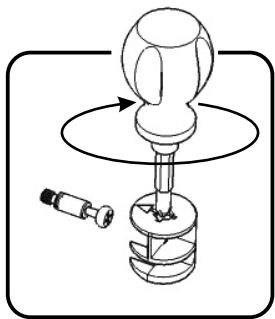


Figure 2

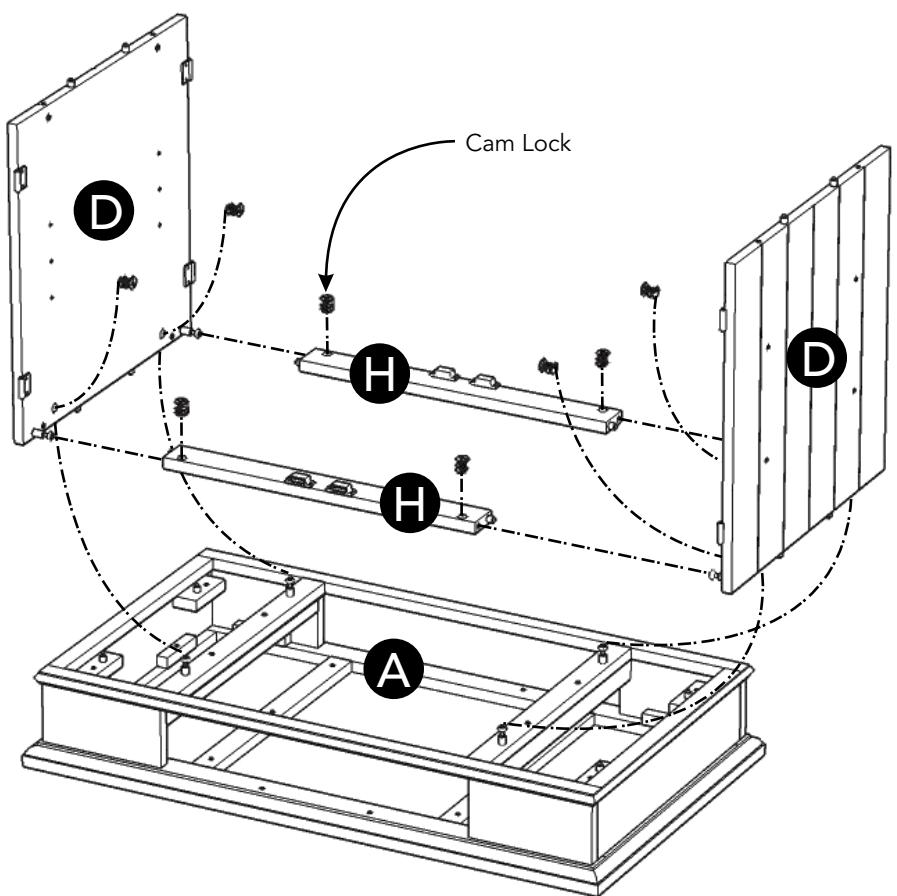

Head Cap Bolt

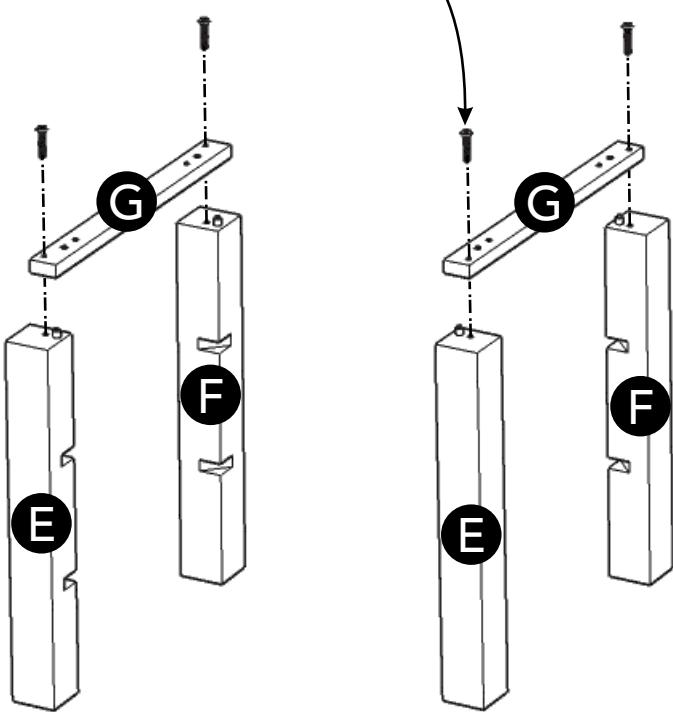

STEP 4

Attach Stretchers (G) to Posts (E) and (F) with Head Cap Bolts. (See Figure 3)


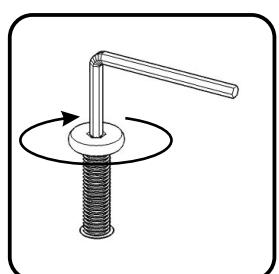


Figure 3


Assembly Instructions 4/6

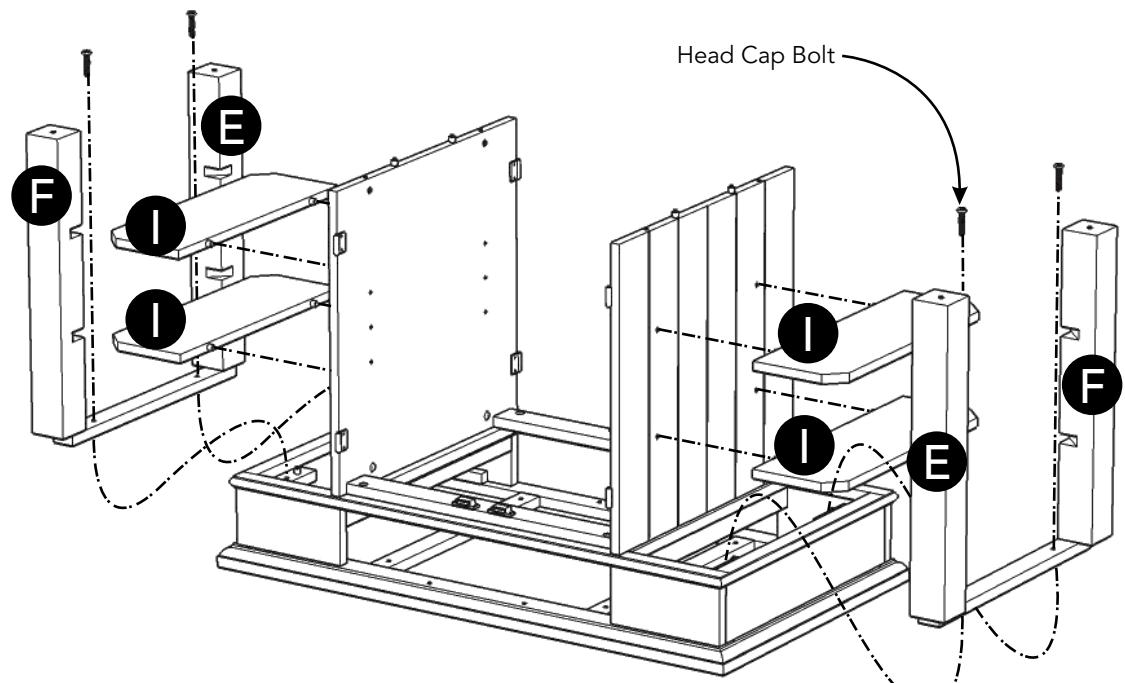

STEP 5

Attach Shelves (I) to unit from Step 3.

Attach post units to unit with Head Cap Bolts.

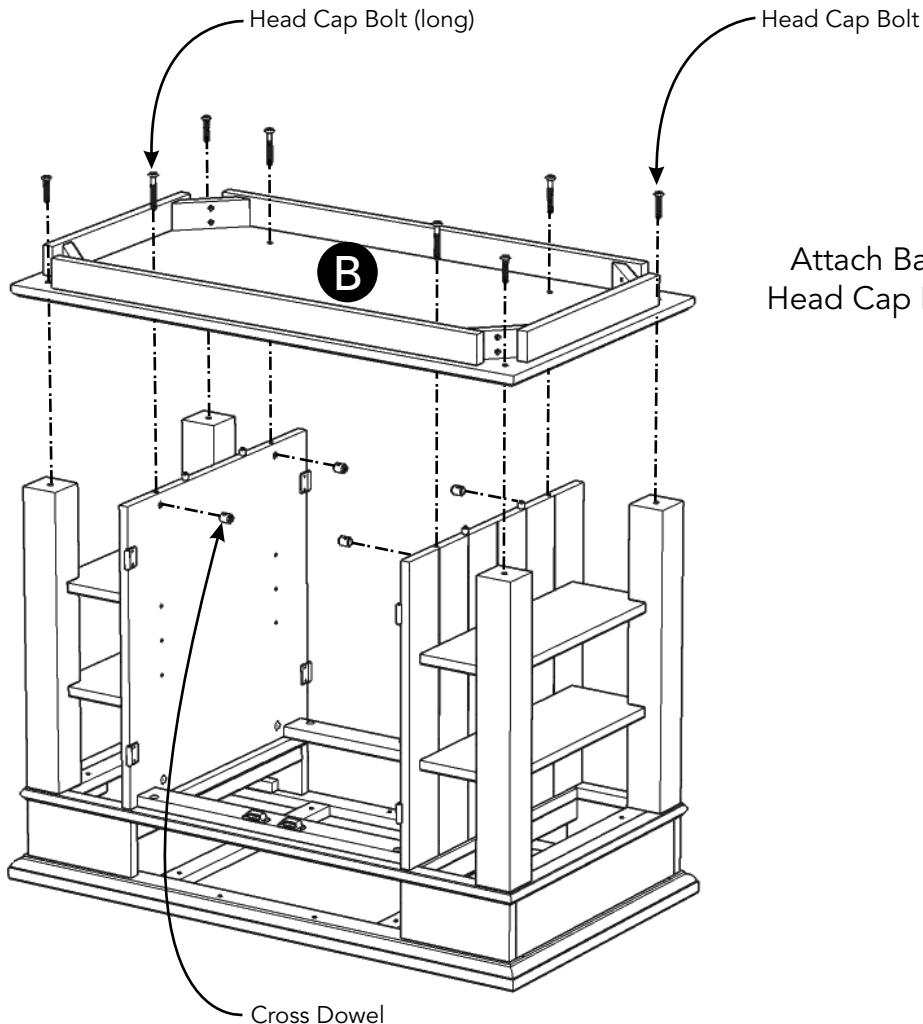

STEP 6

Attach Base (B) to unit with Cross Dowels, Head Cap Bolts (long) and Head Cap Bolts. (See Figure 4).

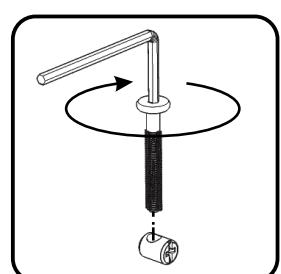


Figure 4

Assembly Instructions 5/6

STEP 7

Attach Feet (C) to unit with Flat Washers, Spring Washers and Head Cap Bolts (long). (See Figure 5)


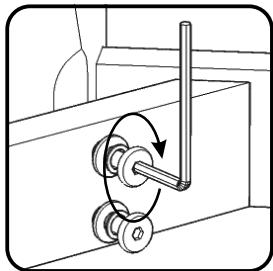


Figure 5

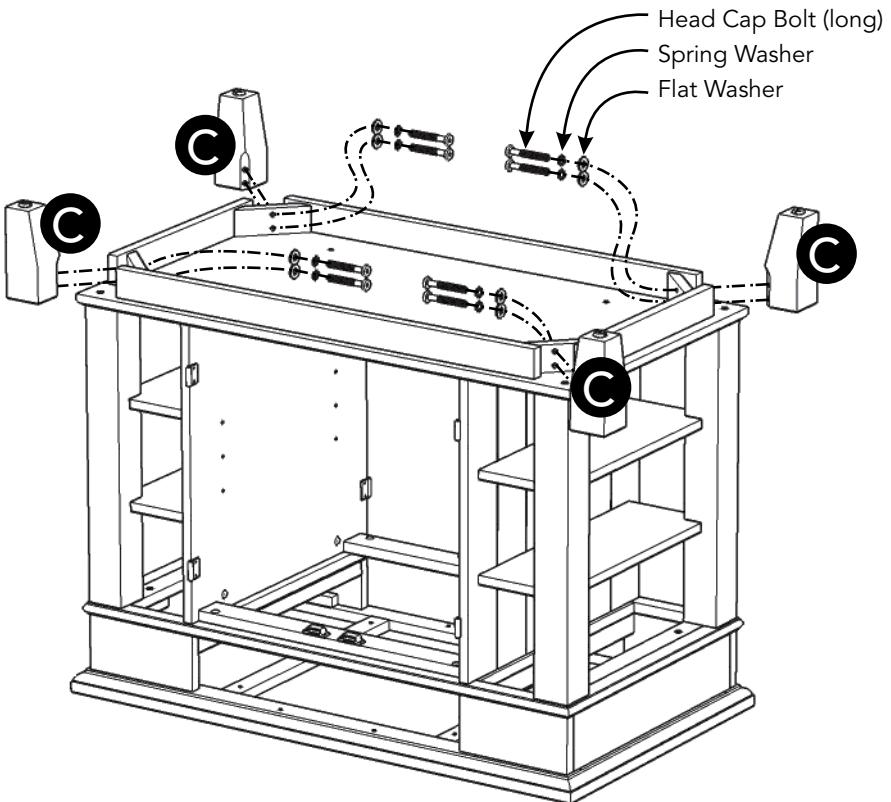

STEP 8

Turn unit over to its upright position.

Insert Adjustable Pins into side panels at desired level.

Place Shelf (J) into position.

Attach Doors (K) and (L) to unit by sliding door hinges into side panel hinges. (See Figure 6)

Attach Knobs to Doors (K) and (L) with Machine Screws. (See Figure 7)

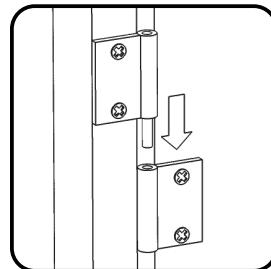


Figure 6



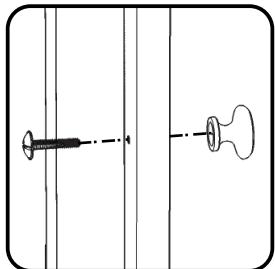


Figure 7

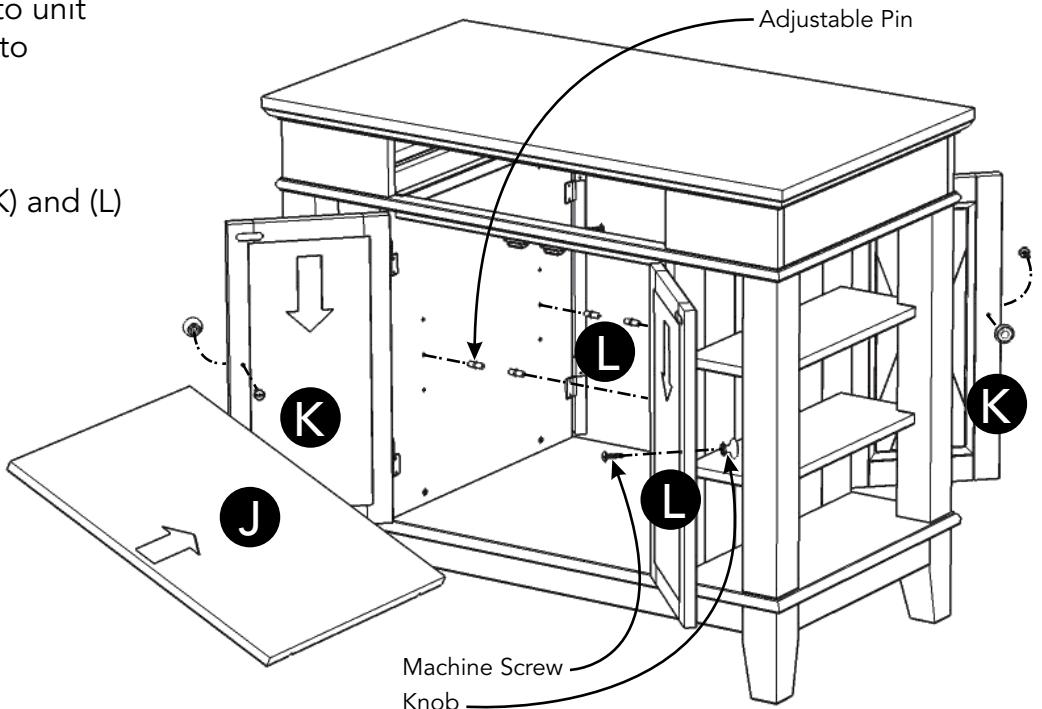


Assembly Instructions 6/6

STEP 9

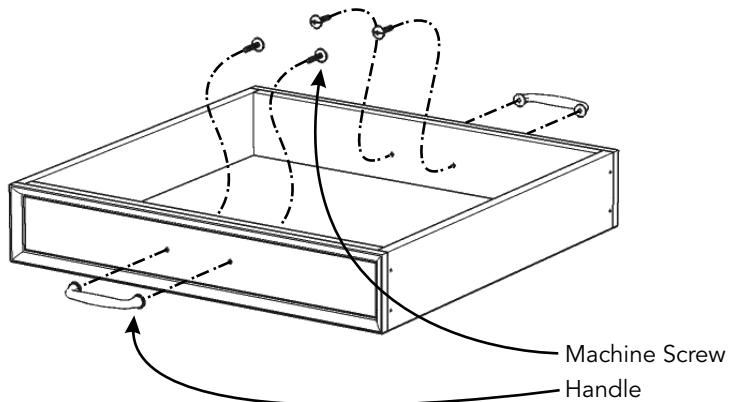

Attach Handles to drawer with Machine Screws.

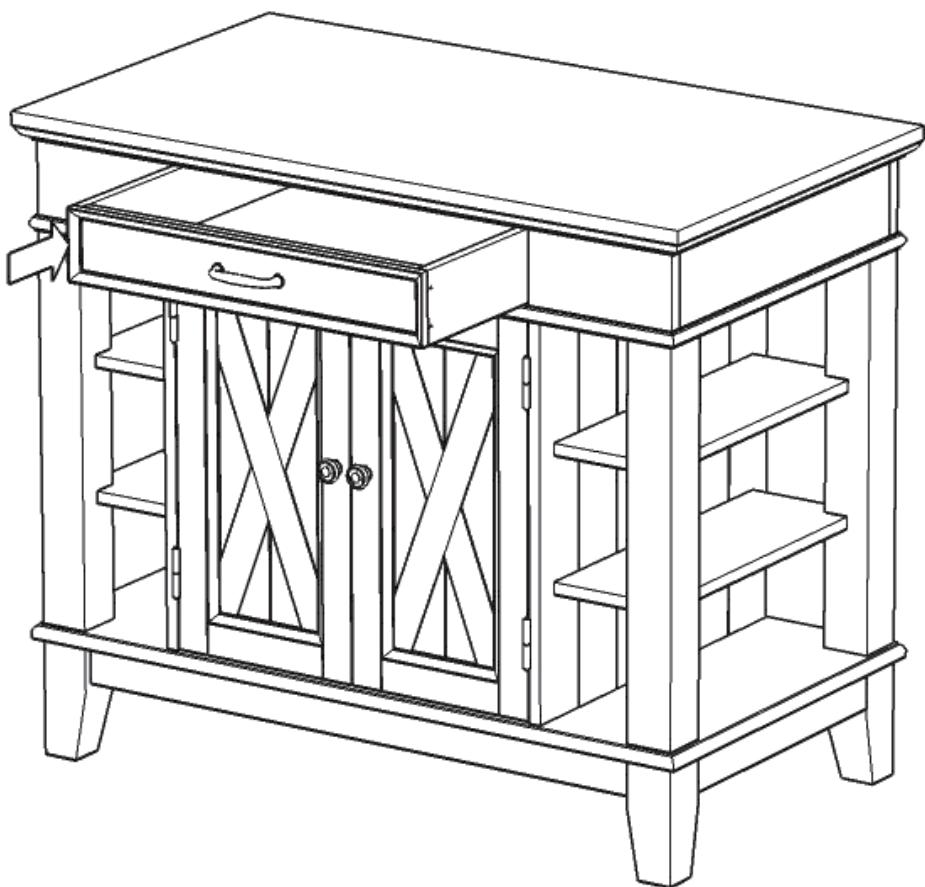

STEP 10

Slide drawer into position.

Level unit by adjusting the adjustable levelers on bottom of unit.
(See Figure 8)

Note: Unit must be level to work properly.

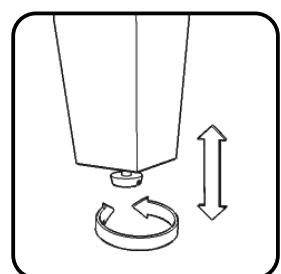


Figure 8

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.

Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING




Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water.
Buff with a dry clean cloth.

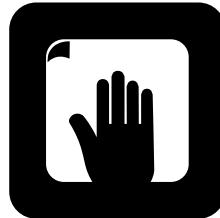

Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319