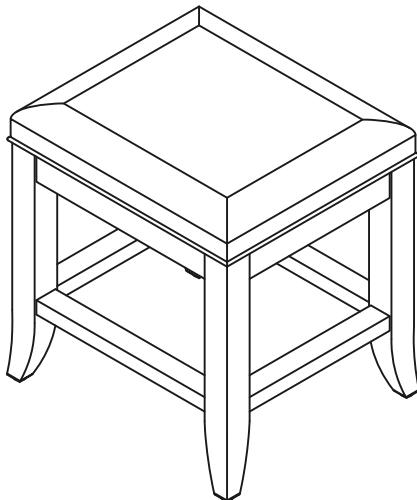
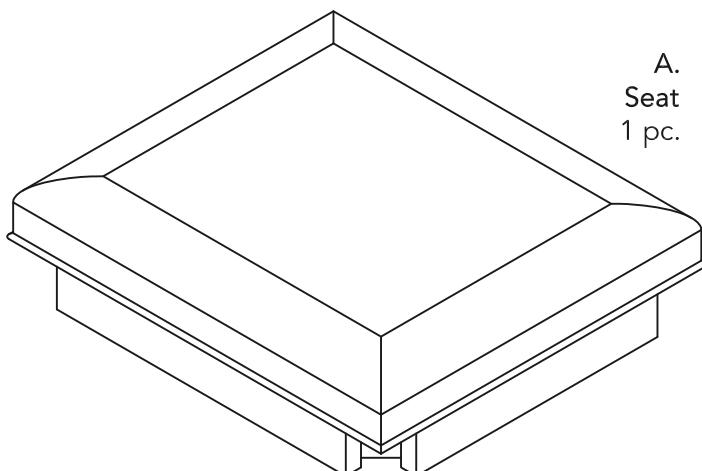


IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

**Part List**


A.
Seat
1 pc.

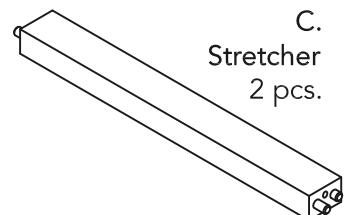

C.
Stretcher
2 pcs.

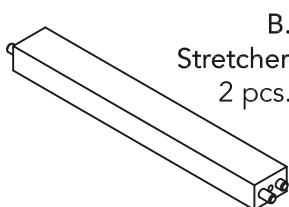

B.
Stretcher
2 pcs.

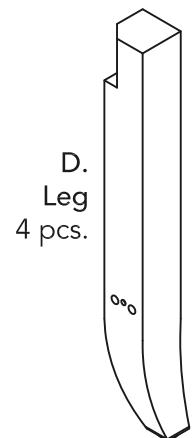

D.
Leg
4 pcs.

Hardware List

M4x44
1 3/4" Flat Head Screw
8 pcs. (+1 extra)



M6x55
Bolt
8 pcs. (+1 extra)



Spring Washer
8 pcs. (+1 extra)



Flat Washer
8 pcs. (+1 extra)



Allen Key
1 pc.



Allen Key (Small)
1 pc.

Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- Keep Allen Key in a safe place as the Bolts may need to tighten up in the future.

STEP 1


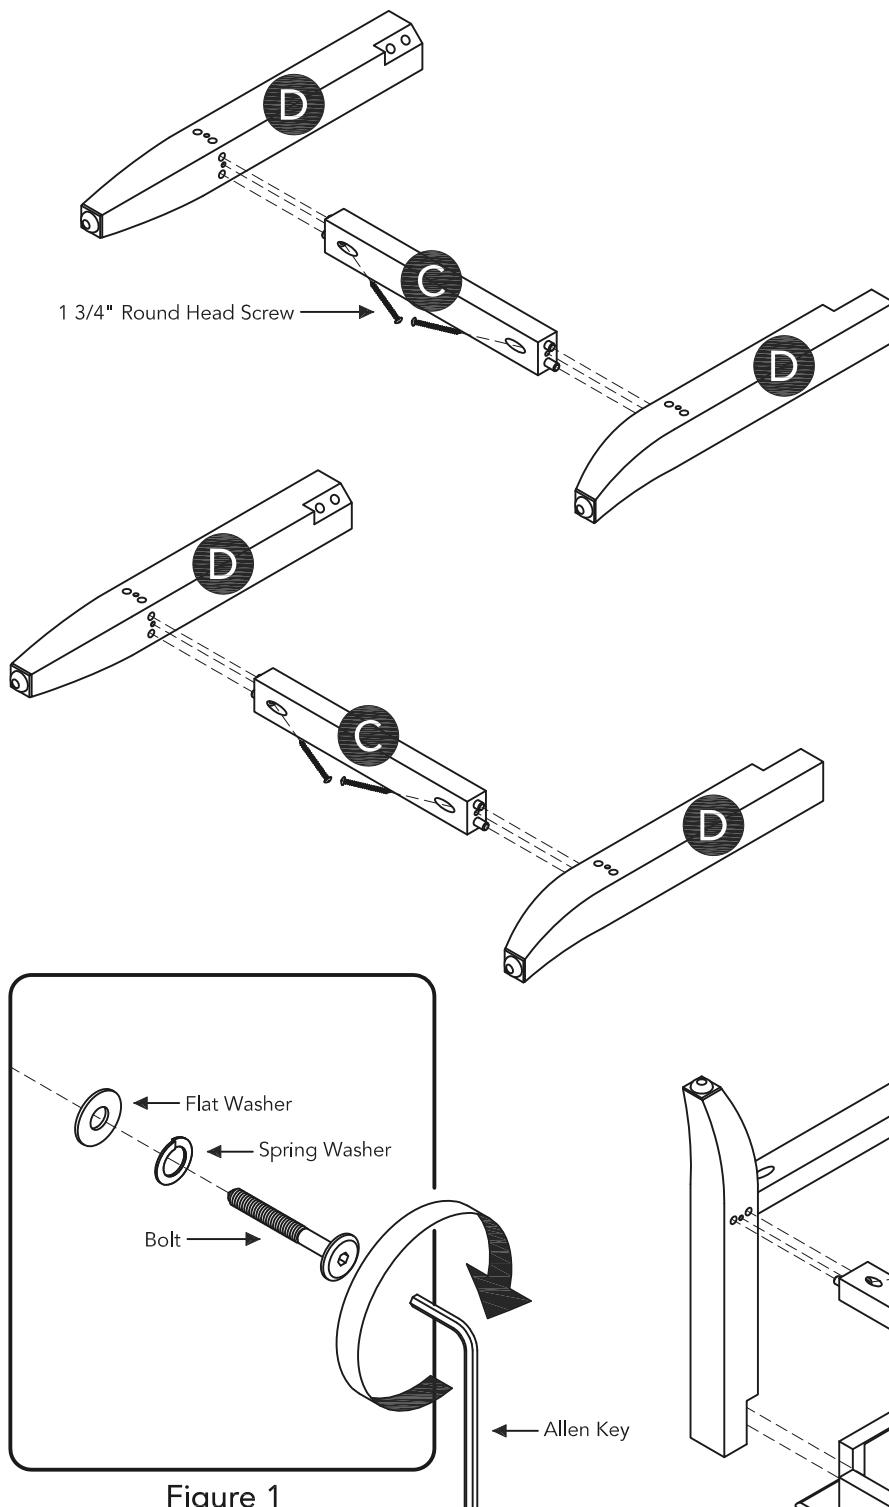


Figure 1

STEP 2

Attach Seat (A) and Stretchers (B) to unit with Spring Washers, Flat Washers, Bolts and 1 3/4" Round Head Screws.

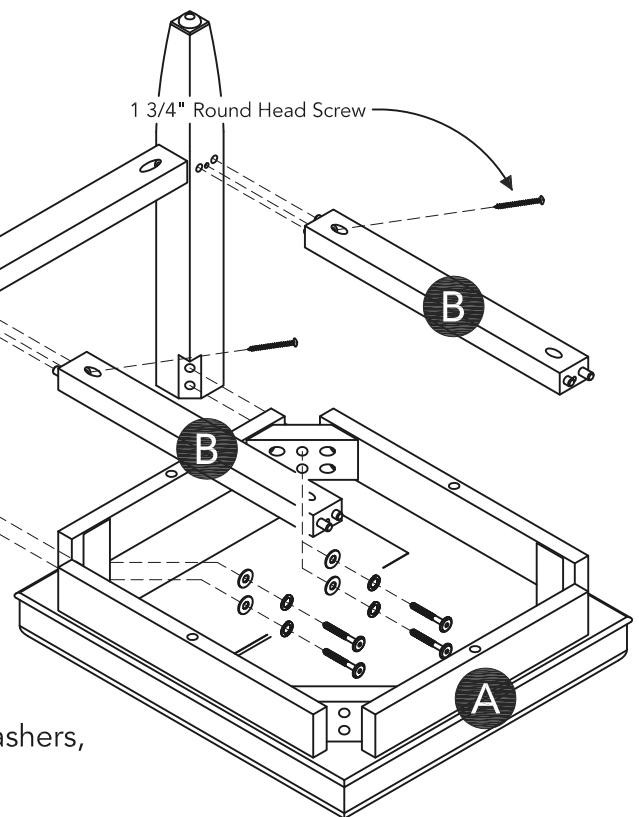



Tighten all Bolts with Allen Key. (See Figure 1)

Assembly Instructions 3/3

STEP 3

Attach unit from Step 1 to unit from Step 2 with Spring Washers, Flat Washers, Bolts and 1 3/4" Round Head Screws.

Tighten all Bolts with Allen Key.

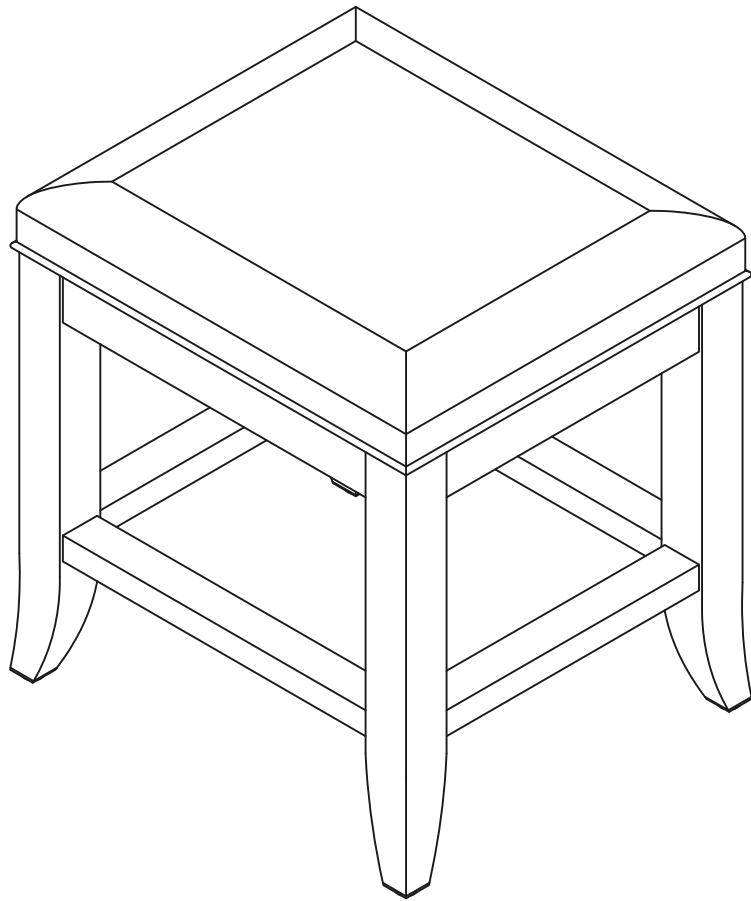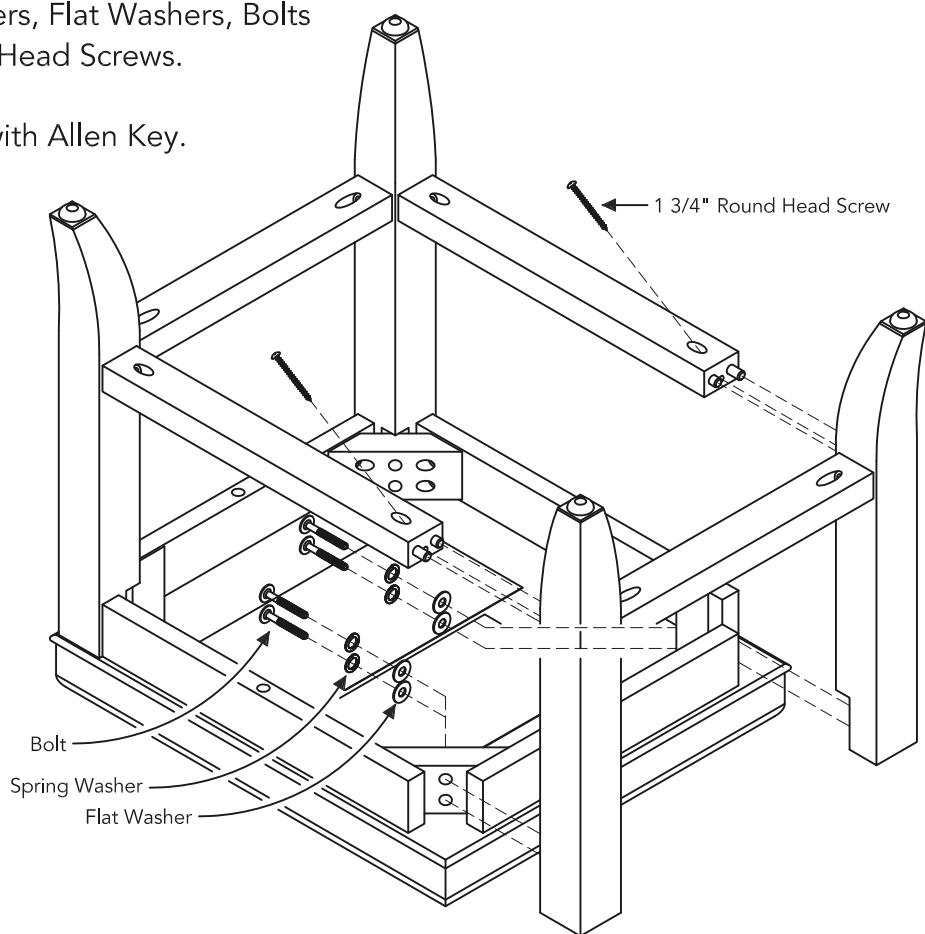

STEP 4

Turn the unit to its' upright position.

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.

Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319