

IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

Part List



B.
Leaf Top
1 pc.



 
C.
Back Stretcher
2 pcs.




F.
Rail
2 pcs.




D.
Back Upright
1 pc.

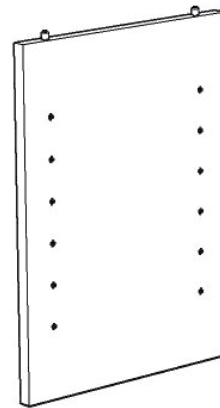

 
E.
Middle Panel
1 pc.



 G.
Shelf
4 pcs.

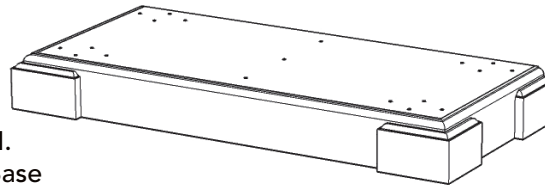

 H.
Base
1 pc.

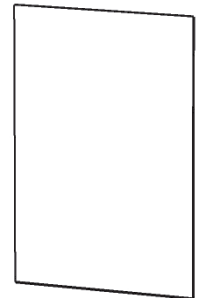

N.
Back Panel
2 pcs.

Hardware List



Hex Wrench
1 pc.



 
Small Wrench
1 pc.



Cam Lock
4 pcs. (+2 extra)




Cam Lock Screw
4 pcs. (+1 extra)



M6x35
Head Cap Bolt
18 pcs. (+1 extra)



 Adjustable Pin
32 pcs. (+1 extra)



M4x25
Machine Screw
4 pcs.



M3.5x16
Wood Screw
9 pcs. (+1 extra)



Knob
4 pcs.

For assembly see instructions in carton 88 5013 943.