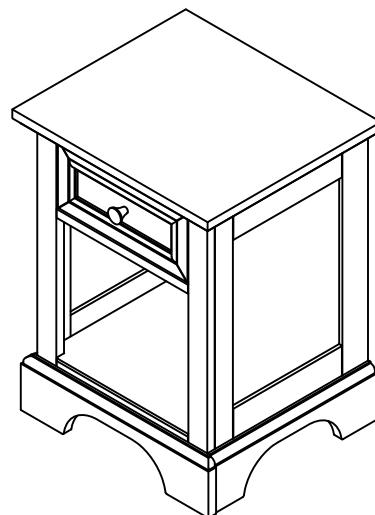
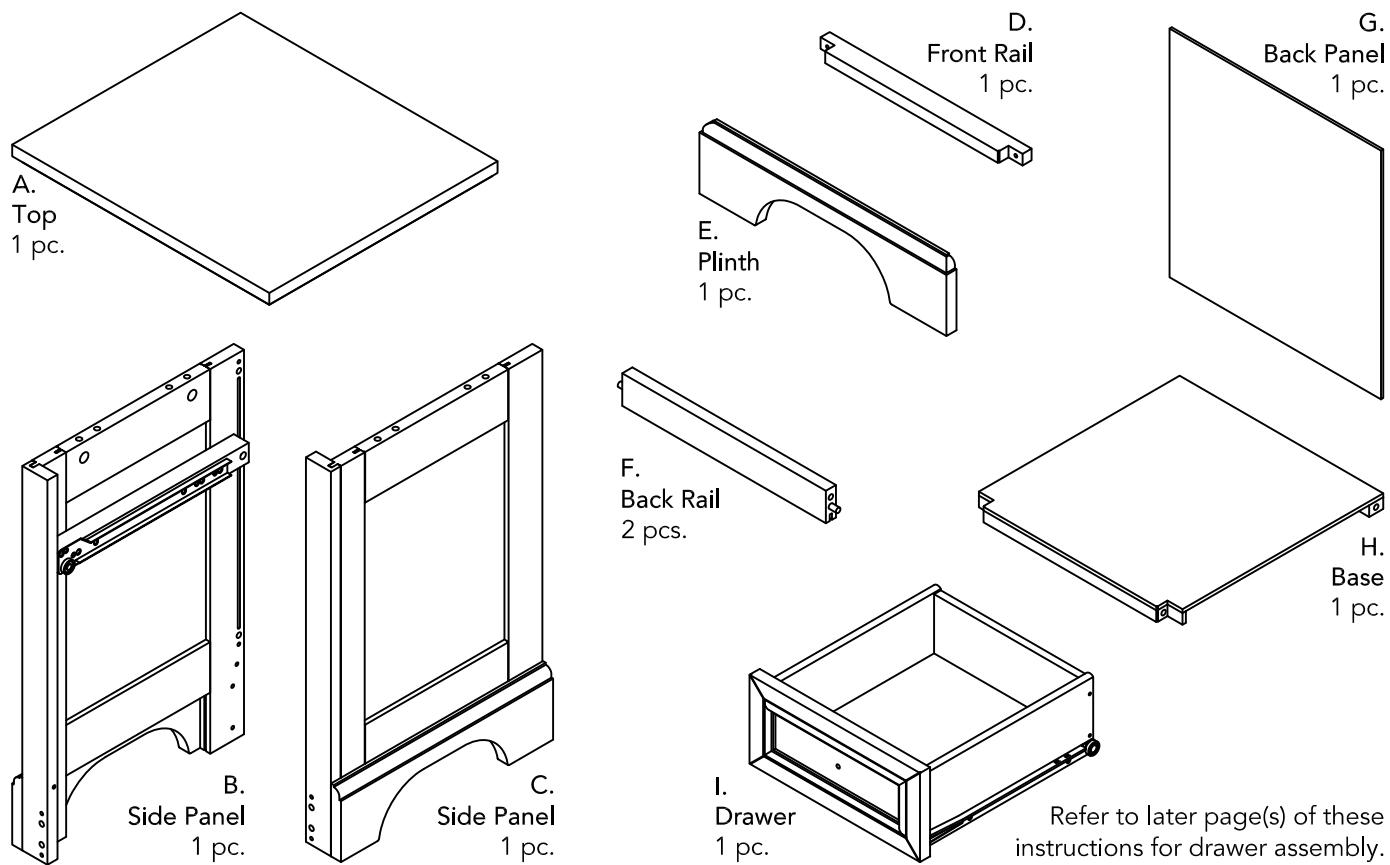


IMPORTANT

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List****Hardware List**

Cam Lock Screw
12 pcs. (+2 extra)



Cam Lock
12 pcs. (+2 extra)



1 1/4" Flat Head Screw (M3x32)
8 pcs. (+1 extra)



3/4" Flat Head Screw (M4x19)
2 pcs. (+1 extra)



1 1/4" Round Head Screw (M4x32)
4 pcs. (+1 extra)



1" Round Head Screw (M4x25)
2 pcs. (+1 extra)



5/8" Round Head Screw (M3x16)
4 pcs. (+1 extra)



Machine Screw (5/32" x 3/4")
1 pc.



Handle
1 pc.



Wooden Dowel
8 pcs. (+1 extra)

Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/7

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.

STEP 1

Insert Cam Lock Screws into pre-drilled holes of Side Panels (B) and (C), then tighten.





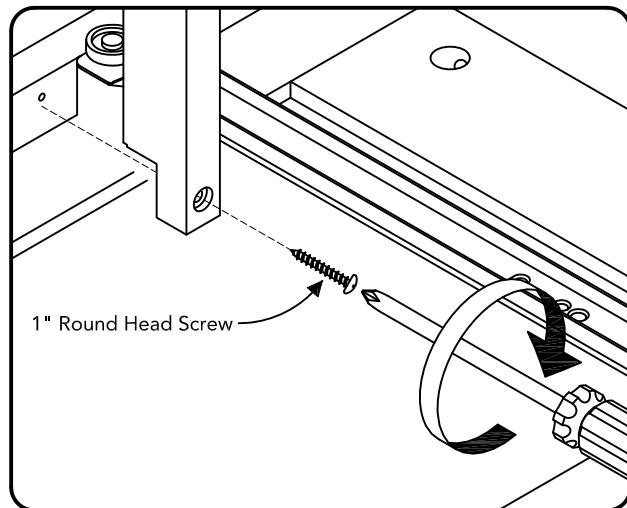


Figure 1

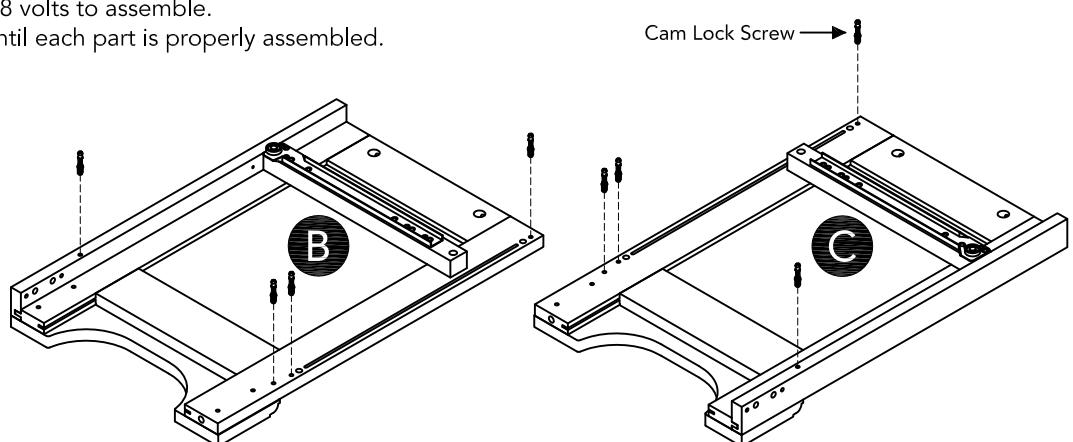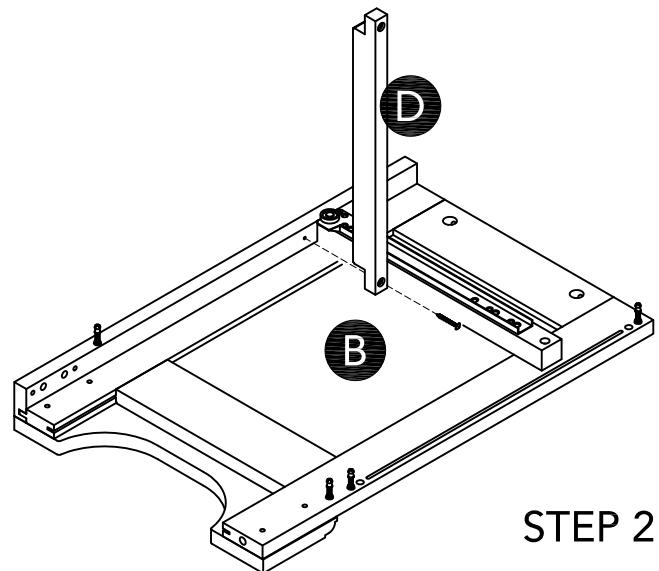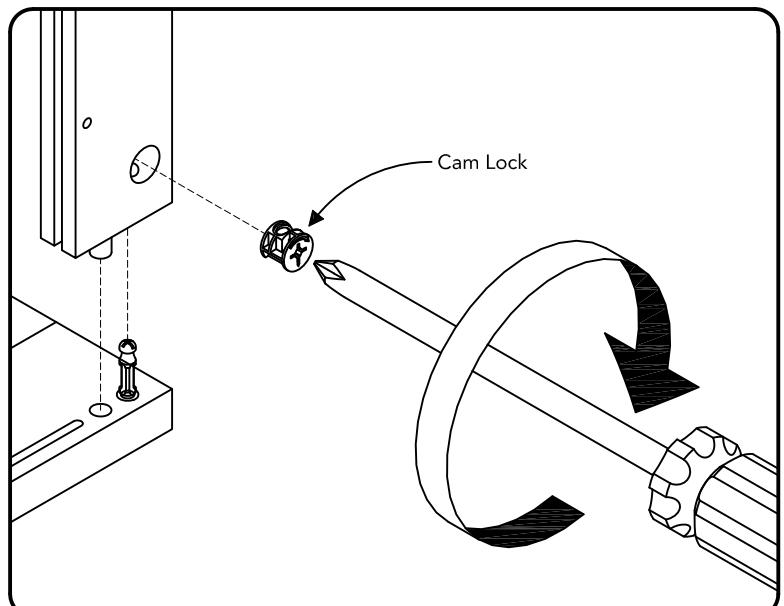

STEP 2

Attach Front Rail (D) to Side Panel (B) with 1" Round Head Screw. (See Figure 1)

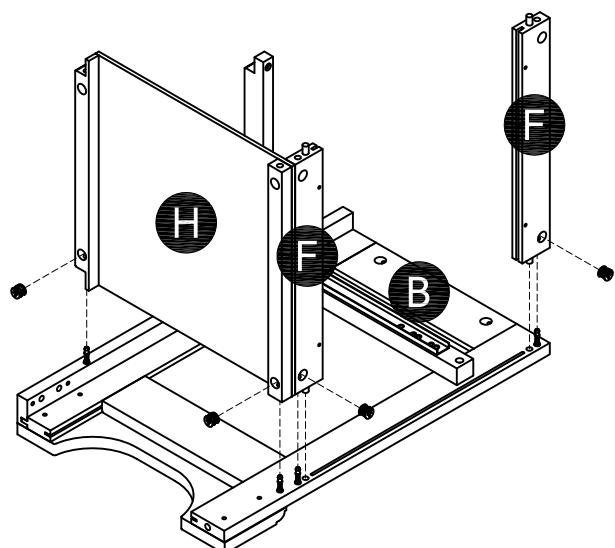

STEP 3

Attach Back Rails (F) and Base (H) to Side Panel (B) with Cam Locks. (See Figure 2)

Figure 2

Assembly Instructions 3/7

STEP 4


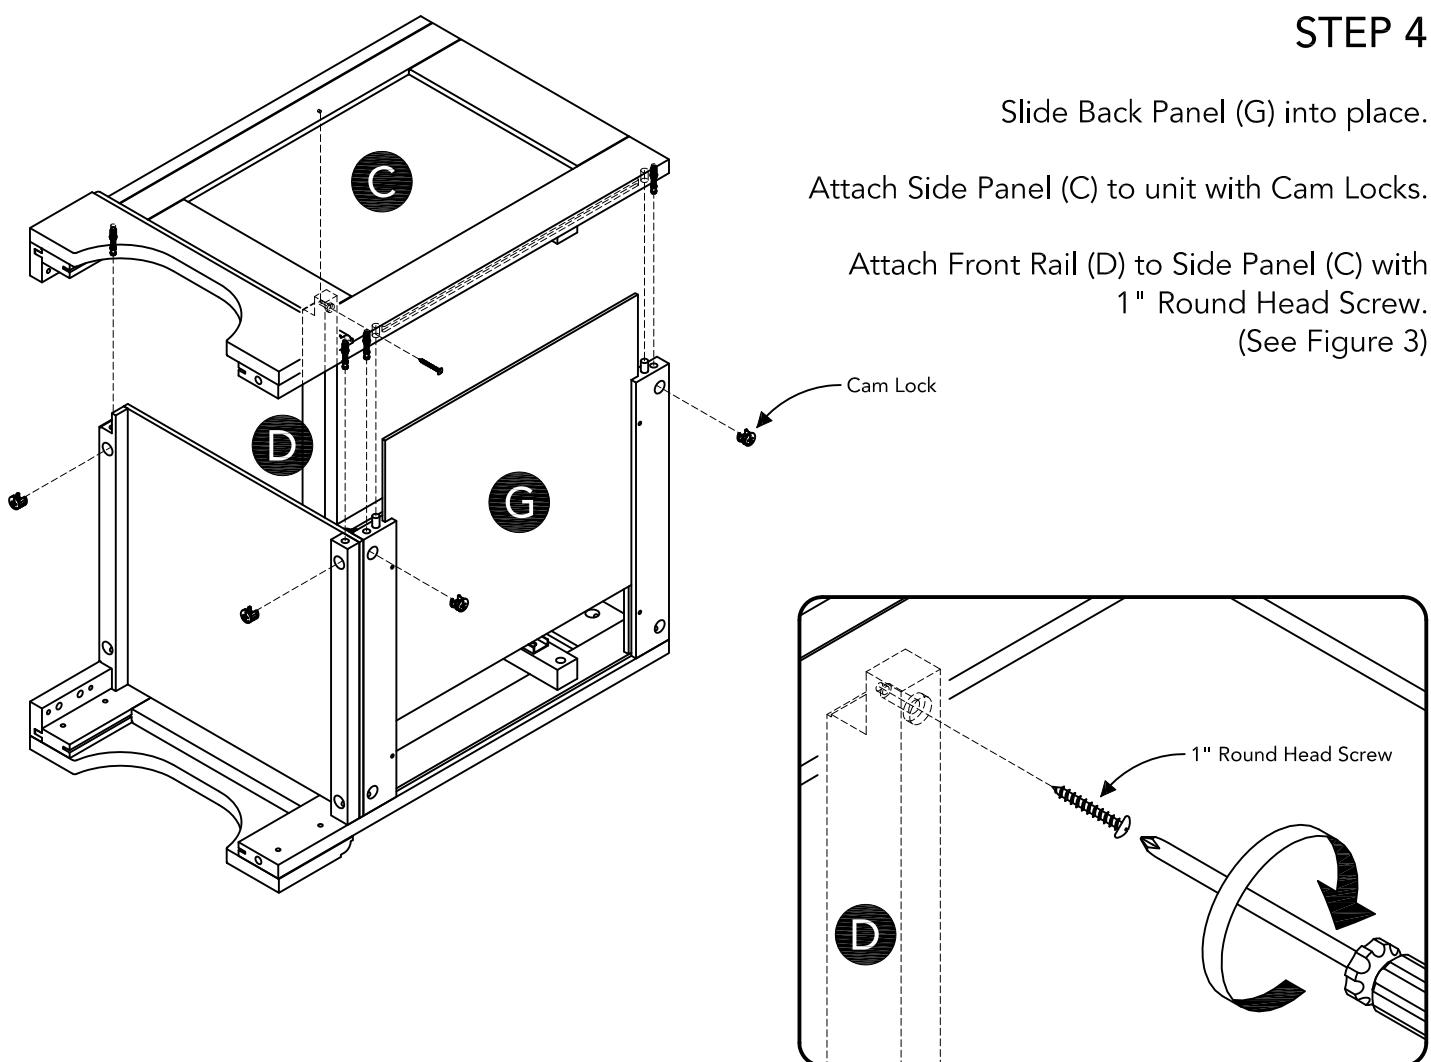


Figure 3

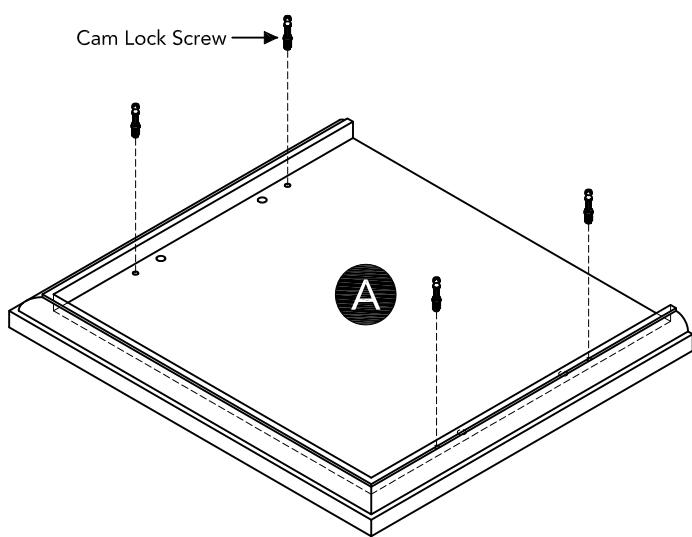

STEP 5



Insert Cam Lock Screws into pre-drilled holes of Top (A), then tighten.

Assembly Instructions 4/7

STEP 6

Attach Top (A) to unit with Cam Locks and Wooden Dowels.



Attach Plinth (E) to unit with 1 1/4" Round Head Screws and Wooden Dowels.

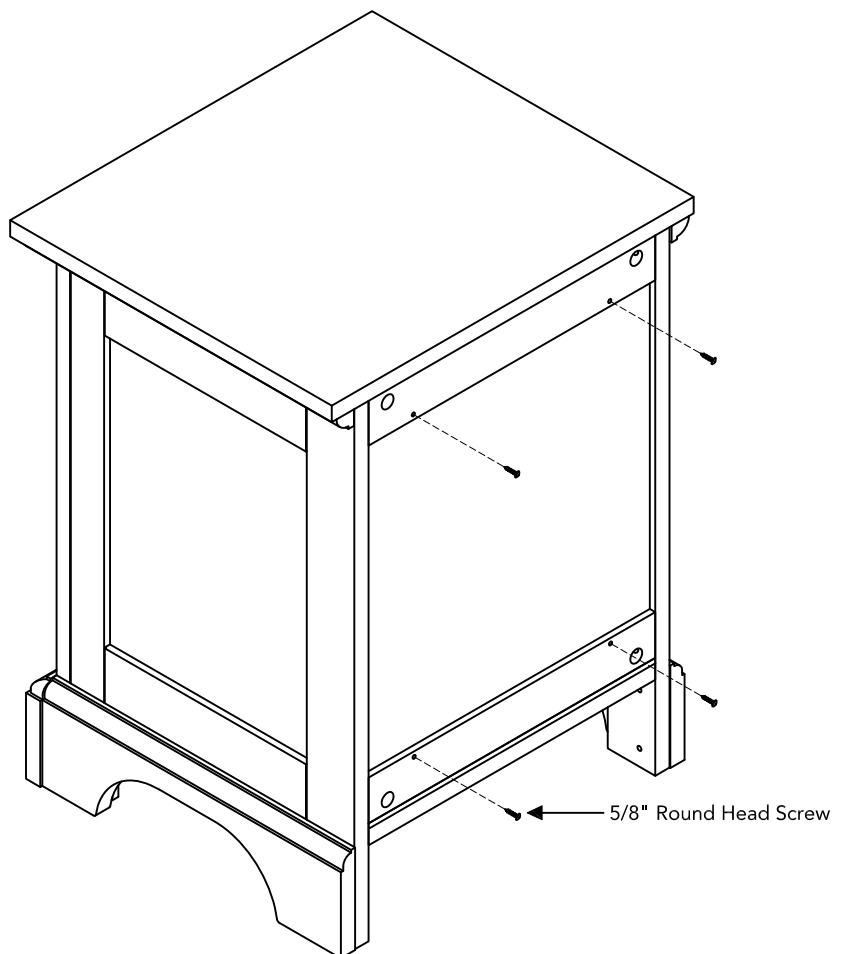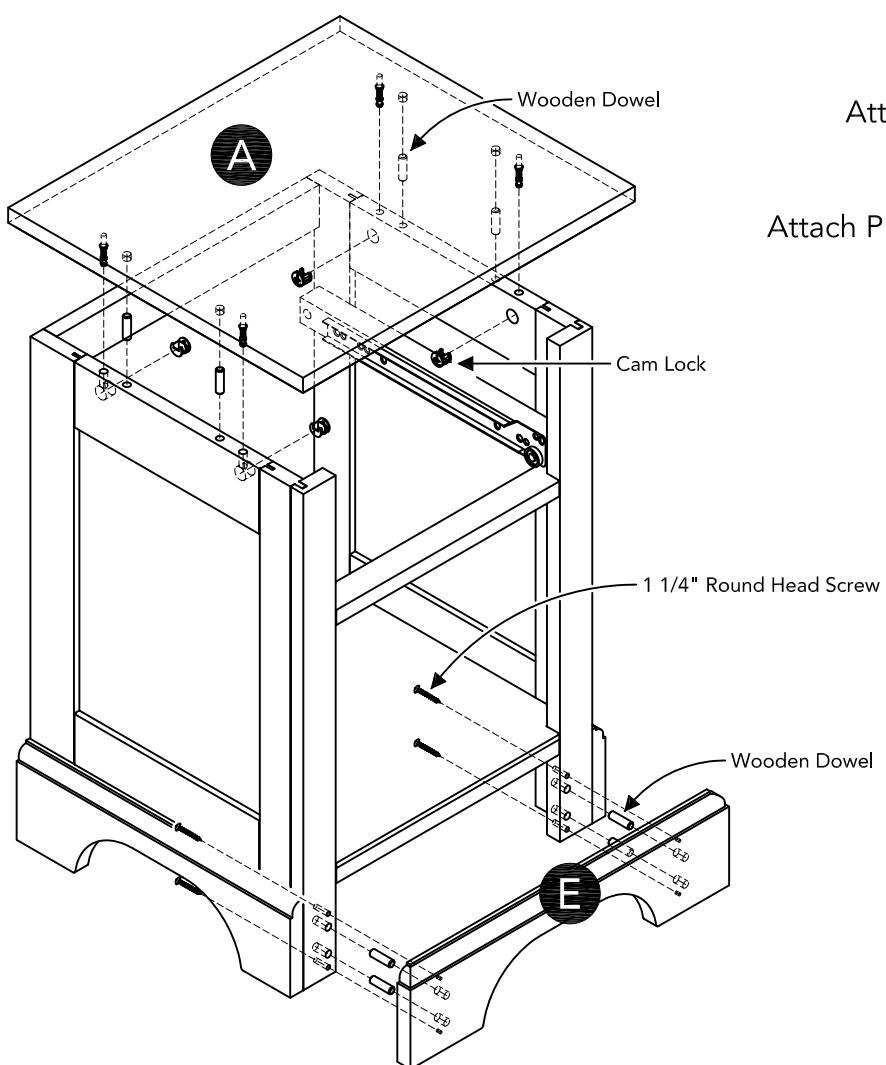

STEP 7

Insert 5/8" Round Head Screws into pre-drilled holes of unit, then tighten.

Drawer (I)

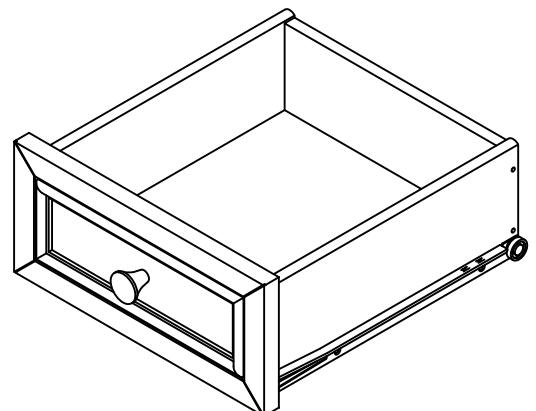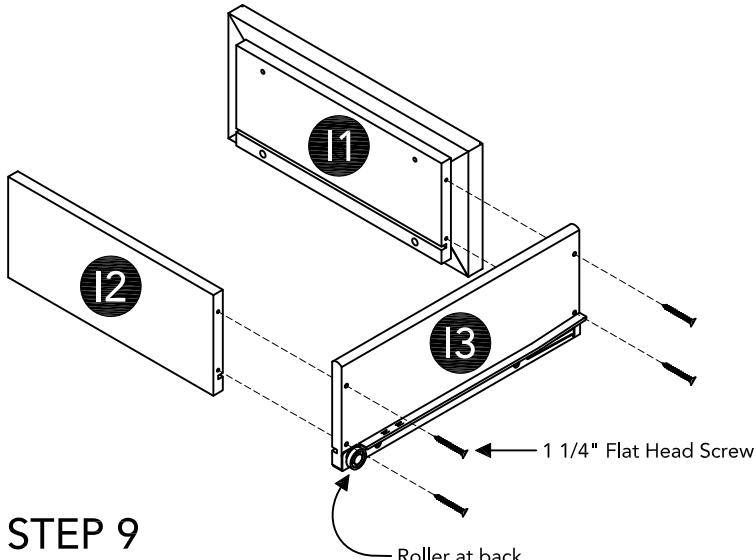



STEP 8

Attach Drawer Side (I3) to Drawer Front (I1) and Drawer Back (I2) with 1 1/4" Flat Head Screws.

STEP 9


Insert Drawer Bottom (I5) into groove.

Attach Drawer Side (I4) to unit with 1 1/4" Flat Head Screws.

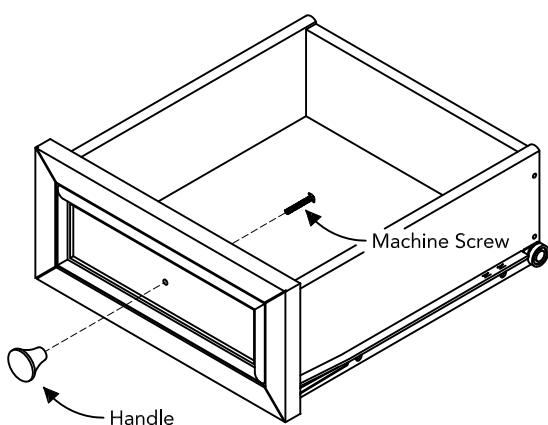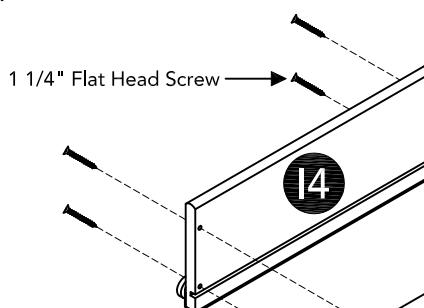


STEP 10

Attach Handle with Machine Screw.

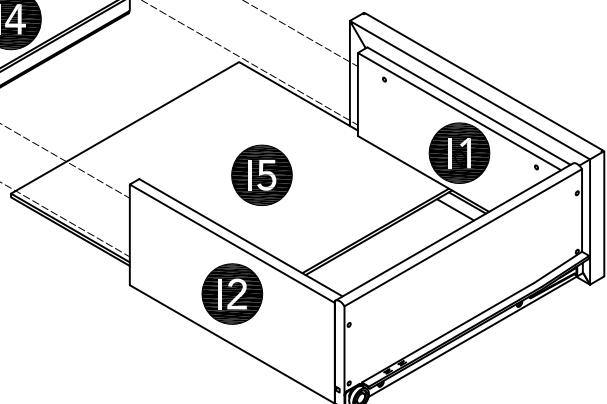


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.


Part List

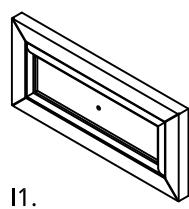


I1.
Drawer Front
1 pc.

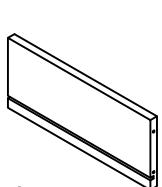


I2.
Drawer Back
1 pc.

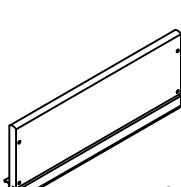

I3.
Drawer Side
1 pc.

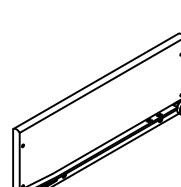

I4.
Drawer Side
1 pc.


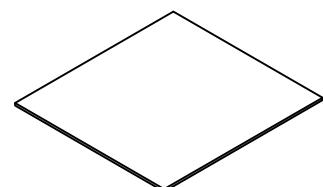


I5.
Drawer Bottom
1 pc.

Assembly Instructions 6/7

STEP 11

Loosen slightly the screws pre-installed on back of drawer front.

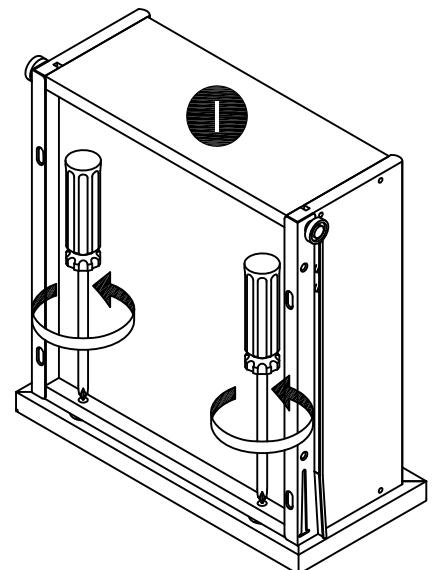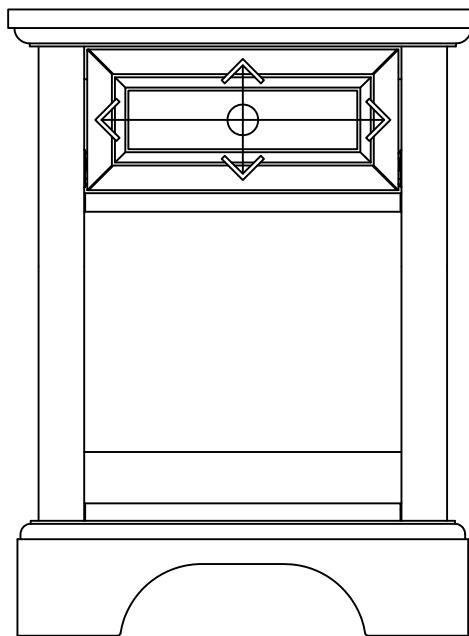

STEP 12



Insert drawer into unit, then adjust drawer front panel left or right and up or down until drawer gaps look proportional.

STEP 13

Pull drawer open slowly and re-tighten screws from Step 11.


Make sure drawer front panel does not move and lock drawer front panel into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

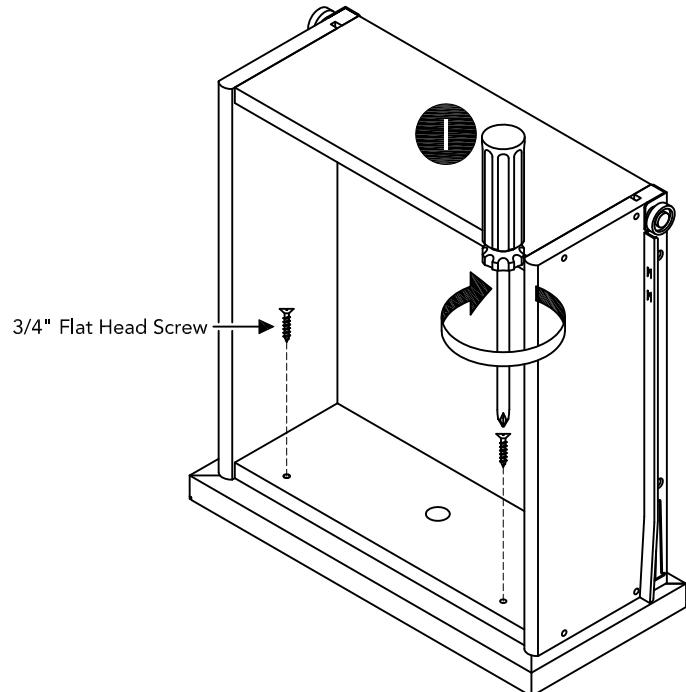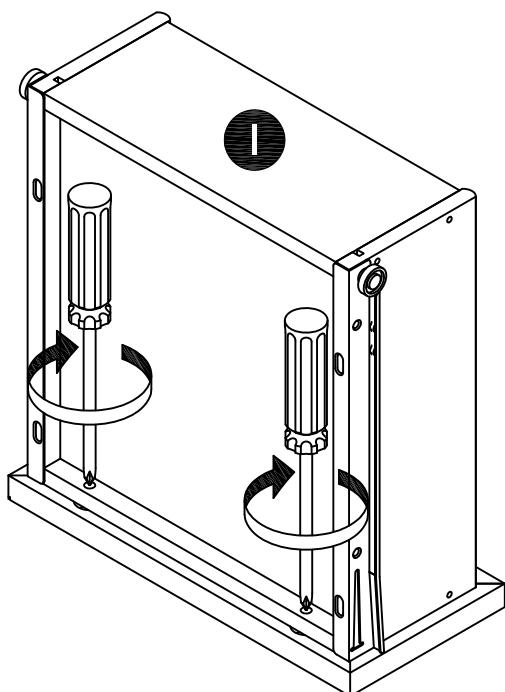

STEP 14

Slide Drawer (I) into position.

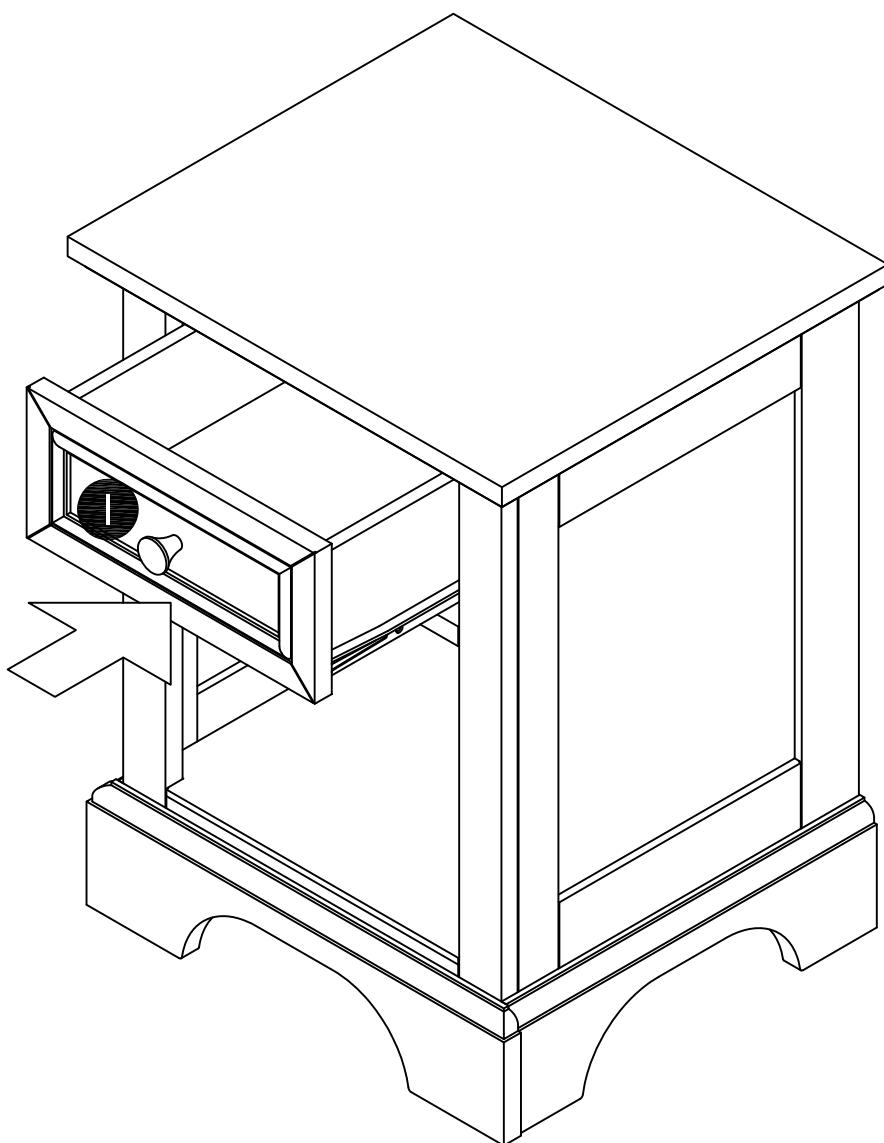

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.

Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319