


Bar Stool

IMPORTANT


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.


Do not use power tools above 8 volts to assemble.

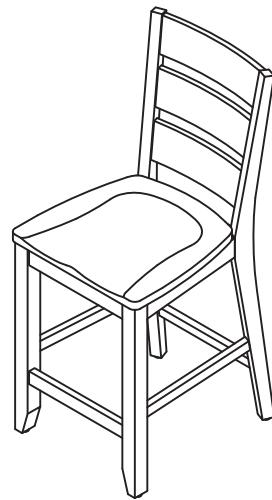


Part List

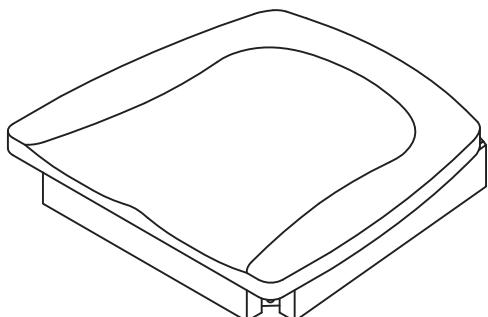


A.
Seat
1 pc.

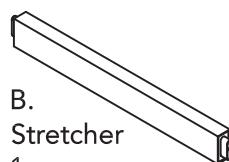


B.
Stretcher
1 pc.

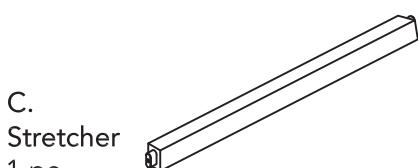


C.
Stretcher
1 pc.

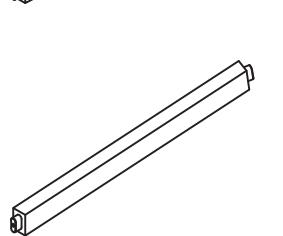

 
D.
Stretcher
1 pc.



 E.
Leg
1 pc.



F.
Leg
1 pc.

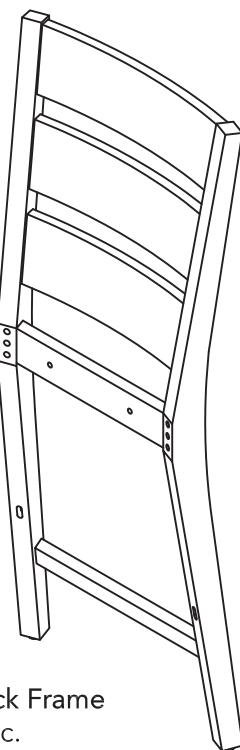

G.
Back Frame
1 pc.

Hardware List



Hex Wrench
1 pc.



Flat Washer
14 pcs. (+1 extra)



M6x40
Head Cap Bolt (short)
2 pcs. (+1 extra)



M4x38
Wood Screw
6 pcs. (+1 extra)



Hex Wrench (Small)
1 pc.



Spring Washer
14 pcs. (+1 extra)



M6x70
Head Cap Bolt
6 pcs. (+1 extra)



M6x90
Head Cap Bolt (long)
6 pcs. (+1 extra)


Tool(s) required for assembly: Phillips screwdriver

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319

Assembly Instructions 2/3

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

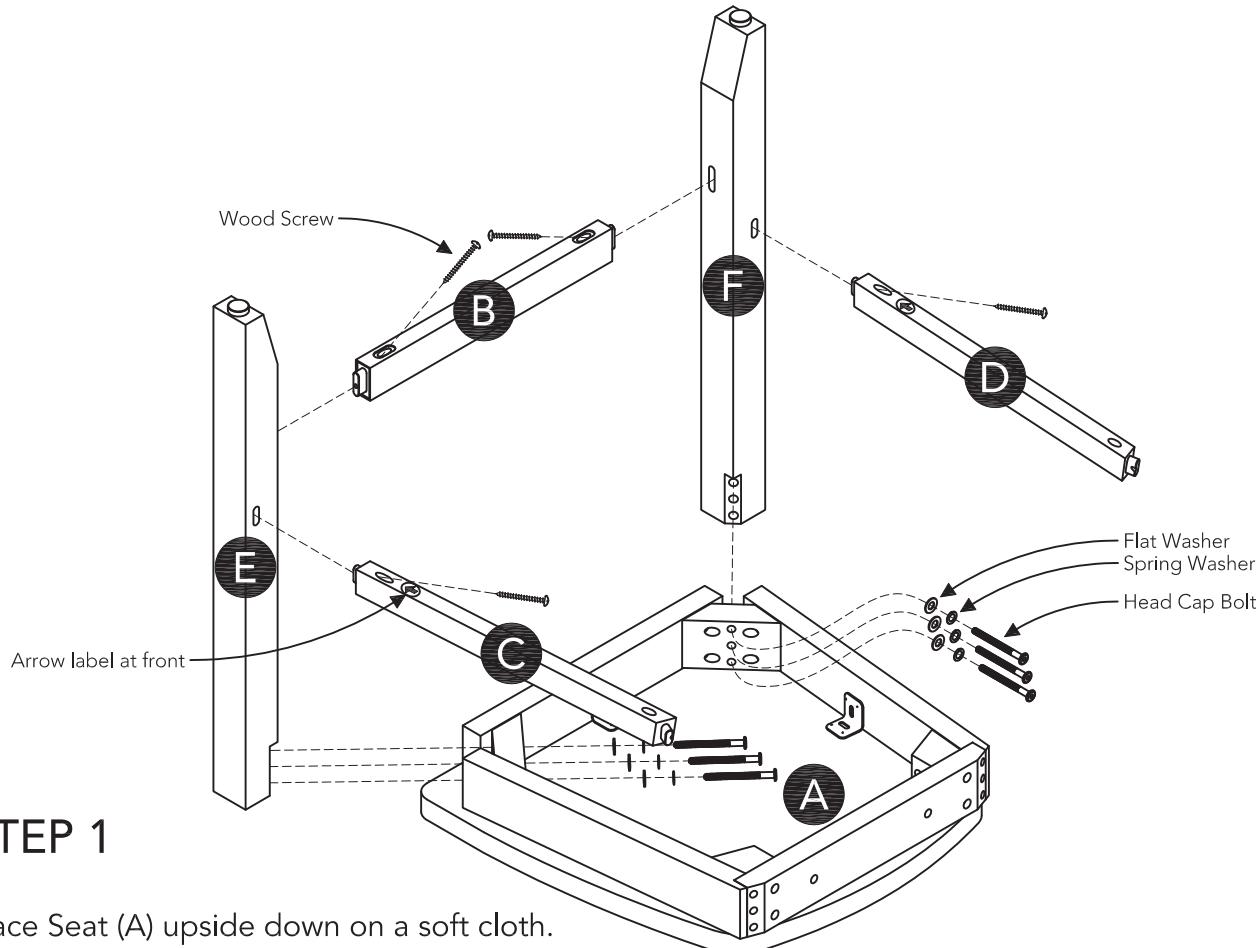

STEP 1

Place Seat (A) upside down on a soft cloth.

Attach Legs (E) and (F) to Seat (A) with Flat Washers, Spring Washers and Head Cap Bolts, tightening bolts only halfway. (See Figure 1)

Attach Stretcher (B) to unit with Wood Screws. (See Figure 2)

Oriентate Stretchers (C) and (D) so Arrow labels are at front of unit, then attach Stretcher (C) to Leg (E) and Stretcher (D) to Leg (F) with Wood Screws. (See Figure 3)

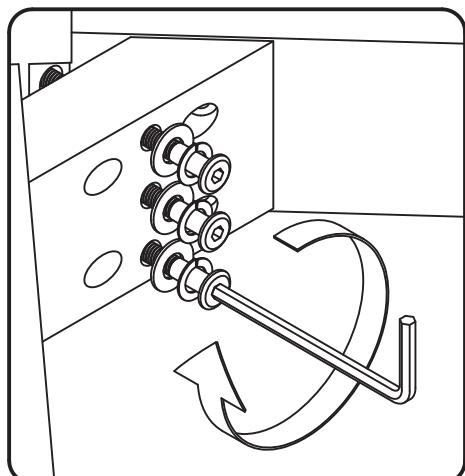


Figure 1

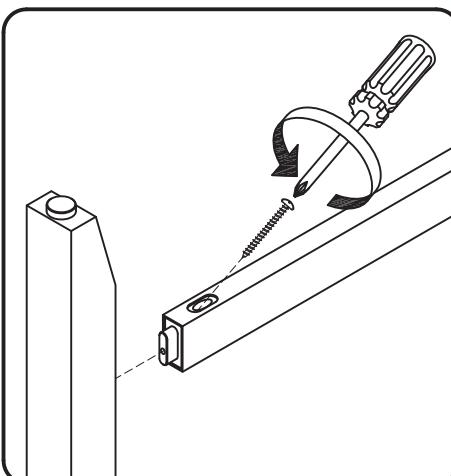


Figure 2


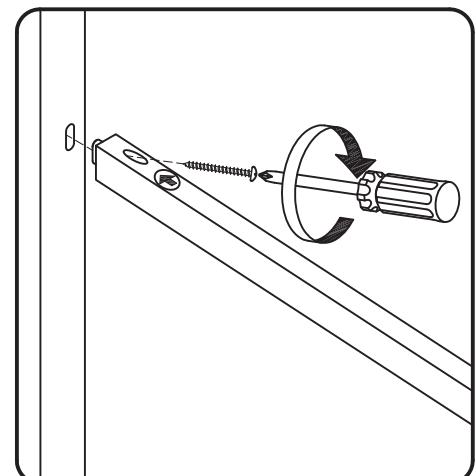


Figure 3

Assembly Instructions 3/3

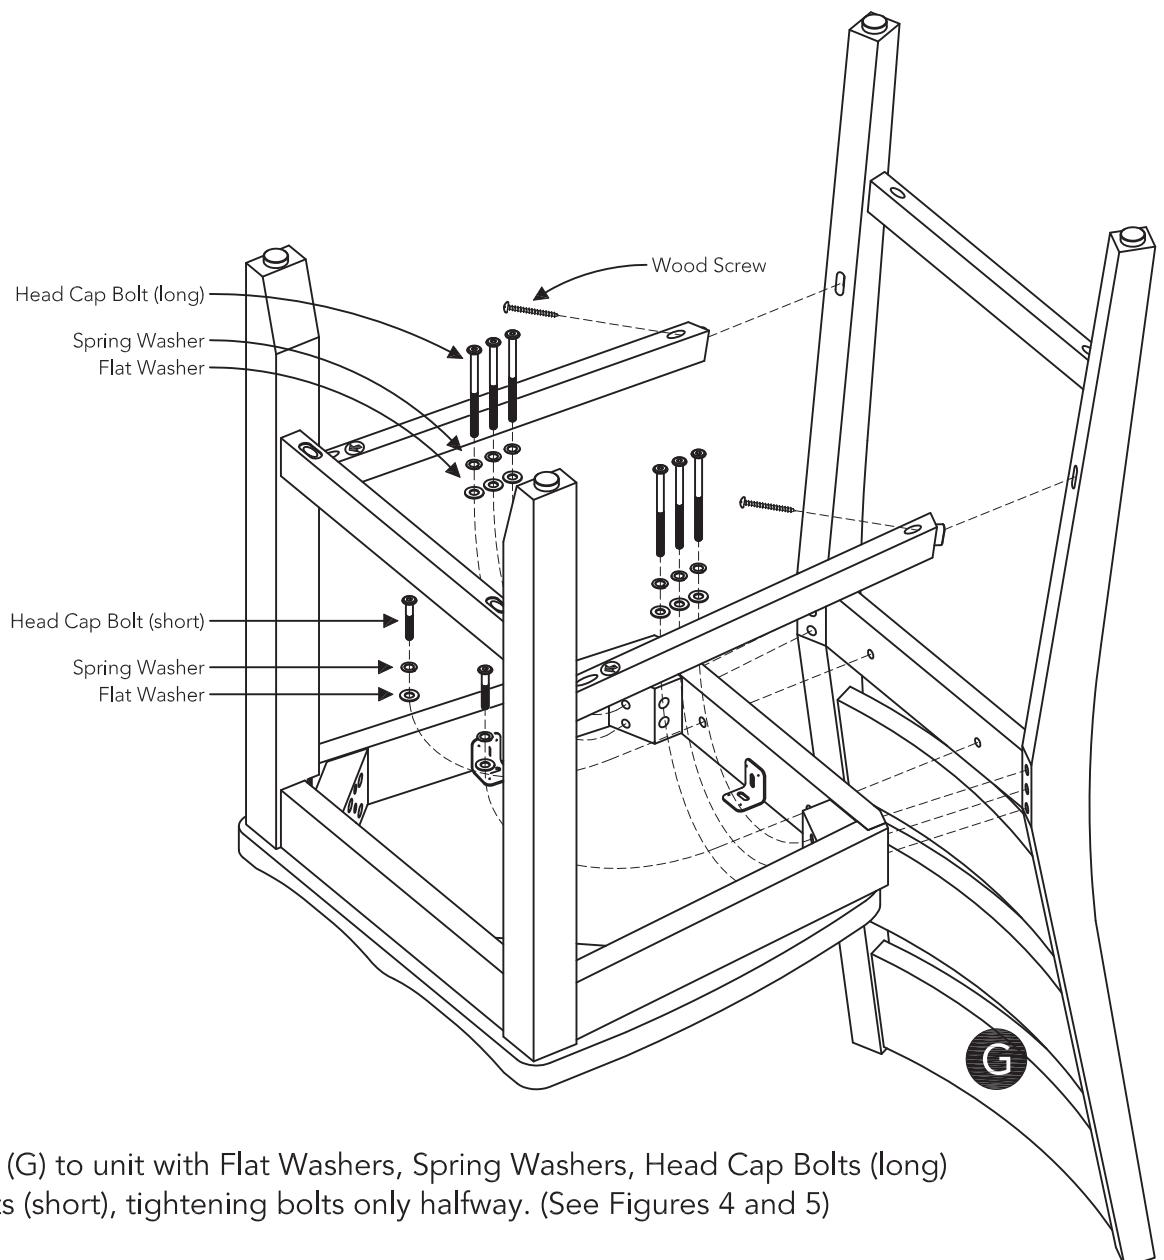

STEP 2

Attach Back Frame (G) to unit with Flat Washers, Spring Washers, Head Cap Bolts (long) and Head Cap Bolts (short), tightening bolts only halfway. (See Figures 4 and 5)

Tighten all bolts used in Steps 1 and 2.

Insert Wood Screws into pre-drilled holes in unit, then tighten.

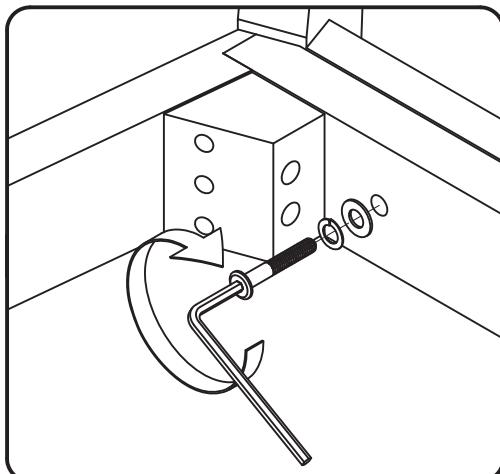


Figure 4

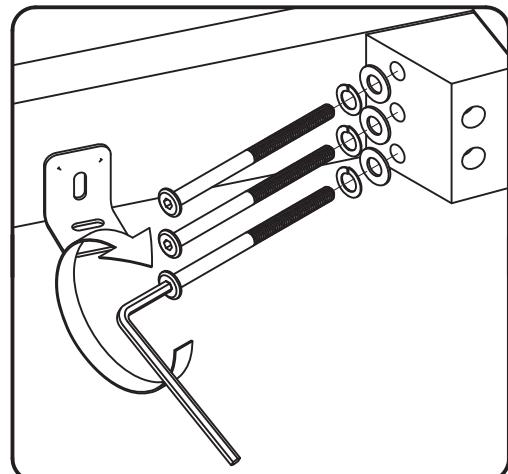


Figure 5

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture.

Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

CLEAN

with a soft cloth moistened in lukewarm soap and water.
Buff with a dry clean cloth.



Home Styles will provide replacements free of charge for missing or damaged hardware or parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retail affiliate, Home Styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged hardware or parts may be requested at:

www.homestyles-furniture.com/customer-service/replacement-parts

Home Styles Customer Service: www.homestyles-furniture.com,
servicedesk@homestyles-furniture.com, 888-680-7460, 877-831-0319