

© Flexsteel Industries, Inc. | Last Updated 04/21

Arlo | 2810

19 59 233 59M	57 58 58L 57L 58M 58H 57M 57H	FEATURES
•	•	Flexsteel Spring Unit DualFlex
•	•	Back Construction Attached
•	•	Seat Construction Attached
•	•	Seat Cushion(s) High-Density (HC)
	0	Tailoring Arm Covers

Standard o Optional

PRODUCT DIMENSIONS	OVER			SEAT			Arm	Open	Wall
	Height	Width	Depth	Height	Width	Depth			Clearance
Armless Chair -19	44"	26″	42″	21″	26″	23″			
Armless Recliner -59	43″	26″	42″	20″	26″	22″		70″	5″
Full Wedge -233	43″	65″	42″	20″	42″	25″			
Straight Console -72	43″	8″	36″	24″	8″	22″			
LAF Recliner -57	43″	32″	42″	20″	24"	22″	26″	70″	5″
RAF Recliner -58	43″	32″	42″	20″	24″	22″	26″	70″	5″
RAF Power Recliner with Power Headrest & Lumbar -58L	43″	32″	42″	20″	24″	22″	26″	70″	5″
LAF Power Recliner with Power Headrest & Lumbar -57L	43″	32″	42″	20″	24″	22″	26″	70″	5″
Armless Power Recliner -59M	43″	26"	42″	20″	26″	22″		70″	5″
RAF Power Recliner -58M	43″	32″	42″	20″	24″	22″	26″	70″	5″
RAF Power Recliner with Power Headrest -58H	43″	32″	42″	20″	24″	22″	26"	70″	5″
LAF Power Recliner -57M	43″	32″	42″	20″	24″	22″	26″	70″	5″
LAF Power Recliner with Power Headrest -57H	43″	32″	42″	20″	24″	22″	26″	70″	5″

NOTES

Transitional style Available in over 250 select fabrics

Available in over 230 select tabrics
Upholstery Material: Fabrics
Console includes storage compartment and two cupholders
Removable backs allow for easy lifting and maneuvering through doorways
Power allows you to smoothly recline to any position, adjust the headrests, and adjust the lumbar

Supports.

On styles with arms, a home feature returns the headrest, footrest, and lumbar support to their original positions.

A single USB port is included on each power button control on styles with arms.

Power to the USB port is activated only when the port is in use.

Power allows you to smoothly recline to any position.

Power allows you to smoothly recline to any position and adjust the headrests.

On styles with arms, a home feature returns the headrest and footrest to their original positions.



Power Recline, Headrest, & Lumbar



Hidden Power Button Control

The power button control is located discreetly between the seat and arm for convenient operation.





Power Recline & Headrest




Interlocking Brackets
Interlocking brackets securely
attach one sectional component
to another to prevent them from
separating even when reclining.

2810 Arlo Sectional | Components & Configurations

 
Reclining Sofas & Sectionals

Components

LAF = Left-Arm-Facing RAF = Right-Arm-Facing

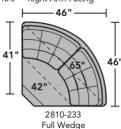







2810-57 LAF Recliner 2810-57M LAF Power Recliner 2810-57H LAF Power Recliner with Power Headrest 2810-57L LAF Power Recliner with

 Power Headrest & Lumbar




LAF Recliner
2810-58M
LAF Power Recliner
2810-58H
LAF Power Recliner
with Power Headrest
2810-58L
LAF Power Recliner with

 Power Headrest & Lumbar





Sample Configurations

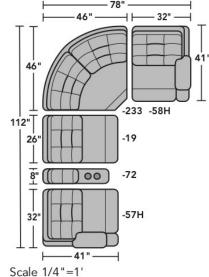

Dimensions are in inches and are subject to variance.
© Flexsteel Industries, Inc. 12/20
FLX-CP-FR-CC-2810

