 


**homestyles**

20 05022 0944

**Kitchen Island**

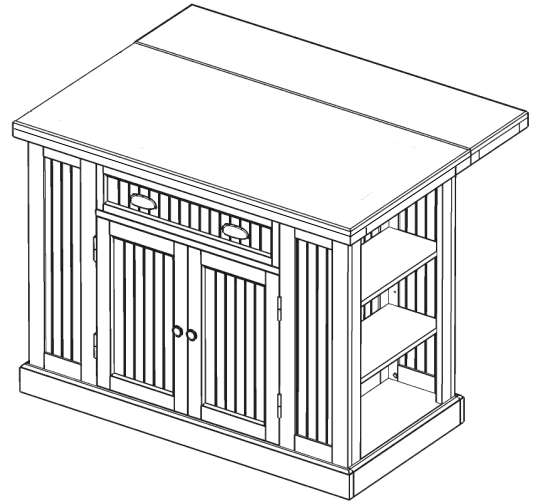

 
**IMPORTANT**

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.


Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

**Part List**

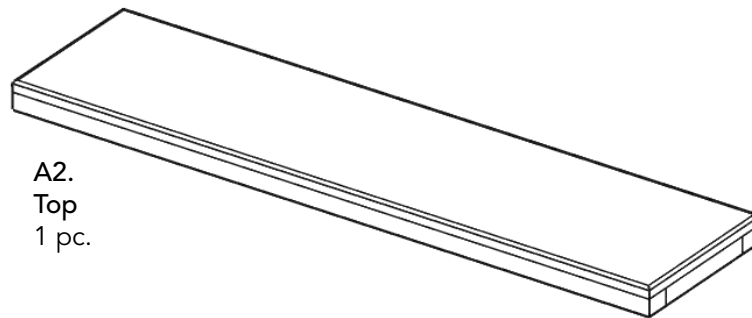

A2.  
Top  
1 pc.

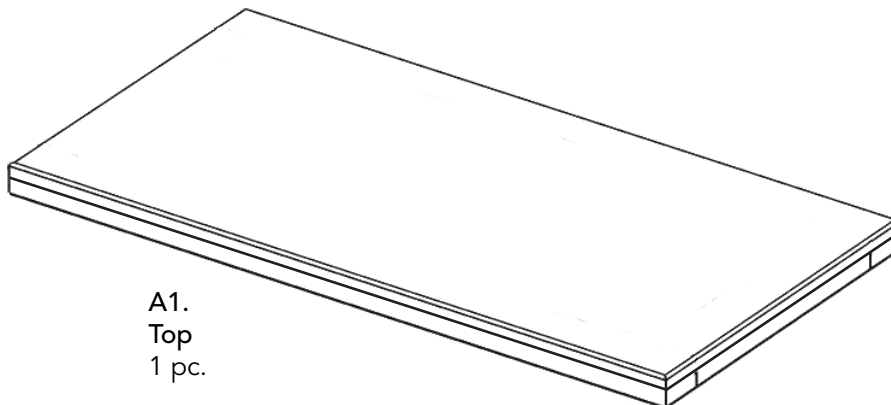 

A1.  
Top  
1 pc.

**For assembly see instructions in carton 20 05022 0945.**

Tools required for unpacking: Phillips screwdriver, hammer

Home Styles Customer Service: [www.homestyles-furniture.com](http://www.homestyles-furniture.com),  
[servicedesk@homestyles-furniture.com](mailto:servicedesk@homestyles-furniture.com), 888-680-7460, 877-831-0319