



Assembly Instructions

DINING TABLE


DLY1007DS

- Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
 3. Please do not over tighten screws or bolts.
 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR COUNTER TABLE			
No.	PART DESC	CODE.	Q'TY
A	DINING TABLE TOP		1
B	DINING TABLE - LEG (PCE)	PDLY1007DSLEG	4

HARDWARE LIST PACKED INSIDE BOX				
No.	HARDWARE DESC		CODE.	Q'TY
1		ALLEN BOLT (5/16" x 70mm)	PDLY1007DSHW	8
2		SPRING WASHER (5/16")		8
3		FLAT WASHER (5/16")		8
4		ALLEN KEY M4		1

STEP:1

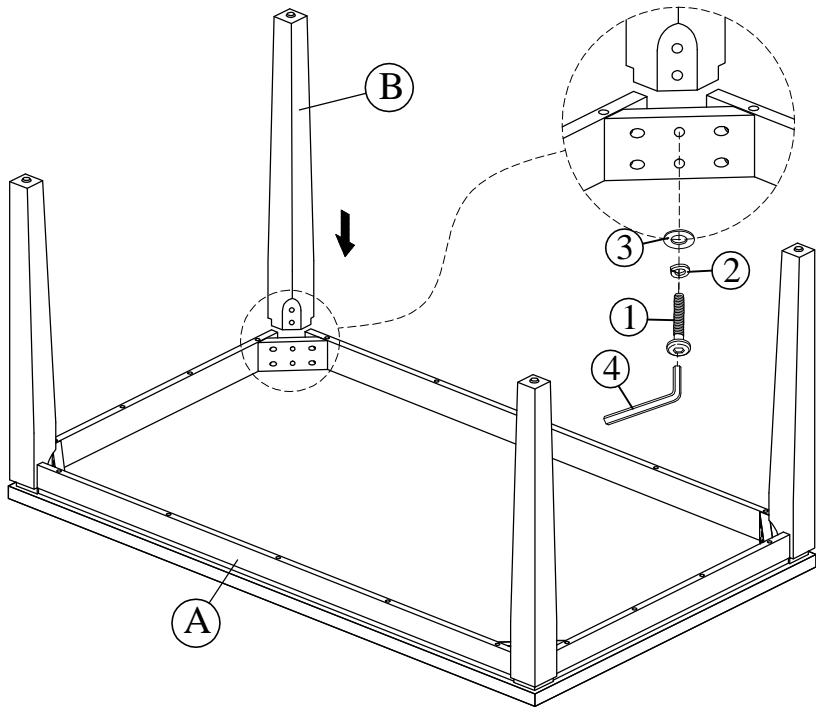



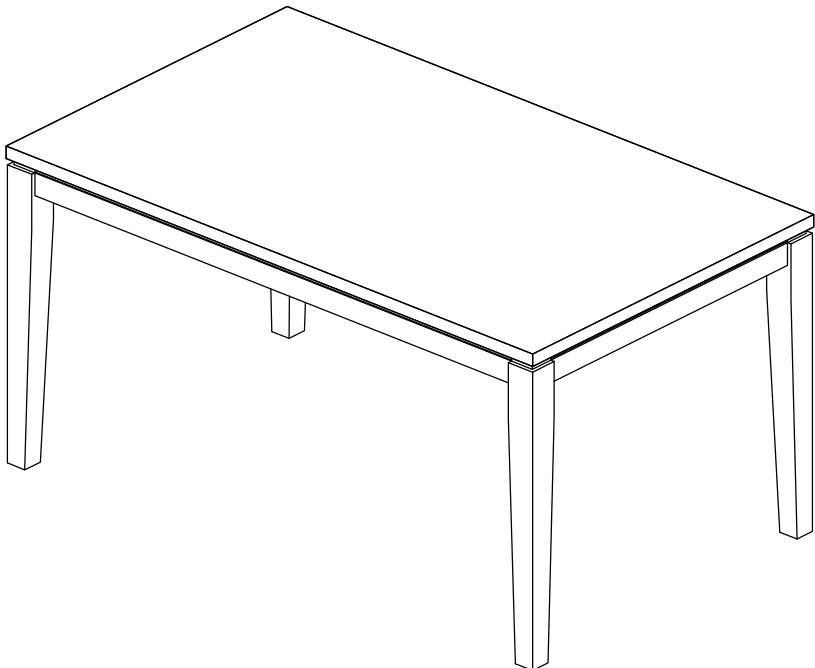




COMPLETED




Assembly Instructions
DINING SIDE CHAIR
DLY1007DS

 - Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.
1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
 3. Please do not over tighten screws or bolts.
 4. Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.


PART LIST FOR COUNTER SIDE CHAIR			
No.	PART DESC	CODE.	Q'TY
A	DINING SIDE CHAIR - BACK FRAME WITH CUSHION	PDLY1007SCBFR	1
B	DINING SIDE CHAIR - SEAT FRAME WITH CUSHION	PDLY1007SCSEA	1
C	DINING SIDE CHAIR - L & R FRONT LEG	PDLY1007SCLEG	2
D	DINING SIDE CHAIR - SIDE STRETCHER L & R	PDLY1007SCSTR	2

 HARDWARE LIST PACKED INSIDE BOX			
No.	HARDWARE DESC	CODE.	Q'TY
1	 ALLEN BOLT (1/4" x 40mm)	PDLY1007SCHW	2
2	 ALLEN BOLT (1/4" x 75mm)		4
3	 ALLEN BOLT (1/4" x 60mm)		4
4	 SPRING WASHER (1/4")		10
5	 FLAT WASHER (1/4")		10
6	 SCREWS (M4x38mm)		4
7	 ALLEN KEY M4		1

STEP:1

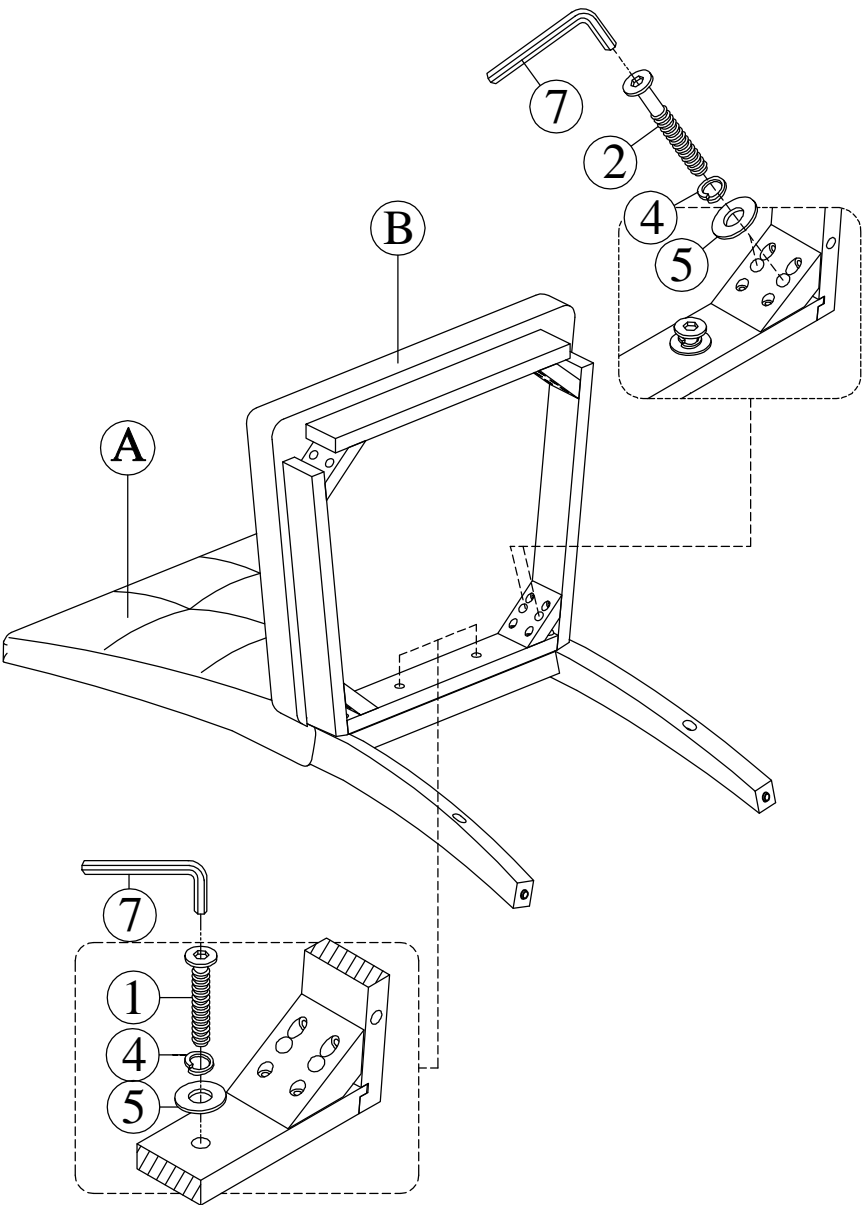

STEP:2

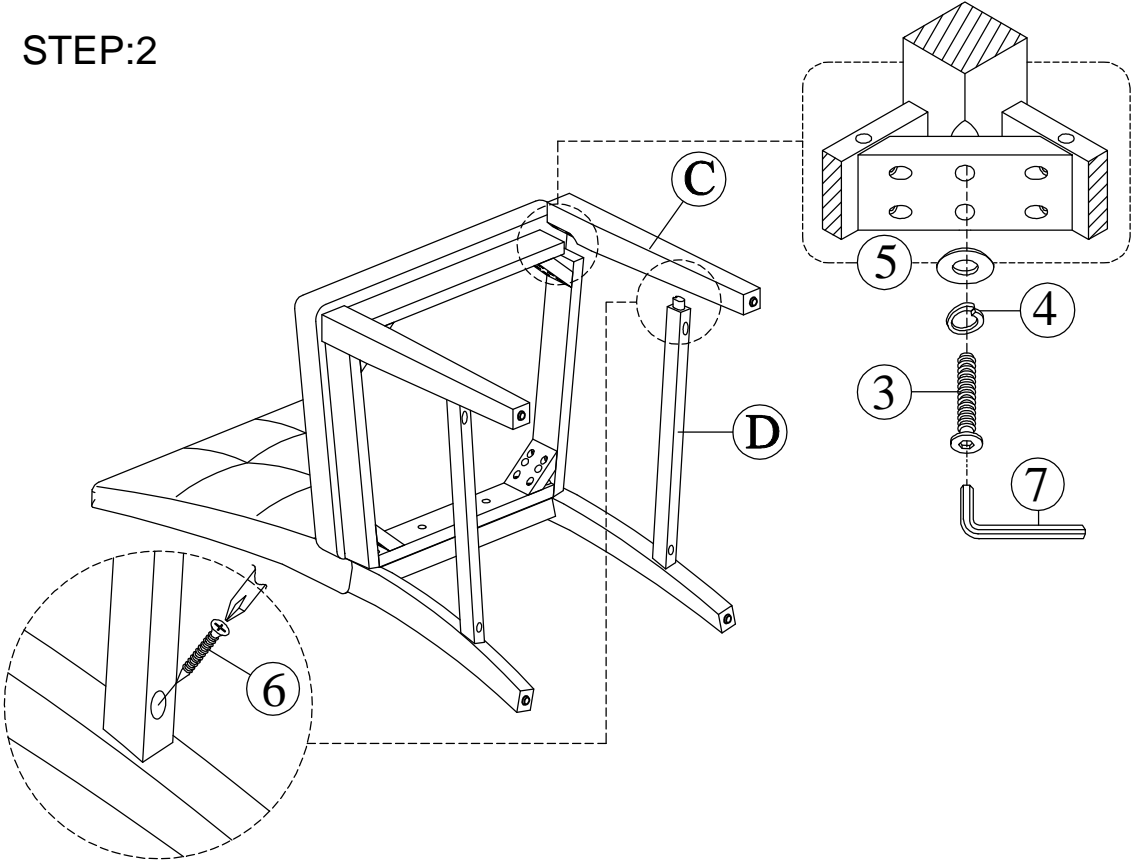

COMPLETED

