Assembly instruction for

DESCRIPTION: DRESSER ITEM NO: NH100DR

Caution: Please read instructions thoroughly before unpacking assembly parts. Sharp, exposed staple tips can cause injury, therefore, for your protection, please remove any exposed staples used in packing.

- 1. We recommend that you should assemble this product with the assistance of another person; this will make assembly easier, and will help to eliminate damage to the product or injury to persons during assembly.
- 2. Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment.
- 3. Please do not over tighten screws or bolts.
- 4. Please put all parts on a non abrasive floor before assembly. and follow the assembly step to assemble your newly purchased product correctly and efficiently .

PART LIST			
NO	PART DESCRIPTION	CODE	QTY
A	DRESSER TOP	DRTOP	1
В	DRESSER BACK PANEL	DRBPN	1
С	DRESSER TOP DRAWER	DRDRW1	2
D	DRESSER CENTER DRAWER	DRDRW2	2
Е	DRESSER BOTTOM DRAWER	DRDRW3	2
F	DRAWER WOODEN HANDLE W/SCREW	CGHD	6

