

SUMMIT

IMPORTANT INFORMATION ABOUT USING YOUR OVEN

This oven's burners must be ignited with each use. To do so, follow these instructions:

- 1. Open oven door completely**
- 2. Turn the temperature knob to your desired setting**
- 3. Push the knob in and hold for 5-7 seconds (you will hear a clicking sound; this is normal)**
- 4. Release the knob**

NOTE: You may need to repeat this process if it does not turn the ignition on after the first attempt.

A NOTE ABOUT YOUR CONTROL PANEL

This wall oven is equipped with a cooling fan behind the control panel, which will automatically turn on and off throughout the cooking process and will also cycle once or twice **after the oven has been turned off.**



SUMMIT APPLIANCE DIVISION FELIX STORCH, INC. ISO 9001:2015 CERTIFIED

770 Garrison Avenue, Bronx, NY 10474 USA • TEL 718.893.3900 • FAX 844.478.8799 • info@summitappliance.com • summitappliance.com