



Rechargeable Battery: Your 2WT13R-SF is equipped with a rechargeable battery. Use the included FT-USB CHARGER to charge your remote. We recommend charging your remote before first use. Charge time is approximately 2 hours.

Register online at www.compustar.com within 10 days of purchase to activate your new remote's warranty.

QUICK START

 4 seconds	Hold this button for 4 seconds to power up the remote.
	Tap this button 1 time to lock and/or arm your system.
 x 2	Double tap this button to activate AUX 2 output when "Secure AUX mode" is disabled.
 5 sec	Hold this button for 5 seconds to activate "panic" or "vehicle locator" feature NOTE: additional connections may be required.
	Tap this button 1 time to unlock and/or disarm your system.
 x 2	Double tap this button to activate AUX 1 output when "Secure AUX mode" is disabled.
 2.5 sec	Hold this button for 2.5 seconds to activate rear hatch/trunk release. NOTE: additional connections may be required.
	Tap this button 1 time to wake up remote once awake tap again to update the system status.
 x 2	Tap this button 1 time to temporarily disable Secure AUX mode. Double tap this button to ENTER remote user option. Use "  /  " to navigate the user features and a single tap of the "  " to enter selected features. ONLY while the vehicle is remote started, double tap this button to RE-Start remote start runtime.
 2.5sec	Hold this button for 2.5 seconds to activate OR cancel the remote start sequence. Hold this button while in the remote user option for 2.5 seconds to EXIT the user option.

REMOTE USER FEATURES

 x 2 Double tap this button to ENTER remote user option. TAP " /  " to navigate the user features left or right and a single tap of the " " to enter selected features.

FEATURE	FUNCTION/DESCRIPTION	FEATURE	FUNCTION/DESCRIPTION
LCD view	This feature will allow you to select a different vehicle image for the remote LCD display. There are 3 options use "  " to select, the lock/unlock icon will move to the next feature.	Sound/Vibrate	This feature will allow the volume of the remote chime to be adjusted at 3 levels. When set to off, the remote will be silent with "vibrate". Use "  " to select level.
"Full"	This feature enables/disables FULL Alarm or Alarm Remote Start mode allowing the remote to receive alarm trigger alerts.	LCD brightness	This feature will allow the LCD screen brightness to be adjust by 3 levels. Use "  " to select level.
Valet	This feature Enables/Disables Valet mode. NOTE to enable Valet mode using T-13, vehicle ignition/key must be in the on position.	Screen time out	This Feature will allow the screen timeout to be adjusted between 4 and 8 seconds. Use "  " to select.

To reprogram your remote, cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. Then tap the Lock button on your remote. Repeat for any additional remotes. All remotes must be programmed during one sequence. If you receive two parking light flashes, your CompuStar has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit www.compustar.com for a complete user's manual.

AUX 1/2 Config	These features allow AUX 1/2 to be displayed as optional functions, or turned off. Use "  " to view options.	Drive lock	This feature will allow Drive lock/Ignition controlled Door locks to be enabled/disabled. NOTE additional dealer programming is required.
Language	This feature allows the language of the remote to be changed between English, French, Spanish. Use "  " to view options.	2nd car mode	When 2nd car mode is enabled, this remote can be programmed to and control a 2nd vehicle using a compatible system.
Temperature	This feature allows the remote to display vehicle internal Temperature (If Thermistor is installed) in Fahrenheit or Celsius. Use "  " to select.	Siren-Horn on/off	This allows the user to disable the horn/siren output withkeyless-remote start functions. NOTE: when using this feature the "pre warn" chirps will also be disabled.
Remote ID	This will display the remote serial number for identification.	Shock Sensor on/off	This will enable/disable the the shock sensor if there is one installed. NOTE: does NOT apply to remote start only system.
Power down	This feature will power down the LCD remote. Tap and hold "  " for 4 seconds.	Proximity UNLOCK	This will enable/disable the proximity unlock feature of the remote. NOTE additional dealer programming required.