5450-10

Entertainment Console


IMPORTANT


homestyles[°]

Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

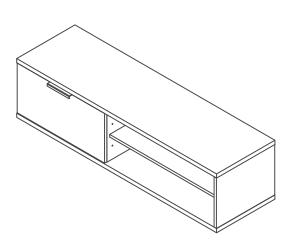

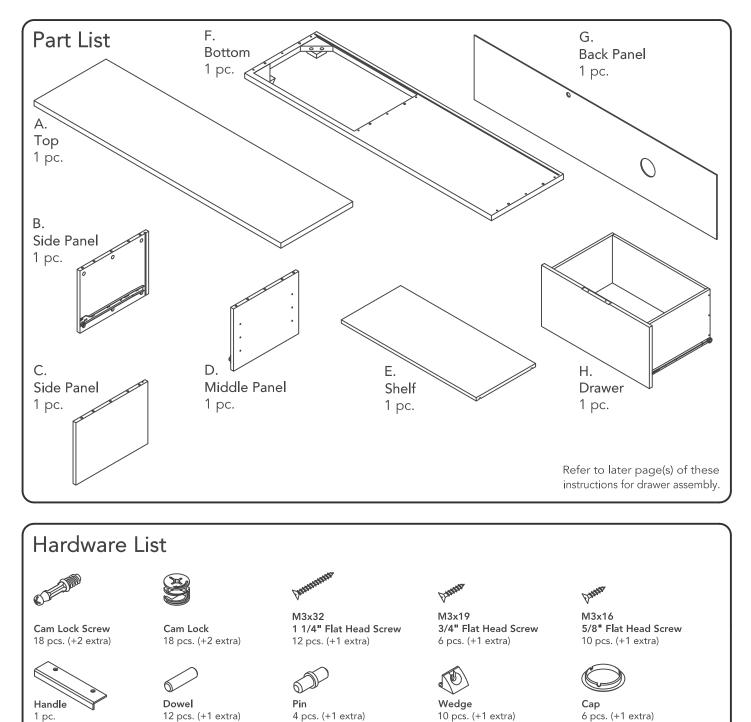


Tool(s) required for assembly: Phillips screwdriver, Level, Pencil, Drill (8 volts or less), 3/8" Drill Bit homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460

Assembly Instructions 2/9

IMPORTANT

- Use a soft cloth between these parts and the floor.
- Do not use power tools above $\frac{1}{8}$ volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.


STEP 1

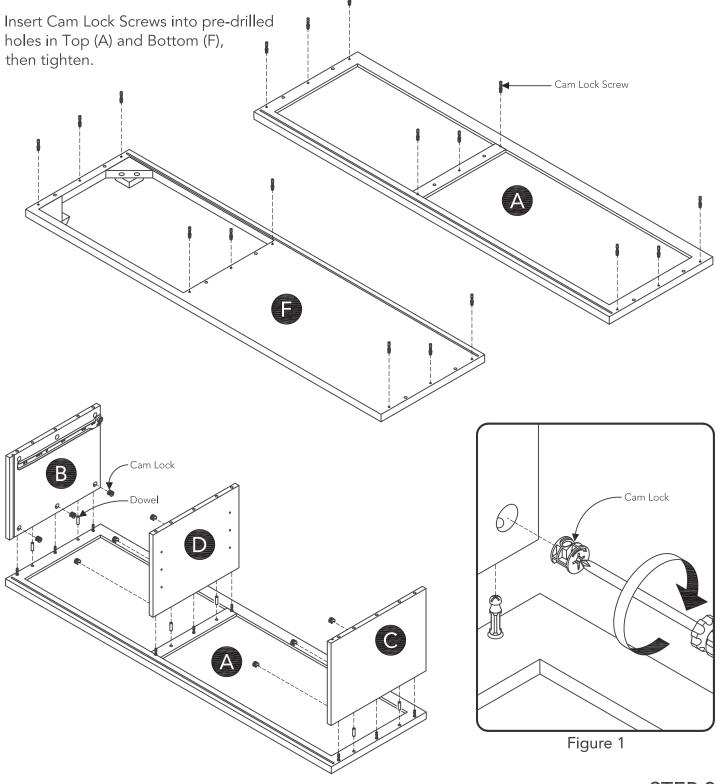

STEP 2


Attach Side Panels (B), (C) and Middle Panel (D) to Top (A) with Dowels and Cam Locks. (See Figure 1)

Assembly Instructions 3/9

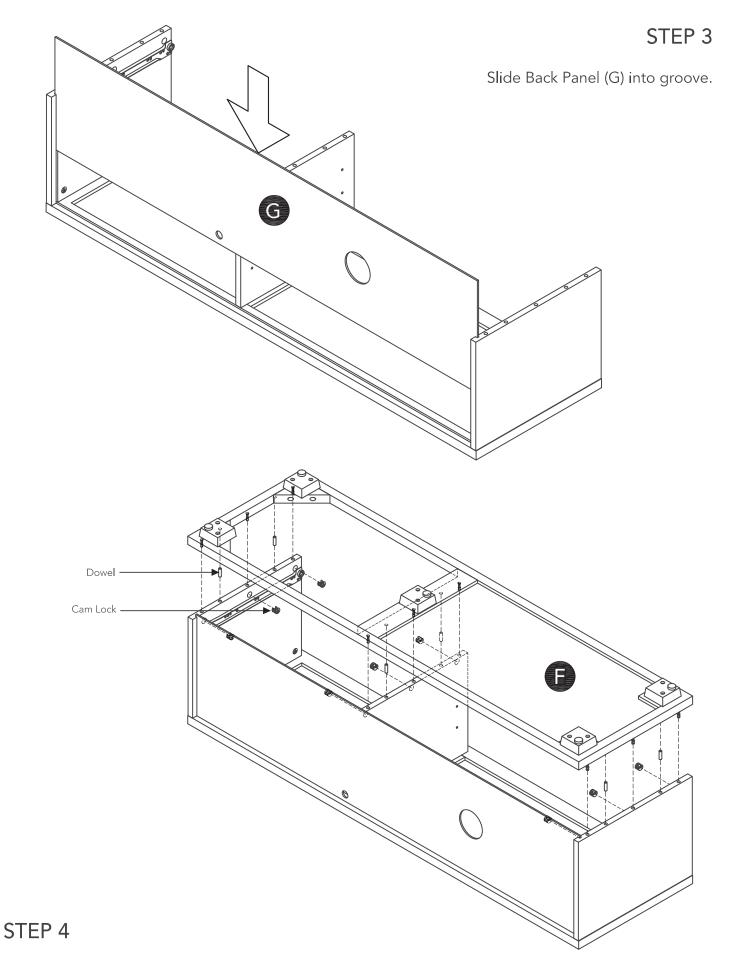


Attach Bottom (F) to unit with Dowels and Cam Locks.

Assembly Instructions 4/9

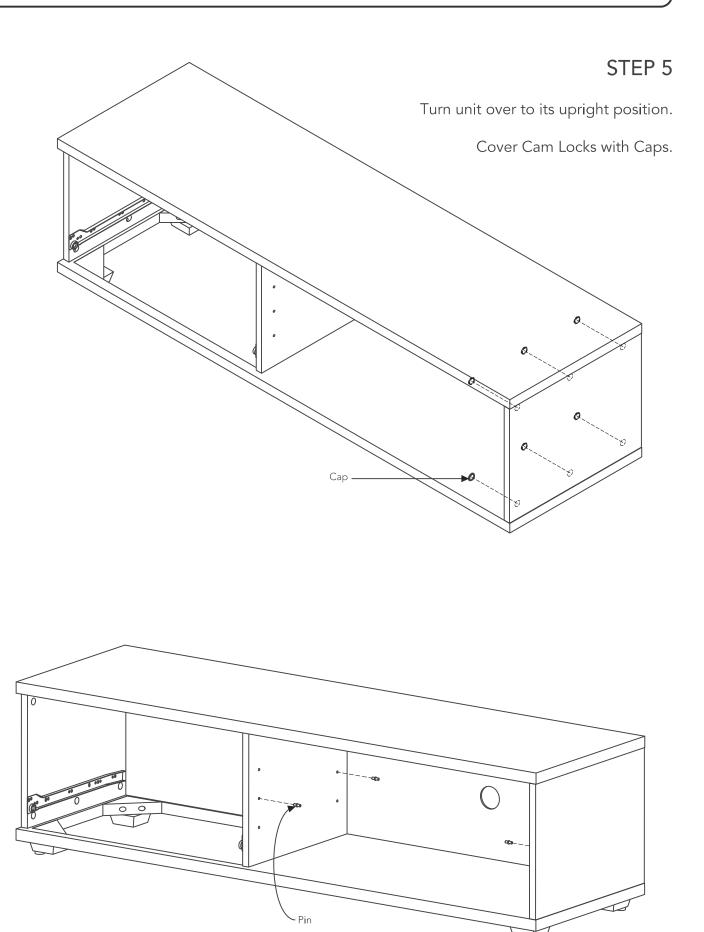

STEP 6

Insert Pins into middle panel and side panel at desired level.

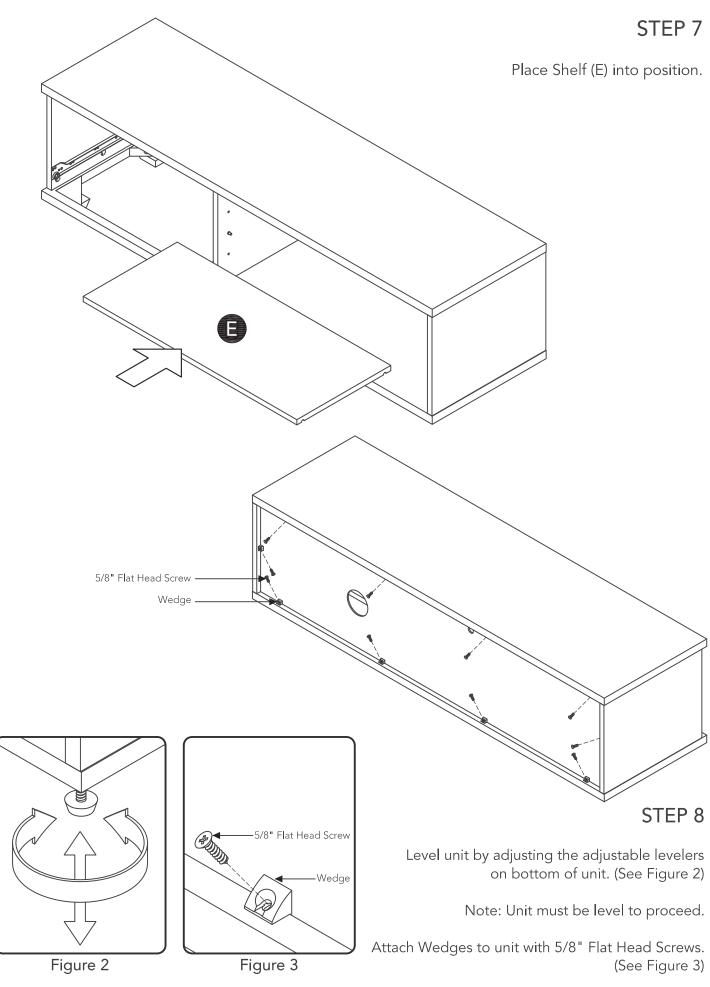

Assembly Instructions 6/9

IMPORTANT

• To help reduce the risk of the unit tipping over, the Tipover Restraint must be installed following these instructions exactly.

STEP 9

Place the unit at desired location.

Mark wall with pencil to show position of hole in Back Panel (G). (See Figure 4)


Move unit.


Drill a 3/8" hole in wall 1" below mark.

Insert Anchor into the wall hole and attach Tipover Restraint to Anchor with 1 1/2" Round Head Screw and Flat Washer. (See Figure 5)

Move unit back into place and insert Tipover Restraint into unit through hole in Back Panel (G). (See Figure 6)


Attach Tipover Restraint to unit with 1/2" Round Head Screw and Flat Washer. (See Figure 7)

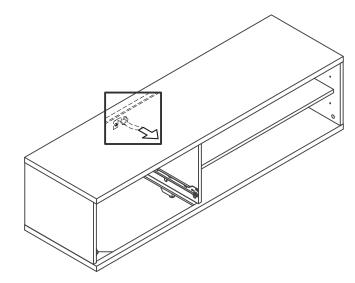


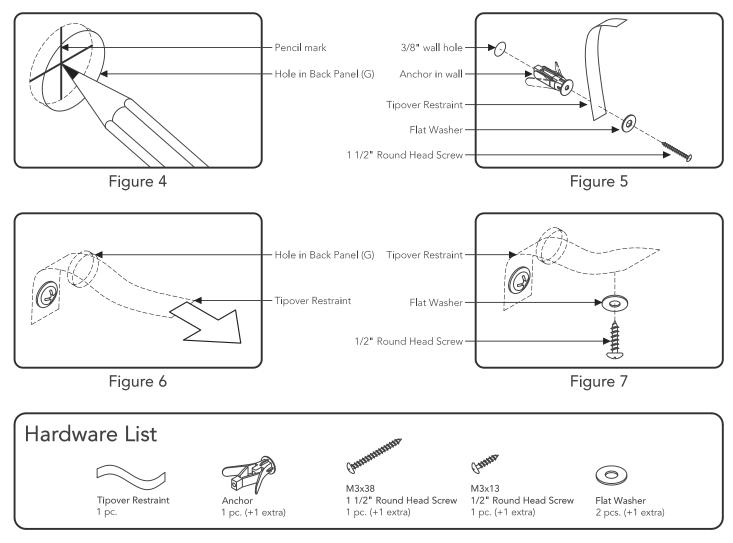

Assembly Instructions 7/9

Drawer (H)

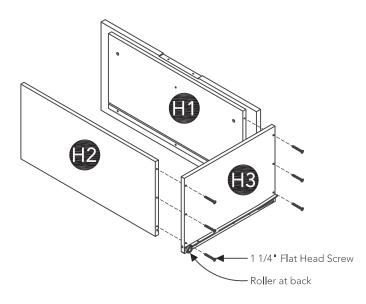

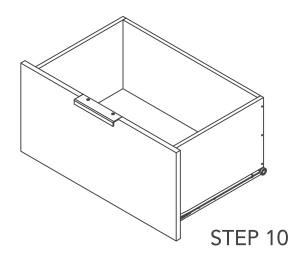



Attach Drawer Front (H1) and Drawer Back (H2) to Drawer Side (H3) with 1 1/4" Flat Head Screws.

STEP 11

Insert Drawer Bottom (H5) into groove.

Attach Drawer Side (H4) to unit with 1 1/4" Flat Head Screws.

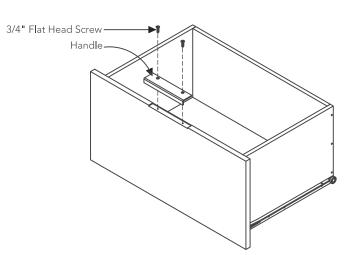


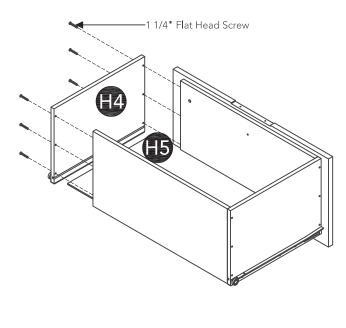


STEP 12

Attach Handle with 3/4" Flat Head Screws.

Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

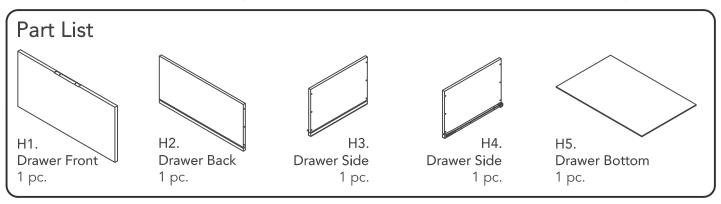

STEP 13

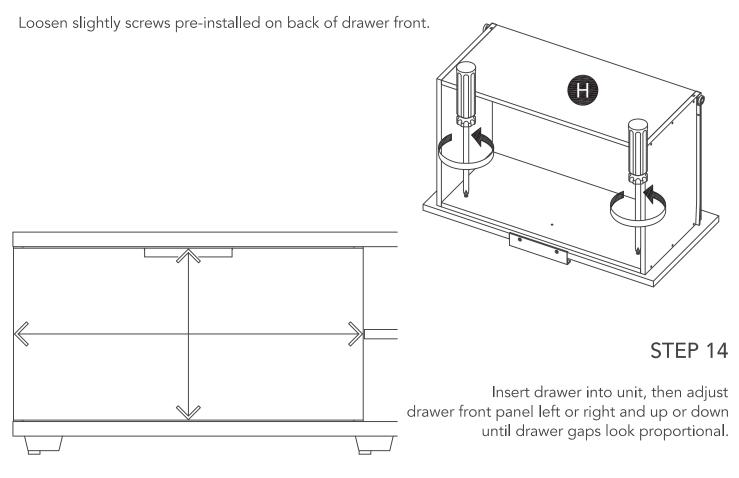


STEP 15

Pull drawer open slowly, then re-tighten screws from Step 13.


Make sure drawer front panel does not move and lock drawer front panel into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

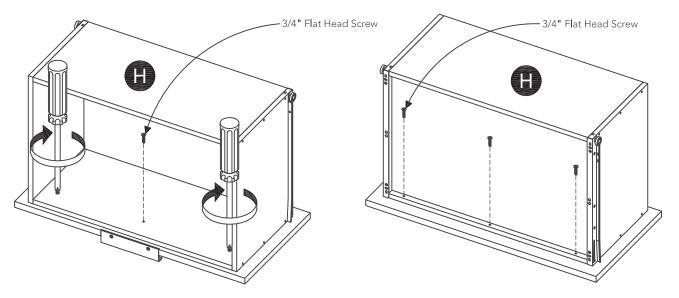

Assembly Instructions 9/9

STEP 16

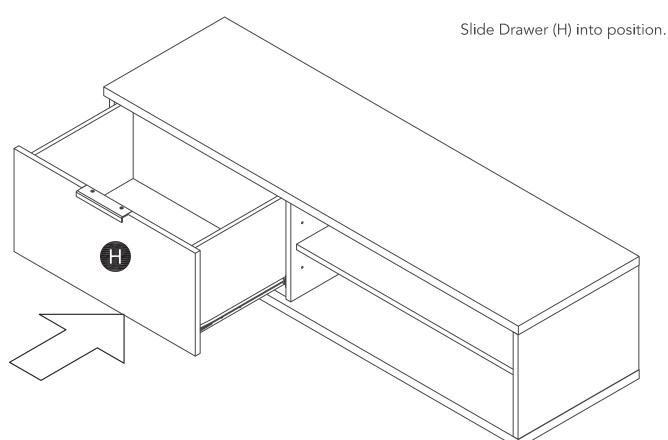

CARE INSTRUCTIONS

NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

NEVER

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



homestyles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

homestyles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460