

### 3. INSTALLATION INSTRUCTIONS (continued)


#### 3.1 Positioning

When selecting a position for your unit, you should make sure the floor is flat and solid so as to support the load and that the room is well ventilated. Avoid locating your unit near a heat source, e.g. stove, boiler or radiator. Also avoid direct sunlight as it may increase the electrical consumption. Extreme cold ambient temperatures may also cause the unit to not perform properly. This unit is not designed for use in a garage or outdoors. Do not drape the unit with any covering. When installing the unit, ensure that 3 inches of free space is left at both sides, 1 inch at the rear and 1 inch at the top of the unit. This will allow cool air to circulate around the refrigerator and improve its efficiency.

#### 3.2 Door Space Requirements


The unit's door must be able to open fully as shown. Please refer to the measurements below and to the illustration.

$W \times D \geq 990 \times 1025 \text{ mm (39" x 40 1/4")}$

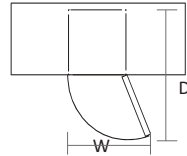

#### 3.3 Levelling the Unit

To make this adjustment, use the two levelling feet at the front of the unit. If the unit is not level, the door and magnetic seal alignments will not meet up properly. Drop down from the top, clockwise and counterclockwise, loosening or tightening.

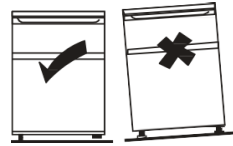

#### 3.4 Cleaning before use

Wipe the inside of the unit with a light solution of baking soda and water. Then rinse with warm water using a wrung-out sponge or cloth. Wash the shelves and vegetable crisper bins in warm soapy water and dry completely before replacing in the unit. Clean the exterior of the unit with a damp cloth. If you require more information refer to the CLEANING section.

#### 3.5 Interior Accessories

Various glass shelves and/or plastic storage bins are included with your appliance - different models have different combinations.

You should always slide one of the full-sized glass storage shelves into the lowest set of guides, above the fruit and vegetable bins and keep it in this position. To do this, pull the storage shelf forward until it can be moved upwards or downwards and then removed. Do the same in reverse if you wish to insert the shelf at a different height.

In order to make full use of the volume of the fresh food storage compartment and of the frozen-food storage compartment, the user can remove one or more shelves and/or drawers out of the appliance, to better suit your needs.