




Operating Instructions

Glass Sound Speaker
LSPX-S2




5-001-320-52(1)

Having fun with your speaker

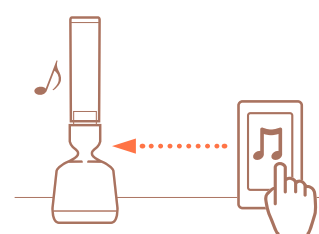

Using a BLUETOOTH® connection

 You can enjoy music on your smartphone via a BLUETOOTH connection.

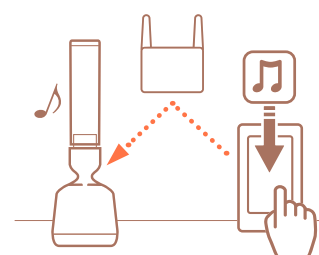

Using a Wi-Fi connection


You can have fun using Push & Play and an online music distribution service via a Wi-Fi connection.

Charging

When using the unit for the first time, be sure to charge it for at least 1 hour.

- 1 Connect the supplied micro USB cable and the supplied USB AC adaptor to the DC IN 5 V jack, and then plug the USB AC adaptor into a wall outlet.

When you start to charge the unit for the first time after purchase, the unit automatically turns on and the (on/standby) indicator (white) slowly flashes. When charging is complete, the (on/standby) indicator (white) lights.

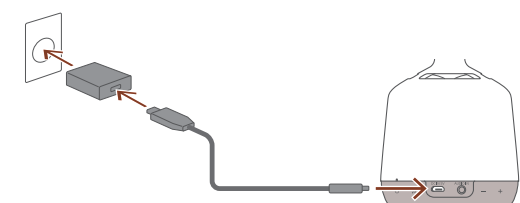


Hint

- If you start to charge the unit while it is off, the (on/standby) indicator (orange) lights. When charging is complete, the indicator turns off.
- When the rechargeable battery is running low, the (on/standby) indicator (red) flashes and an alert sounds to let you know that the rechargeable battery is running low. After a short while, the unit automatically turns off.

Turning the Power On/Off

- 1 Press the (on/standby) button.
The (white) slowly flashes.

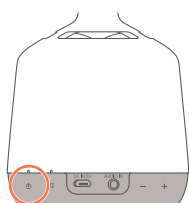

Listening to Music from Your Smartphone or Other Device via a BLUETOOTH Connection

■ Connecting with BLUETOOTH devices


(Select how to connect from pairing type **A** or **B**. Subsequent devices are paired the same way.)

A Pairing and connecting with a BLUETOOTH device


You can operate a BLUETOOTH device to pair it with the unit.

- 1 Press and hold the BLUETOOTH/ PAIRING button for about 2 seconds.

The unit will make a sound to indicate that pairing mode has been entered.

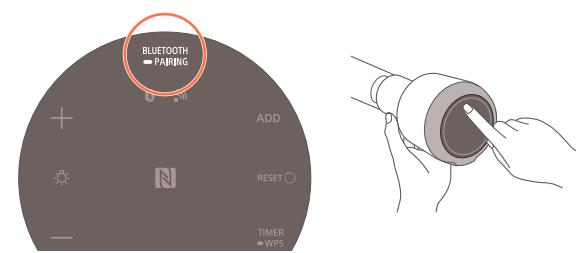

 - 2 Search for the unit from the BLUETOOTH device and select [LSPX-S2].

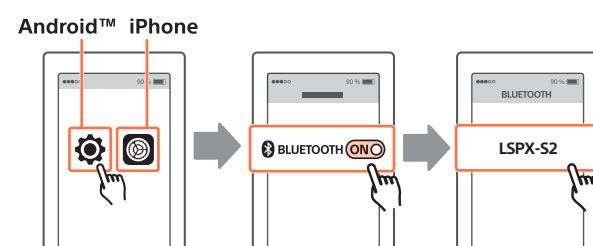

- 3 Listen for the sound that indicates pairing was successful.

The BLUETOOTH indicator (white) also lights.


Hint

If the indicator stops flashing in the middle of the operation, start again from step 1.

B Connecting with a BLUETOOTH device by using One-touch (NFC)


Even when the unit is turned off, you can pair and connect by simply touching your smartphone to the unit.

- 1 Unlock the screen of your BLUETOOTH device and touch it to the N marked area on the bottom of the unit.

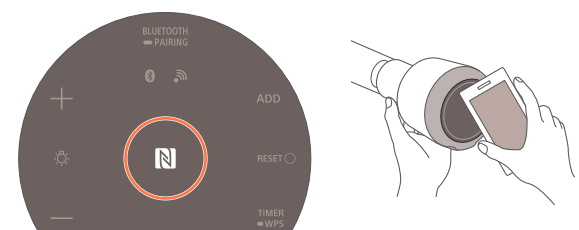

- 2 Follow the on-screen instructions to connect the device, and then listen for the sound that indicates pairing was successful.

 The BLUETOOTH indicator (white) also lights.

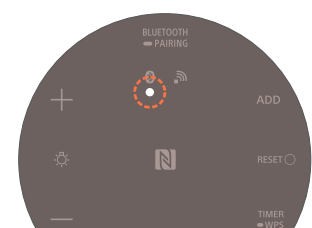

Disconnecting by using One-touch

Touch the N marked area with the device again.

If you cannot establish a connection

- Move the BLUETOOTH device slowly over the N marked area.
- If the BLUETOOTH device is in a case, remove it from the case.

 
■ Listening to Music

- 1 Start playing music on the BLUETOOTH device and adjust the volume.

First, do the procedure in "Connecting with BLUETOOTH Devices" to connect to a BLUETOOTH device.

- 2 Adjust the volume by pressing the (volume) buttons.

Press and hold the buttons for rapid adjustments.

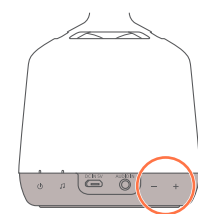

Hint

If sound is interrupted, or if static is apparent, the unit may be experiencing interference. Either move the unit to a different location or bring the BLUETOOTH device closer to the unit.

■ Listening to music using 2 speakers (Speaker Add function)

You need two LSPX-S2 speakers. For detailed instructions, refer to the Help Guide.


Now you can play back the music that is on the BLUETOOTH device. To enjoy an online music distribution service while connected to Wi-Fi, refer to "Listening to a Music Distribution Service (Spotify) Online via a Wi-Fi Connection."

Listening to a Music Distribution Service (Spotify) Online via a Wi-Fi Connection


■ Connecting to a Wi-Fi Network (Select either procedure **A** or **B**.)

A Connecting to Wi-Fi through a Wi-Fi router that has a Wi-Fi Protected Setup™ (WPS) button

- 1 Place the unit near the Wi-Fi router, and then turn on the unit.
- 2 Press and hold the unit's TIMER/WPS button for about 2 seconds until you hear beeping.

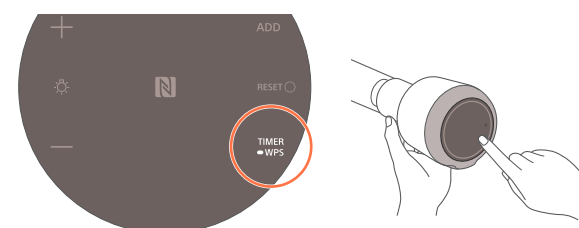

- 3 Press the Wi-Fi router's Wi-Fi Protected Setup™ (WPS) button within 90 seconds.

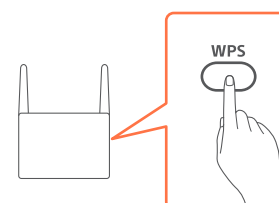

- 4 Confirm that the network indicator (white) lights. The Wi-Fi connection is complete.



B Using your smartphone to connect to a Wi-Fi network

- 1 Install "Sony | Music Center" on your smartphone.



- 2 Connect your smartphone to the wireless LAN router.

- 3 Connect your smartphone with the unit via BLUETOOTH wireless technology.

Do the procedure in "Connecting with BLUETOOTH Devices" to connect to a BLUETOOTH device.

- 4 Follow the on-screen instructions on "Sony | Music Center" to connect to Wi-Fi.

Some wireless LAN routers have multiple SSIDs. Set your smartphone and the unit to the same SSID.

- 5 Confirm that the network indicator (white) lights. The Wi-Fi connection is complete.

 


■ Enjoying an Online Music Distribution Service (Spotify)

You can play music through the unit from an online music distribution service (Spotify). You must install the Spotify app on your smartphone and complete the membership registration to use your smartphone to enjoy Spotify (Spotify Connect function).

- 1 Connect the unit to a Wi-Fi network.
- 2 Start Spotify, which is installed on the smartphone, tablet, or computer connected to the same Wi-Fi as the unit.
For details about Spotify, access the following website. www.spotify.com/connect
- 3 Start playing music, and then select [Devices Available].
- 4 Select [LSPX-S2] and listen to the music from the unit.

When the Spotify Connect function is enabled, the connection icon lights green. When the connection is complete, the network indicator on the bottom of the unit lights green.

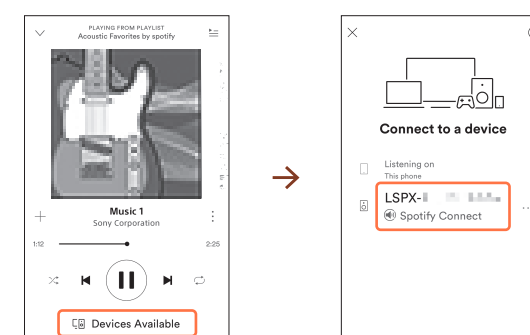


Hint


- If sound is interrupted, or if static is apparent, the unit may be experiencing interference or the signal may be weak.
- Check that the unit is not surrounded by metal.
- Also, keep the unit away from microwave ovens, other Wi-Fi devices, or any similar devices.


Note


- The details of services offered by Spotify may differ, depending on your country or region.
- Specifications for the app and screen designs are subject to change without prior notice.


Using Push & Play to Enjoy Music from an Online Music Distribution Service (Spotify)

After using the Spotify Connect function or registering your favorite music, you can enjoy music by simply pressing the  (Push & Play) button, even if the unit is not on.


- 1 After reaching step 3 of “Enjoying an Online Music Distribution Service (Spotify)”, press the  (Push & Play) button.

The  (Push & Play) indicator (white) lights.

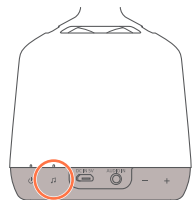

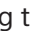- 2 Adjust the volume by pressing the  (volume) buttons.

Press and hold the buttons for rapid adjustments. You can also use Spotify to adjust the volume.

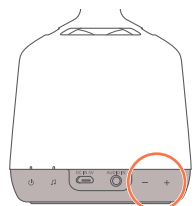


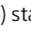
- 3 Navigate “Sony | Music Center” and select the music to play back when you use Push & Play.

You can select from the following.

- Last played music (default setting)
- Recommend by the Glass sound speaker
- Favorite music

Registering to Your Favorite Music

While playing back music, press the  (Push & Play) button for about 2 seconds.

You will hear a notification sound when the registration is complete. The  (Push & Play) indicator (white) stays lit after flashing several times.

Various Functions


Adjusting the Brightness of the Illumination LED

Press the  (illumination LED) +/- buttons.


Press and hold a button for rapid adjustments.




Enjoying the Candle Light Mode

Press and hold the  (on/standby) button for about 2 seconds while the speaker is on.


You can set the illumination LED so that it shines and glimmers like a candle's light.

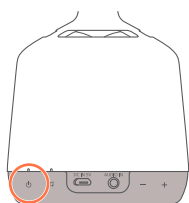


Turning Off the Candle Light Mode

Once again, press and hold the  (on/standby) button for about 2 seconds.

Choosing the Intensity of the Candle Light Mode

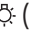While the candle light mode is on, press the  (illumination LED) +/- buttons to select the intensity you like the most from the 2 types.


Note

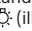You cannot set the brightness of the illumination LED while the unit is in the candle light mode, even if you use “Sony | Music Center” or press the unit's  (illumination LED) +/- buttons. Turn off the candle light mode first, and then set the brightness of the illumination LED.


Using the Sleep Timer

Press the  WPS button.

A sound will indicate that the Sleep Timer has been set, and the power will automatically turn off after 60 minutes.

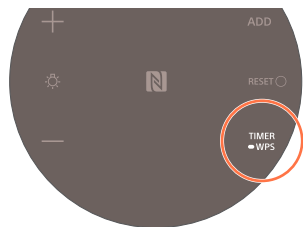

Canceling the Sleep Timer

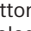Press the  WPS button again. A sound will indicate that the Sleep Timer has been canceled.

Hint

You can also use “Sony | Music Center” to set the duration of the timer.


Listening to Music from an External Device

- 1 Connect a portable audio device, or similar device, to the AUDIO IN jack.

Use a commercially available connection cord (stereo mini ↔ stereo mini, no resistance).

- 2 Start playback on the connected device.

Hint

To output music from a BLUETOOTH device with the connection cord still in the AUDIO IN jack, either press the  PAIRING button on the bottom of the unit or use “Sony | Music Center” to switch the BLUETOOTH device to the one you want to use for playback.

If the volume is low, adjust the volume for both the unit and the connected audio device.

Using “Sony | Music Center” to Do Detailed Settings

“Sony | Music Center” is an app for operating Sony audio devices compatible with “Sony | Music Center” from your smartphone.

Features that use “Sony | Music Center” other than those introduced in this document

- Settings for the Wireless Multi-Room function
- Settings for the Wireless Stereo function
- Settings for the Speaker Add function
- Settings for the BASS BOOST function
- Settings for Network Standby

How to download

Search for “Sony Music Center” in Google Play (Play Store) or the App Store, and download.

For details, refer to the help page for “Sony | Music Center.”

<https://www.sony.net/smcqa/>



Note

The operations that “Sony | Music Center” can perform vary depending on the audio device. Specifications for the app are subject to change without prior notice.

Help Guide Information

Refer to the Help Guide for more easy-to-understand troubleshooting tips. Use a computer or smartphone to access it.



http://rd1.sony.net/help/speaker/lsp-x-s2/h_zz/



Troubleshooting

For details, refer to “Troubleshooting” in the Help Guide. You may also be able to solve problems by charging the unit.

Charging the unit

If the power does not turn on or you have not used the unit for a long time, securely connect the supplied micro USB cable and the supplied USB AC adaptor to the DC IN 5 V jack, plug the USB AC adaptor into a wall outlet, and then charge the unit at least 1 hour before turning on the power.



Except in some cases, you cannot charge the unit by connecting the unit to the USB terminal of a computer.

Auto Standby function

When about 15 minutes have passed under the following conditions, the unit automatically turns off. This is not a malfunction. The Auto Standby function is set to on at the time of purchase. You can switch the Auto Standby function on and off from the settings menu in “Sony | Music Center.”

- The unit is not in use.
- Music (audio) is not being played back by a device connected via BLUETOOTH wireless technology.
- The music (audio) of an audio device connected to the AUDIO IN jack is not playing back, or the music (audio) output of an audio device is remarkably weak.


Checking the Wi-Fi connection's settings

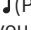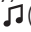If the  (Push & Play) indicator flashes in red and an error alert sounds when you press the  (Push & Play) button, consider the following situations.

- You have never used the Spotify Connect function before.
 - The unit is not connected to Wi-Fi.
- Follow the procedure under “Connecting to a Wi-Fi Network” and do the settings again.


Playing music using a BLUETOOTH connection after you have played music using a Wi-Fi connection


Make sure that the BLUETOOTH indicator on the bottom of this unit is not turned off.

If the BLUETOOTH indicator is turned off, press the  PAIRING button on the bottom of the unit and confirm that the BLUETOOTH indicator lights.



Resetting the unit

When the unit is not working properly, resetting it may resolve some issues. To reset the unit, use a pointed object, such as a pin, to press the RESET button.

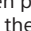While the USB AC adaptor is not connected, press the RESET button, and then press the  (on/standby) button for at least 3 seconds to turn on the unit.

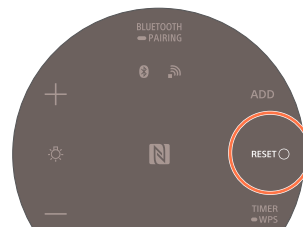



Restarting the unit

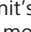
If the unit's  (on/standby) indicator (red) quickly flashes, the unit is in protect mode. Wait a while, and then press the  (on/standby) button again to turn on the power.

If the problem persists, even after turning on the power again, contact your nearest Sony dealer.

Initializing the unit

If you have checked all of the relevant items in “Troubleshooting” and the unit still does not operate normally, or if setup failed, initialize the unit to return it to its defaults.

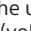While the unit is on, press and hold the unit's  (on/standby) button and  (volume) button at the same time for at least 4 seconds to initialize the unit.

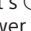Initialization requires tens of seconds. When initialization is complete, the unit's  (on/standby) indicator and the illumination LED light, and the power stays on.

Since all of the BLUETOOTH pairing information and network settings are deleted when you initialize the unit, you must do all of the settings again.