



## ALPINE HALO11 11-INCH AUDIO/VIDEO RECEIVER

# iLX-F411

## ALPINE HALO9 9-INCH AUDIO/VIDEO RECEIVER

# iLX-F409

EN

FR

ES



androidauto™

(((SiriusXM)))  
READY



- OWNER'S MANUAL  
Please read before using this equipment.
- MODE D'EMPLOI  
Veuillez lire avant d'utiliser cet appareil.

- MANUAL DE OPERACIÓN  
Léalo antes de utilizar este equipo.

Thank you for purchasing this Alpine product. Please take a moment to protect your purchase by registering your product now at the following address: [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration). You will be informed of product and software updates (if applicable), special promotions, news about Alpine.

Merci d'avoir acheté ce produit Alpine. Nous vous invitons à consacrer un moment à la protection de votre achat en enregistrant votre produit dès maintenant à l'adresse suivante : [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

Vous serez tenu informé des mises à jour des produits et des logiciels (le cas échéant), des promotions spéciales et de l'actualité d'Alpine.

Gracias por adquirir este producto Alpine. Con solo unos pocos pasos podrá proteger su producto, registrándolo a través de la siguiente dirección: [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

Recibirá información sobre nuevos productos y software, promociones especiales y novedades sobre Alpine.

# Contents

## Operating Instructions

### PRECAUTIONS

IMPORTANT INFORMATION .....	5
-----------------------------	---

### WARNING

Points to Observe for Safe Usage .....	5
<b>WARNING</b> .....	<b>5</b>
<b>CAUTION</b> .....	<b>6</b>
<b>NOTICE</b> .....	<b>7</b>

### Getting Started

Location of Controls .....	9
Turning Power On or Off .....	9
Initial System Start-Up .....	9
Adjusting the Volume .....	9
Lowering Volume Quickly .....	10
Touch Screen Operation .....	10
Switching Sources .....	10
Selecting an Item in a List .....	10
About the HOME Screen .....	11
Editing HOME screen .....	11
About the Indicator Display .....	11

### Setup

Setup Operation .....	12
-----------------------	----

#### General Setup

Radio Setup .....	12
Setting the TUNER (FM) Tone Quality (Tuner Condition) .....	12
Setting the TUNER (FM) Frequency Step .....	13
SiriusXM Setup .....	13
Setting the Parental Lock .....	13
Signal Strength Information .....	13
Language Setup .....	13
Wallpaper Setup .....	14

Setting a Wallpaper using a default image .....	14
Setting a Wallpaper using your image .....	14
Screen/LED Customize Setup .....	14
Setting the Brightness of the Backlighting (Dimmer) .....	14
Adjusting the Minimum Level of Backlight .....	14
Adjusting the Dimmer of Button Lighting at Night .....	14
Clock Setup .....	15
Display Off Setting .....	15
About iLX-F411/iLX-F409 .....	15
Displaying the Product Information .....	15
Displaying Warranty/Copyright Information .....	15
Initializing the System .....	15
Installation Setup .....	15
Rear Seat Entertainment (RSE) setup .....	16
Rear Seat Entertainment (RSE) Output Setting .....	16
Format Setting .....	16
Steering Wheel Position Setting .....	16

#### Connection (Bluetooth) Setup

Displaying Bluetooth Information .....	16
Pairing the Bluetooth Device .....	16
Setting the Bluetooth Device .....	17
Deleting a Bluetooth Device from the list ....	17
Auto Answering Setup .....	17
Apple CarPlay Setup .....	17

#### Camera Setup

Camera Input Setting .....	17
Camera Signal Input Setting .....	17
Rear Camera Guide Settings .....	18
Turning the Rear Camera Guide On/Off ....	18
Adjusting the Caution Position .....	18
Camera Picture Quality Setup .....	18
Camera Interrupt Setting (DISPLAY OFF Mode) .....	18
Mute Setting .....	18

<b>Sound Setup</b>	
Setting the Media Xpander (MX) .....	19
Equalizer Settings .....	19
Fader/Balance/Bass/Treble/Subwoofer	
Settings .....	19
Setting the Fader/Balance .....	19
Adjusting the Bass/Treble .....	20
Setting the Subwoofer .....	20
Graphic Equalizer Curve Settings	
(Graphic EQ) .....	20
Time Correction Settings .....	20
Crossover Settings (X-Over) .....	21
Volume Setup .....	21
Adjusting the Key Sound .....	21
Adjusting the Source Volume .....	21
Setting the Volume for Android Auto .....	21
Setting the Volume for Apple CarPlay .....	22
Adjusting the Volume for Phone .....	22
Turning Subwoofer ON/OFF .....	22
Rear Speaker Setting .....	22
Defeat Setting .....	22
About the Crossover .....	22
About Time Correction .....	23
<b>Apple CarPlay (Optional)</b>	
Access to Apple CarPlay .....	24
<b>Android Auto (Optional)</b>	
What is Android Auto .....	24
Activate Android Auto .....	24
<b>Radio</b>	
<b>Radio Basic Operation</b>	
Listening to the Radio .....	25
Presetting Stations Manually .....	25
Presetting Stations Automatically .....	25
Tuning to Preset Station .....	25
<b>USB Flash drive (Optional)</b>	
<b>USB Audio</b>	
Playback .....	26
Fast-forwarding/Fast-reversing .....	26
Repeat Play .....	26
Shuffle Play .....	27

Searching for a Desired Song .....	27
------------------------------------	----

<b>USB Video</b>	
Setting the Brightness and Contrast .....	27
Displaying the Subtitle .....	27

<b>USB Photo</b>	
Playback .....	28
Slide Show .....	28
Setting a Wallpaper with a Photo .....	28

<b>iPod mode on iPhone (Optional)</b>	
Playback .....	29
Searching for a Music File .....	30
Repeat Play .....	30
Shuffle Play .....	30

<b>HDMI Device (Optional)</b>	
HDMI Operation .....	31
Setting the Brightness and Contrast .....	31

<b>SiriusXM Satellite Radio Operation (Optional)</b>	
Receiving Channels with the SiriusXM	
Tuner .....	32
Tuning Channels by Category .....	32
Changing the Display .....	33
Checking the SiriusXM Radio ID Number .....	33
Storing Channel Presets .....	33
Tuning Channels using Presets .....	33
Search Function .....	33
Selecting the Channel Directly .....	33
Parental Lock Function .....	33

<b>Bluetooth Operation</b>	
Setup Before Using .....	34
About Bluetooth .....	34
About the Hands-free Phone .....	34
Before Using Bluetooth .....	34

<b>Hands-free Phone Control</b>	
Answering a Call .....	35
Hanging up the Telephone .....	35
Calling .....	35
Making a phone call using the Phone	
Menu .....	35

Using Voice Recognition function .....	36
Using Siri .....	36
Voice Dial Function .....	36
Phone Operation Screen .....	37
Adjusting the Speech Volume .....	37
Changing the Voice Output .....	37
Muting the Microphone .....	37
DTMF (Touch-Tone) Function .....	37
Phone Book Function .....	37
Searching in the Phone Book .....	37
Synchronizing the Phone Book .....	37
Deleting the Phone Book Entries .....	38
Setting contacts as Favorites (Shortcut Dialing) .....	38

### Bluetooth Audio

Playback .....	39
Repeat Play .....	39
Shuffle Play .....	39
Connecting a Bluetooth Device .....	39
Disconnecting the Bluetooth Connection ...	39
Switching the connecting Bluetooth Device .....	39

### Camera Operation (Optional)

Camera Operation .....	40
Displaying the Camera Image from the HOME screen .....	40
Displaying the rear view video while the car is in reverse .....	40
About the Rear Camera Guide .....	40

### Information

Product Software Update .....	42
About the Supported Formats .....	42
About MP3/WMA/AAC/FLAC/WAV .....	42
In Case of Difficulty .....	44
If this Message Appears .....	45
Specifications .....	46

### LIMITED WARRANTY

# Operating Instructions

## PRECAUTIONS

### IMPORTANT INFORMATION

#### FCC COMPLIANCE STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide more reasonable protection against harmful interference in a residential installation, and are more stringent than "outdoor" requirements.

Operation is subjected to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, you are encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an experienced radio/TV technician.

## WARNING

### Points to Observe for Safe Usage

- *Read this manual carefully before using this disc and the system components. They contain instructions on how to use this product in a safe and effective manner. Alpine cannot be responsible for problems resulting from failure to observe the instructions in this manual.*
- *This manual uses various pictorial displays to show you how to use this product safely and to alert you to potential dangers resulting from improper connections and operation. Following are the meanings of these pictorial displays. It is important to fully understand the meanings of these pictorial displays in order to use this manual and the system properly.*
- *This product may be used with software applications. Please follow all usage instructions and warnings when using this product at all times. Do not use this product or any software application in a manner which will hinder safe operation of your vehicle.*

### WARNING

- Operation of the system while driving is dangerous. Users should stop vehicle before operating the software.
- Road conditions and regulations take precedence over information contained on the map display; observe actual traffic restrictions and circumstances while driving.
- This software is designed for use exclusively in the unit. It cannot and may not be used in conjunction with other hardware.

### WARNING

**This symbol means important instructions. Failure to heed them can result in serious injury or death.**

#### **INSTALL THE PRODUCT CORRECTLY SO THAT THE DRIVER CANNOT WATCH TV/VIDEO UNLESS THE VEHICLE IS STOPPED AND THE EMERGENCY BRAKE IS APPLIED.**

It is dangerous for the driver to watch TV/Video while driving a vehicle. Installing this product incorrectly enables the driver to watch TV/Video while driving. This may cause a distraction, preventing the driver from looking ahead, thus causing an accident. The driver or other people could be severely injured.

#### **DO NOT WATCH VIDEO WHILE DRIVING.**

Watching the video may distract the driver from looking ahead of the vehicle and cause an accident.

#### **DO NOT OPERATE ANY FUNCTION THAT TAKES YOUR ATTENTION AWAY FROM SAFELY DRIVING YOUR VEHICLE.**

Any function that requires your prolonged attention should only be performed after coming to a complete stop. Always stop the vehicle in a safe location before performing these functions. Failure to do so may result in an accident.

#### **KEEP THE VOLUME AT A LEVEL WHERE YOU CAN STILL HEAR OUTSIDE NOISES WHILE DRIVING.**

Excessive volume levels that obscure sounds such as emergency vehicle sirens or road warning signals (train crossings, etc.) can be dangerous and may result in an accident. LISTENING AT LOUD VOLUME LEVELS IN A CAR MAY ALSO CAUSE HEARING DAMAGE.

#### **MINIMIZE DISPLAY VIEWING WHILE DRIVING.**

Viewing the display may distract the driver from looking ahead of the vehicle and cause an accident.

#### **DO NOT DISASSEMBLE OR ALTER.**

Doing so may result in an accident, fire or electric shock.

#### **USE ONLY IN CARS WITH A 12 VOLT NEGATIVE GROUND.**

(Check with your dealer if you are not sure.) Failure to do so may result in fire, etc.

---

**KEEP SMALL OBJECTS SUCH AS SCREWS OUT OF THE REACH OF CHILDREN.**

Swallowing them may result in serious injury. If swallowed, consult a physician immediately.

---

**USE THE CORRECT AMPERE RATING WHEN REPLACING FUSES.**

Failure to do so may result in fire or electric shock.

---

**DO NOT BLOCK VENTS OR RADIATOR PANELS.**

Doing so may cause heat to build up inside and may result in fire.

---

**USE THIS PRODUCT FOR MOBILE 12V APPLICATIONS.**

Use for other than its designed application may result in fire, electric shock or other injury.

---

**MAKE THE CORRECT CONNECTIONS.**

Failure to make the proper connections may result in fire or product damage.

---

**BEFORE WIRING, DISCONNECT THE CABLE FROM THE NEGATIVE BATTERY TERMINAL.**

Failure to do so may result in electric shock or injury due to electrical shorts.

---

**DO NOT ALLOW CABLES TO BECOME ENTANGLED IN SURROUNDING OBJECTS.**

Arrange wiring and cables in compliance with the manual to prevent obstructions when driving. Cables or wiring that obstruct or hang up on places such as the steering wheel, gear lever, brake pedals, etc. can be extremely hazardous.

---

**DO NOT SPLICE INTO ELECTRICAL CABLES.**

Never cut away cable insulation to supply power to other equipment. Doing so will exceed the current carrying capacity of the wire and result in fire or electric shock.

---

**DO NOT DAMAGE PIPE OR WIRING WHEN DRILLING HOLES.**

When drilling holes in the chassis for installation, take precautions so as not to contact, damage or obstruct pipes, fuel lines, tanks or electrical wiring. Failure to take such precautions may result in fire.

---

**DO NOT USE BOLTS OR NUTS IN THE BRAKE OR STEERING SYSTEMS TO MAKE GROUND CONNECTIONS.**

Bolts or nuts used for the brake or steering systems (or any other safety-related system), or tanks should NEVER be used for installations or ground connections. Using such parts could disable control of the vehicle and cause fire etc.

---

**DO NOT INSTALL IN LOCATIONS WHICH MIGHT HINDER VEHICLE OPERATION, SUCH AS THE STEERING WHEEL OR GEARSHIFT.**

Doing so may obstruct forward vision or hamper movement etc. and results in serious accident.

**CAUTION**

**This symbol means important instructions. Failure to heed them can result in injury or material property damage.**

---

**HALT USE IMMEDIATELY IF A PROBLEM APPEARS.**

Failure to do so may cause personal injury or damage to the product. Return it to your authorized Alpine dealer or the nearest Alpine Service Center for repairing.

---

**HAVE THE WIRING AND INSTALLATION DONE BY EXPERTS.**

The wiring and installation of this unit requires special technical skill and experience. To ensure safety, always contact the dealer where you purchased this product to have the work done.

---

**USE SPECIFIED ACCESSORY PARTS AND INSTALL THEM SECURELY.**

Be sure to use only the specified accessory parts. Use of other than designated parts may damage this unit internally or may not securely install the unit in place. This may cause parts to become loose resulting in hazards or product failure.

---

**ARRANGE THE WIRING SO IT IS NOT CRIMPED OR PINCHED BY A SHARP METAL EDGE.**

Route the cables and wiring away from moving parts (like the seat rails) or sharp or pointed edges. This will prevent crimping and damage to the wiring. If wiring passes through a hole in metal, use a rubber grommet to prevent the wire's insulation from being cut by the metal edge of the hole.

---

**DO NOT INSTALL IN LOCATIONS WITH HIGH MOISTURE OR DUST.**

Avoid installing the unit in locations with high incidence of moisture or dust. Moisture or dust that penetrates into this unit may result in product failure.

## NOTICE

### Product Cleaning

Use a soft dry cloth for periodic cleaning of the product. For more severe stains, please dampen the cloth with water only. Anything else has the chance of dissolving the paint or damaging the plastic.

### Temperature

Be sure the temperature inside the vehicle is between +45°C (+113°F) and 0°C (+32°F) before turning your unit on.

### Maintenance

If you have problems, do not attempt to repair the unit yourself. Return it to your Alpine dealer or the nearest Alpine Service Station for servicing.

### Protecting the USB connector

- Only an iPhone or USB flash drive can be connected to the USB connector on this unit. Correct performance using other USB products cannot be guaranteed.
- If the USB connector is used, be sure to use only the supplied connector cable with the unit. A USB hub is not supported.
- Depending on the connected USB flash drive, the unit may not function or some functions may not be performed.
- The audio file format that can be played back on the unit is MP3/WMA/AAC/FLAC/WAV.
- Artist/song name, etc., can be displayed. Certain, special characters may not be correctly displayed.

## CAUTION

*Alpine accepts no responsibility for lost data, etc., even if data, etc., is lost while using this product.*

### On Handling USB Flash drive


- This unit can control a memory storage device that supports the USB Mass Storage Class (MSC) protocol. Playable audio file formats are MP3, WMA, AAC, FLAC and WAV.
- USB Flash drive function is not guaranteed. Use USB flash drive according to the terms of agreement. Read the USB flash drive Owner's Manual thoroughly.
- Avoid usage or storage in the following locations:
  - Anywhere in the car exposed to direct sunlight or high temperatures.
  - Anywhere the possibility of high humidity or corrosive substances are present.
- Fix the USB flash drive in a location where driver operation will not be hindered.
- USB Flash drive may not function correctly at high or low temperature.
- Use only certified USB flash drive. Note that even certified USB flash drive, may not function correctly depending on its type or state.
- Depending on the settings of the USB flash drive type, memory state or encoding software, the unit may not play back or display properly.
- USB Flash drive may take time to start playback. If there is a particular file other than audio in the USB flash drive, it may take considerable time before the file is played back or searched.
- The unit can play back "mp3," "wma" or "m4a" file extensions.
- Do not add the above extensions to a file other than audio data. This non-audio data will not be recognized. The resulting playback may contain noise that can damage speakers and/or amplifiers.
- It is recommended to back up important data on a personal computer.
- Do not remove the USB device while playback is in progress. Change SOURCE to something other than USB, then remove the USB device to prevent possible damage to its memory.

- Windows Media and the Windows logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Apple, iPhone, and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
- Use of the Made for Apple and Works with Apple badges means that an accessory has been designed to connect specifically to the Apple product(s) identified in the Made for Apple badge and to work specifically with the technology identified in the Works with Apple badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.
- Please note that the use of this accessory with an Apple product may affect wireless performance.
- Use of the Apple CarPlay logo means that a vehicle user interface meets Apple performance standards. Apple is not responsible for the operation of this vehicle or its compliance with safety and regulatory standards. Please note that the use of this product with iPhone may affect wireless performance.
- Sirius, XM and all related marks and logos are trademarks of Sirius XM Radio Inc. All rights reserved.
- Google, Android, Android Auto, Google Play and other marks are trademarks of Google LLC.
- The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by ALPS ALPINE CO., LTD. is under license.
- The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing, LLC in the United States and other countries.
- MPEG Layer-3 audio coding technology licensed from Fraunhofer IIS and Thomson. Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generation) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>



# Getting Started

## Location of Controls

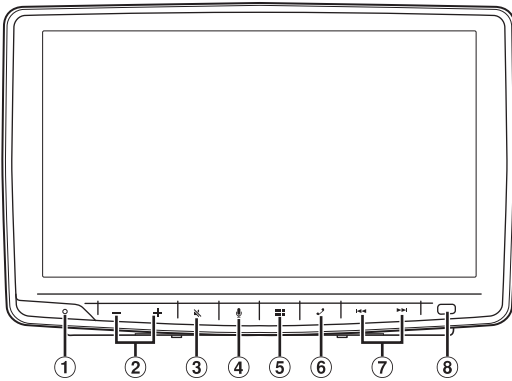

- ① **RESET switch**  
The system will be reset.
- ② **- / + (DOWN/UP) button**  
Adjusts the volume.
- ③ **[Speaker icon with slash] (MUTE) button**  
Activates/deactivates MUTE mode.
- ④ **[Microphone icon] button**  
Activate Siri function or voice recognition mode.
- ⑤ **[Square icon] (HOME) button**  
Displays the HOME screen.
- ⑥ **[Phone handset icon] (Phone) button**  
Displays the Phone Menu screen.  
Touch to start a conversation when a call is incoming.
- ⑦ **[Left/Right arrow icon] button**  
Seeks down/up stations in radio mode or down/up a track, chapter, etc., in other audio/visual sources.
- ⑧ **Dimmer Sensor**  
Senses the brightness of the car interior.

### About the button descriptions used in this Owner's Manual

The buttons found on the face of the unit are expressed in bold (e.g. [Square icon] (HOME)). The buttons found on the touch-screen display are shown in bold within brackets, [ ] (e.g. [OK]).

## Turning Power On or Off


When the ignition key is turned to ACC or ON, the opening screen will be automatically displayed.

- 1 **Turn the ignition key to the ACC or ON position.**  
The unit turns on.
  - When the unit is used for the first time, the Radio main screen is displayed.
  - When turned on, the unit displays the last screen that was displayed before the ignition key was turned off. For example, if the unit is in radio mode when ignition is turned off, it will remain in radio mode when ignition is turned back on.
- 2 **To turn the unit to off, turn the ignition key to the OFF position.**
  - The unit is a precision device. Careful handling of the unit should provide you with years of trouble-free operation.
  - Some of this unit's functions cannot be performed while the vehicle is in motion. Be sure to stop your vehicle in a safe location and apply the parking brake before attempting these operations.

## Initial System Start-Up

Be sure to press the **RESET** switch when using the unit for the first time, after changing the car battery, etc.

- 1 **Turn off the unit power.**
- 2 **Press the RESET switch with a ballpoint pen or similar pointed object.**

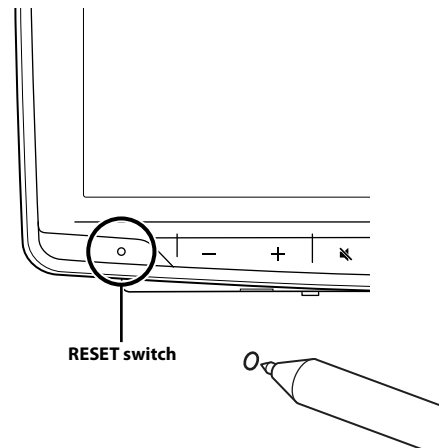



## Adjusting the Volume

- Adjust the volume by touching -/+.**  
Volume decreases/increases continuously by touching and holding -/+.  
Volume: 0 to 35

## Lowering Volume Quickly

Audio Mute function instantly lowers the volume level to 0.

- 1 Touch the  (MUTE) button to activate MUTE mode. The audio level will be 0.
- 2 Touch the  (MUTE) button again to bring the audio back to previous volume level.

## Touch Screen Operation

You can operate the unit by using the touch panel display.

- Be sure to touch the onscreen button lightly with the pad of your finger to avoid scratching the display.

### Touch operation


Touch a button or list item on the screen lightly.



- If you touch a button and there is no reaction, remove your finger.
- Onscreen buttons that cannot be operated are dimmed.

### Swipe operation

Move your finger lightly with a swipe.

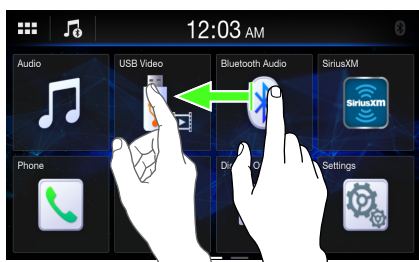


### Drag & Drop operation

Touch and hold the desired item, then drag it to its new location by moving your finger, then release your finger to place the item.



- Except for USB Photo mode, it is not possible to narrow the screen with two fingers (pinch in) or spread the screen (pinch out).

## Switching Sources

- 1 Touch the  (HOME) button. The HOME screen is displayed.




- 2 Touch a widget of your desired source.

- In the HOME screen, you can change the widget location on the screen. For details, see "About the HOME Screen" (page 11).

## Selecting an Item in a List

To scroll through a list, perform the following operations.

- Touch the screen and slide your finger up and down. The screen will scroll along with your finger movement.

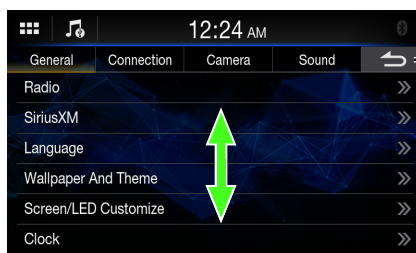

Returns to the previous screen. Depending on the function, this button may cancel the operations performed on the screen.


- After touching the screen, move your finger away from the screen before dragging and that item will be selected.

## About the HOME Screen


In the HOME screen, select a widget to perform various settings and operations of the function.

### Touch the (HOME) button.

The HOME screen is displayed.

- You can also display the HOME screen by touching  at the top of the screen.

### HOME screen example

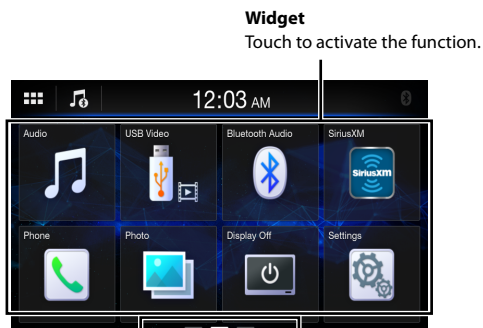

#### HOME screen navigation

Swipe the HOME screen horizontally with your finger to change the page. Up to 3 pages exist.

- After selecting [Audio] widget, it is possible to switch the mode to USB Audio mode, iPod mode for iPhone or Bluetooth Audio mode.

## Editing HOME screen

### You cannot operate the Widgets editing screen while driving.

Your vehicle must be parked with the ignition key in the ACC or ON position. For details, see "To display the Setup Menu screen" in "Setup Operation" (page 12).

In the Widgets editing screen, you can change the audio source order or set the display/hide settings.

- 1 Touch and hold the HOME screen for at least a second. The widgets editing screen is displayed.



- The source icon displayed in the Widgets editing screen is displayed only when usable setup and conditions of each Audio source are fulfilled. For details on setup and conditions of each audio source, see "Switching Sources" (page 10).

### Adding a widget

Drag and drop a widget from the additional candidate widgets area to the desired position of the HOME screen image area.


- To show more candidate widgets, swipe horizontally.
- There are 3 sizes of widgets.

### Changing the order of widget

Drag and drop the widget to the desired location.

### Deleting a widget from the HOME screen

Drag and drop a widget from the HOME screen image area to .

-  is displayed while touching a widget.

## 2 Touch the (HOME) button.

The HOME screen is displayed.

## About the Indicator Display

The Indicator Bar at the top of the screen displays various types of information, like the current time.



- ① Recalls the HOME screen.
- ② Displays the currently playing audio source. Touch to return to the Audio source screen.
- ③ Indicates the current time. You can switch between the 12 hour display and 24 hour display options (page 15).
- ④ Displays the SiriusXM signal strength when connecting to SiriusXM Tuner. (If SiriusXM Tuner is not connected, it is not displayed.)
- ⑤ Lights up when connected to a Bluetooth compatible device. (Does not display when connection is set to OFF.)

# Setup

## Setup Operation

### To display the Setup Menu screen:

Your vehicle must be parked with the ignition key in the ACC or ON position. To do this, follow the procedures below.

- 1 Bring your vehicle to a complete stop at a safe location. Engage the parking brake.
- 2 Release the parking brake. (For safety, release the parking brake while depressing the foot brake pedal).
- 3 Engage the parking brake again.


- For automatic transmission vehicles, place the transmission lever in the Park position.

Now, the locking system for the Setup operation has been released. Engaging the parking brake can reactivate the Setup Menu, as long as the car's ignition has not been turned off. It is not necessary to repeat the above procedure (1 through 3).

Each time the ignition is turned OFF, perform the above procedure.

### 1 Touch the (HOME) button.


The HOME screen is displayed.

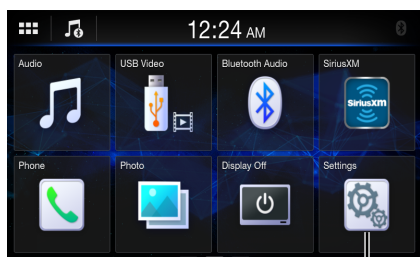

[Settings] button

### 2 Touch [Settings].

The Settings menu screen is displayed.

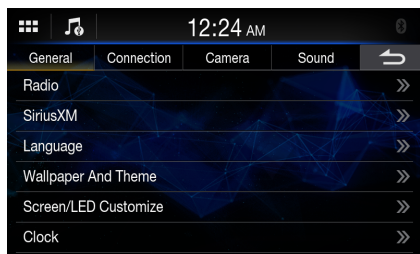

### 3 Touch the required setting genre on the upper part of the Settings menu screen, and then touch the setting item.

#### Setting genres:

General: See "General Setup" (page 12).

Connection: See "Connection (Bluetooth) Setup" (page 16).


Camera: See "Camera Setup" (page 17).

Sound: See "Sound Setup" (page 19).

## General Setup

[General] is selected on the Settings menu screen.

### ■ General Setup Menu screen

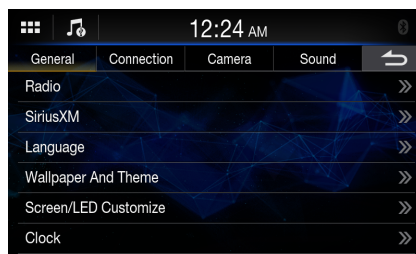

Setting items:

Radio (page 12)

SiriusXM (page 13)

Language (page 13)

Wallpaper And Theme (page 14)

Screen/LED Customize (page 14)

Clock (page 15)

Display Off (page 15)

About (page 15)


Installation (page 15)

Rear Seat Entertainment (RSE) (page 16)

Steering Wheel Position (page 16)

## Radio Setup

[Radio] is selected on the General Setup Menu screen.

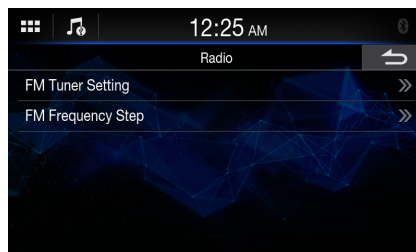

### Setting the TUNER (FM) Tone Quality (Tuner Condition)

This unit can set your preferred tone quality for FM radio source.

#### Setting item:

FM Tuner Setting

#### Setting contents:

Normal (Initial setting) / HiFi / Stable

Normal: Standard setting

HiFi: High-quality setting

Stable: Control noise

- Noise may be more noticeable when [HiFi] is set, depending on the reception status. In this case, the [Normal] setting is recommended.

## Setting the TUNER (FM) Frequency Step

During manual tuning, you can select the frequency step for FM analog radio station searching.

### Setting item:


FM Frequency Step

### Setting contents:

100 kHz / 200 kHz (Initial setting)

## SiriusXM Setup

[Sirius XM] is selected on the General Setup Menu screen.

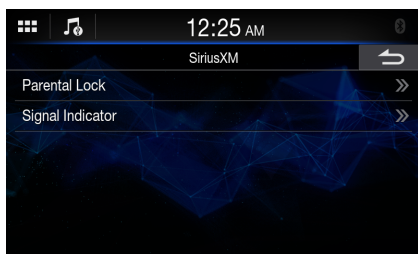

## Setting the Parental Lock

You can lock out channels with passcode protection. Channels that are locked cannot be accessed without entering the passcode. You can unlock a channel or change the passcode using this menu option.

### Setting item:

Parental Lock

- 1 Touch [Parental Lock].**  
A passcode input screen is displayed.
- 2 Touch the numeric keypad to input a 4-digit passcode.**  
The initial default 4-digit passcode is set to 0000. After entering the digit, it is displayed as "●".
  - Touch [] to delete an entered number.
- 3 Touch [OK].**

### Setting the Lock status of individual channels

- 4 Touch [Locked Channels].**  
The channels list screen is displayed.
- 5 Touch [] (Off) or [] (On) of the channels list to set the Parent Lock.**

### Clearing the Lock of ALL the locked Channels

- 4 Touch [Clear All Locked Channels].**
- 5 Touch [Yes] to clear the lock of all the locked channels.**  
Touch [No] to cancel.

### Changing the Lock Passcode

- 4 Touch [Edit Code].**  
The numeric keypad screen is displayed.

- 5 Use the keypad to enter the current (old) 4-digit passcode, and then touch [OK].**  
The initial passcode is set to "0000".
  - Touch [] to delete an entered number.
- 6 Touch [OK] to confirm the entry.**
- 7 Now use the keypad to enter the new 4-digit passcode.**
- 8 Touch [OK].**
- 9 Use the keypad to enter the new 4-digit passcode a second time to verify it, and then touch [OK].**
  - Remember to keep a note of the passcode in a safe place in case you forget the code.

## Signal Strength Information

While listening to a SiriusXM Channel, the Signal strength of the current channel will be displayed.

### Setting item:


Signal Indicator

This menu item displays the SiriusXM signal strength as Excellent, Good, Weak or No Signal.

- If the Signal indicator reports Weak or No Signal and your vehicle is parked outside with no obstructions to the southern sky, then your SiriusXM antenna may not be properly installed or may have become damaged.

## Language Setup

[Language] is selected on the General Setup Menu screen. The Setup menu, feedback information, etc. for this unit can be changed to appear in the selected language.

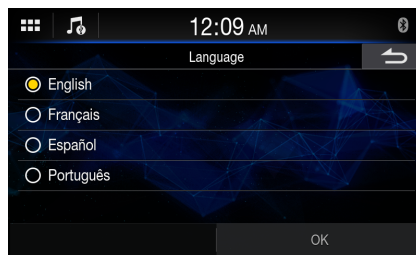

### Setting item:

Language

### Setting contents:

English, Français, Español, Português

- The currently selected language is displayed.

## Wallpaper Setup

[Wallpaper And Theme] is selected on the General Setup Menu screen. You can change the wallpaper of the display screen from 4 different colored default images or your image.



### Setting a Wallpaper using a default image

**Setting contents:**


Amber / Blue / Green / Red

Touch the desired image, and then touch [Set Wallpaper].

### Setting a Wallpaper using your image

#### 1 Touch [User Image].

The image selecting screen is displayed.

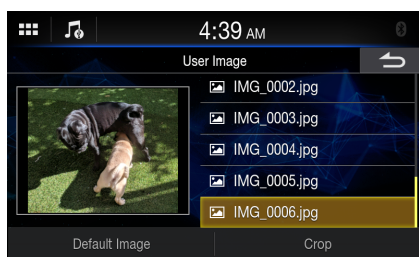

#### 2 Select an image stored on the connected USB Flash drive.

The selected image thumbnail is displayed.

If not using an image as a wallpaper, touch [Default Image] to return to the previous screen without selecting.

#### 3 Touch [Crop].

#### 4 Touch the area to be trimmed for a wallpaper.

If the image is 800 × 480 pixel, this step is not necessary.


#### 5 Touch [Set Theme] to change the theme color.

#### 6 Touch the desired color.

#### 7 Touch [Set Wallpaper].

## Screen/LED Customize Setup

[Screen/LED Customize] is selected on the General Setup Menu screen.

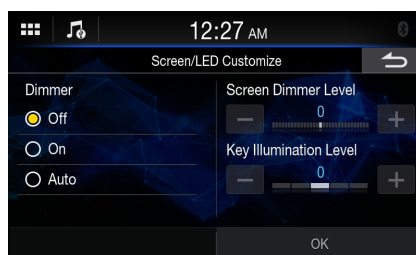

**Setting item:**

Dimmer / Screen Dimmer Level / Key Illumination Level

### Setting the Brightness of the Backlighting (Dimmer)

Backlighting is provided by LEDs light built into the liquid crystal panel. The illumination control adjusts the brightness of the backlighting based on the car ambient lighting for easier viewing.

**Setting item:**

Dimmer

**Setting contents:**

Off, On, Auto (Initial setting)

Off: Deactivate Auto Dimmer mode to keep the background illumination of the monitor bright.

On: Keep the background illumination of the monitor dark.

Auto: Adjust the brightness of the background illumination of the monitor automatically to the brightness of the car interior.

- When [On] is set, the setting is also applied for the button lighting in "Adjusting the Dimmer of Button Lighting at Night" (page 14) and "Adjusting the Minimum Level of Backlight" (page 14).

### Adjusting the Minimum Level of Backlight

You can adjust the brightness of the backlight. This function could be used, for instance, to change the screen brightness while traveling at night.

**Setting item:**

Screen Dimmer Level

**Setting contents:**

-15 to 15 (Initial setting: 0)

- This setting is only available when "Dimmer" is set to [On] or [Auto].

### Adjusting the Dimmer of Button Lighting at Night

You can adjust the brightness of the button lighting at night with the dimmer.

**Setting item:**

Key Illumination Level


**Setting level:**

-2 to 2 (Initial setting: 0)

- This setting is only available when "Dimmer" is set to [On] or [Auto].

## Clock Setup

[Clock] is selected on the General Setup Menu screen. You can set the current time and the clock display type, 12-hour or 24-hour, depending on your preference.

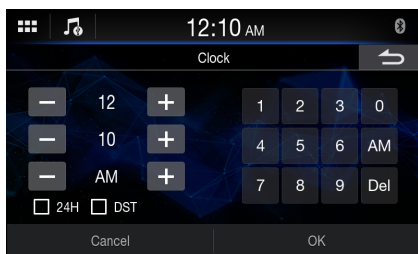

**Setting item:**  
Clock

**Touch [ + ] or [ - ] to adjust the hour, minute and AM/PM.**

You can also use the number keys.

- \* To change to 24-hour, set "24H" to [On] (☑).
- \* To set the daylight saving time (Summer Time mode), set "DST" to [On] (☑).

## Display Off Setting


When [Display Off] is selected on the General Setup Menu screen, the display is turned Off.

**Setting item:**  
Display Off

- To cancel Display Off mode, touch the screen or any button.
- Display Off mode is canceled when the power or ACC is turned off.
- When the gear lever is shifted to the reverse (R) position and the rear camera is connected, the rear camera image is displayed.
- When a call is received on a Bluetooth-connected phone, the incoming call screen is displayed.
- You can also activate Display Off mode directly by touching the [Display Off] widget on the HOME screen.

## About iLX-F411/iLX-F409

[About] is selected on the General Setup Menu screen. [About] enables you to check the Serial No., Firmware Version, Model Name, and to initialize various settings.

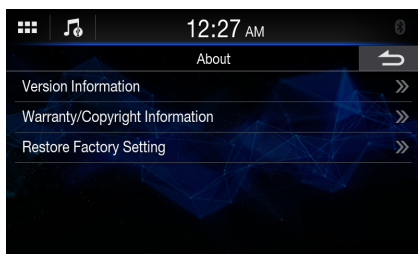

## Displaying the Product Information

You can view the version information of this product. Make note of this information and refer to it whenever you contact Alpine Tech Support or an Alpine-authorized dealer.

**Setting item:**  
Version Information

**Setting contents:**  
Serial No. / SYSTEM version / Firmware Version

## Displaying Warranty/Copyright Information

**Setting item:**  
Warranty/Copyright Information

**Setting contents:**  
Open source licenses / Notice

## Initializing the System

You can initialize all data, to restore the factory settings. Remove the USB flash drive, etc. from the system before operation


- 1 Touch [Restore Factory Setting].**
- 2 After the confirmation message appears, touch [Yes].**  
The system starts initialization.  
The confirmation screen appears.
- 3 Touch [Confirm].**

- Do not turn on/off the power, change the ignition key position or remove the screen panel until system restart is completed.

## Installation Setup

[Installation] is selected on the General Setup Menu screen. Vehicle Setup enables you to check the connection status of Reverse Lead/Parking Brake Lead.


When selecting the item, the Installation check screen is displayed.

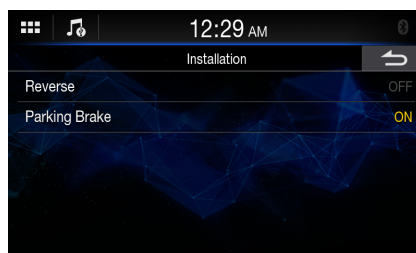

**Setting item:**  
Installation  
**Setting contents:**  
Reverse / Parking Brake

## Rear Seat Entertainment (RSE) setup

[Rear Seat Entertainment (RSE)] is selected on the General Setup Menu screen.

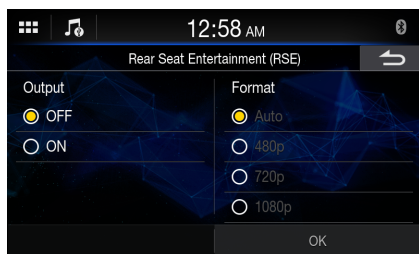

**Setting item:**

Output (page 16)  
Format (page 16)

### Rear Seat Entertainment (RSE) Output Setting

When a Rear monitor equipped with HDMI input is connected to this unit, change this setting to "On." You can output images to the Rear monitor.

**Setting item:**

Output

**Setting contents:**

Off (Initial setting) / On

### Format Setting

When the Output setting is [On], you can configure the HDMI Output format setting (resolution).

**Setting item:**

Format

**Setting contents:**

Auto: The suitable format resolution is automatically selected.  
480p: Output resolution is fixed at 480p.  
720p: Output resolution is fixed at 720p.  
1080p: Output resolution is fixed at 1080p.

- Depending on the monitor connected to the HDMI Output, the resolution may not be able to be selected.

## Steering Wheel Position Setting

Set this item when Apple CarPlay is used/Android smartphone which installed Android Auto App is connected.

This setting influences Apple CarPlay/Android Auto mode.

**Setting item:**

Steering Wheel Position


**Setting contents:**

Left (Initial setting) / Right

## Connection (Bluetooth) Setup

[Connection] is selected on the Setup menu screen.

### Connection Setup Menu screen

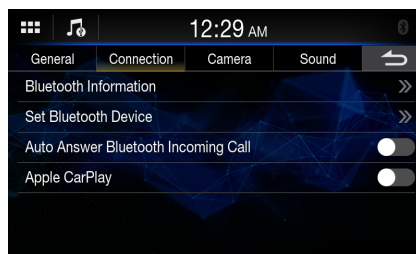

Setting items:

Bluetooth Information (page 16)  
Set Bluetooth Device (page 16)  
Auto Answer Bluetooth Incoming Call (page 17)  
Apple CarPlay (page 17)

## Displaying Bluetooth Information

[Bluetooth Information] is selected on the Connection Setup Menu screen.

You can display the Bluetooth device name and device address of this unit.

**Setting item:**

Bluetooth Information

## Pairing the Bluetooth Device

[Set Bluetooth Device] is selected on the Connection Setup Menu screen.

Search for Bluetooth compatible devices.

**Setting item:**

Set Bluetooth Device

- 1 Touch [Set Bluetooth Device].**  
The Bluetooth Setup screen is displayed.
    - You can also display the Bluetooth Setup screen directly by touching the [Bluetooth Settings] widget on the HOME screen.
  - 2 Select this unit on the Bluetooth device.**  
A message about the device to be registered is displayed.
  - 3 Touch [Yes].**  
The Bluetooth device is connected.  
If you connecting to a smartphone, a message to download the phonebook is displayed.
  - 4 Touch [🎵] (Audio) or/and [📞] (Hands-free) of the device you want to connect from the list.**  
Audio: Device is used as an Audio device.  
Hands-free: Device is used as a Hands Free Device.
    - You can register up to 5 Bluetooth compatible mobile phones.
    - You can connect 1 Bluetooth Device to each of Bluetooth Audio mode and Hands-free mode.
- The Bluetooth registration process differs depending on the device version and SSP (Simple Secure Pairing). If a 4 or 6 character Passcode appears on this system, enter the Passcode on the Bluetooth device.




- If a 6 character Passkey appears on this device, make sure the same passkey is displayed on the Bluetooth compatible device and touch [OK].
- If all 5 devices have been registered, you cannot register a 6th device. To register another device, you need to delete one of the other 5 devices first.

## Setting the Bluetooth Device

Select one of 5 paired Bluetooth compatible devices that you previously registered.

Touch [🎵] (Audio) or [📞] (Hands-free) of the device you want to connect from the Paired Device list.

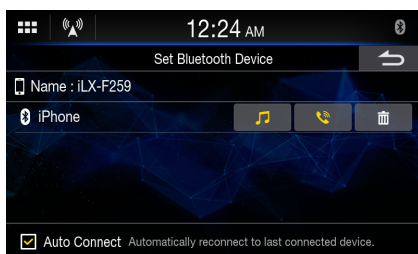

- You can also change the connected device by touching the device name.

## Deleting a Bluetooth Device from the list

You can delete the information of a previously connected Bluetooth compatible device.

**1** Touch [🗑️] of the Bluetooth compatible device to delete from the Paired Device list.

**2** Touch [Yes].

- Touching [No] will cancel the setting.

## Setting the Auto Connection

You can connect the last connected device automatically.

Set "Auto Connect" to [On] (☑️).

## Auto Answering Setup

You can set to answer an incoming call automatically.

Touch [🔴] (Off) or [🟡] (On) of "Auto Answer Bluetooth Incoming Call".

## Apple CarPlay Setup


To use the Apple CarPlay (page 24), set "Apple CarPlay" to [On].

Touch [🔴] (Off) or [🟡] (On) of "Apple CarPlay".

## Camera Setup

[Camera] is selected on the Setup Menu screen. You can set up items related to the Camera.

### ■ Camera Setup Menu screen

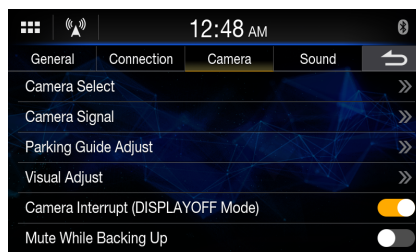

Setting items:

Camera Select (page 17)

Camera Signal (page 17)

Parking Guide Adjust (page 18)

Visual Adjust (page 18)

Camera Interrupt (DISPLAY OFF Mode) (page 18)

Mute While Backing Up (page 18)

## Camera Input Setting

[Camera Select] is selected on the Camera Setup Menu screen.

**Setting item:**

Camera Select

**Setting contents:**

Off (Initial setting) / Rear

Off: No camera is connected.

Rear: Rear camera is connected.

## Camera Signal Input Setting

[Camera Signal] is selected on the Camera Setup Menu screen.

When the camera is connected, the video input signal type can be chosen.

**Further setting item:**

Camera Signal

**Setting contents:**

NTSC (Initial setting) / PAL

## Rear Camera Guide Settings


[**Parking Guide Adjust**] is selected on the Camera Setup Menu screen. You can adjust the camera guide position.

**Setting item:**

*Parking Guide Adjust*

**1 Touch [Parking Guide Adjust] on the Camera Setup menu screen.**

The camera guide adjustment screen is displayed.

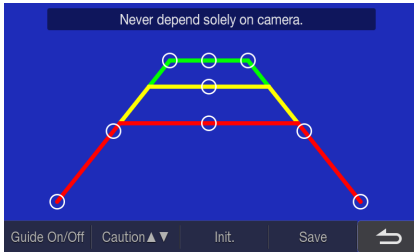

**2 Slide [○] to adjust.**

**3 After the adjustment is completed, touch [Save].**

- Touching [**Init.**] clears adjustments and returns to the setting before guide line alteration.

**4 Touch [↶] to complete the adjustment and return to the previous screen.**

### Turning the Rear Camera Guide On/Off

When displaying the rear camera view on the screen, you can set to hide or show the camera guide.

**Setting item:**

*Guide On/Off*

**Setting contents:**

*Off / On*

### Adjusting the Caution Position


You can move the position of the displaying message on the screen.

**Setting item:**

*Caution ▲ ▼*

## Camera Picture Quality Setup

[**Visual Adjust**] is selected on the Camera Setup Menu screen. You can adjust the picture quality for the primary and secondary cameras.

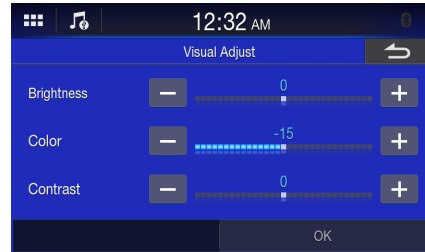

**Setting item:**

*Visual Adjust*

### Adjusting Brightness

**Setting item:**

*Brightness*

**Setting contents:**

*-15 to 15 (Initial setting: 0)*

- You can adjust the brightness between MIN (-15) and MAX (+15).

### Adjusting Color of Display

**Setting item:**

*Color*

**Setting contents:**

*-15 to 15 (Initial setting: 0)*

- You can adjust the color between MIN (-15) and MAX (+15).

### Adjusting Display Contrast

**Setting item:**

*Contrast*

**Setting contents:**

*-15 to 15 (Initial setting: 0)*

- You can adjust the contrast between MIN (-15) and MAX (+15).

## Camera Interrupt Setting (DISPLAY OFF Mode)

You can set whether to display the rear camera image when the gear lever is moved to the reverse (R) position while the unit is turned off.

**Setting item:**

*Camera Interrupt (DISPLAYOFF Mode)*

To set Display Off Mode, touch [  ] (Off) or [  ] (On) of “Camera Interrupt (DISPLAYOFF Mode)”.

## Mute Setting

You can set the sound will be muted automatically when the gear lever is moved to the reverse (R) position.

**Setting item:**


*Mute While Backing Up*

To set the rear speaker to On, touch [  ] (Off) or [  ] (On) of “Mute While Backing Up”.

## Sound Setup

[Sound] is selected on the Settings menu screen.  
You can set up items related to the sound quality.

### ■ Sound Setup Menu screen

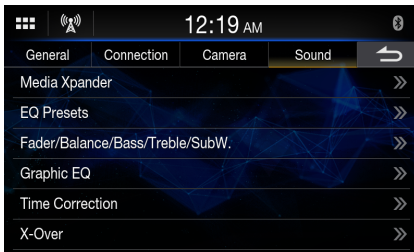

Setting items:

- Media Xpander (page 19)
- EQ Presets (page 19)
- Fader/Balance/Bass/Treble/SubW. (page 19)
- Graphic EQ (page 20)
- Time Correction (page 20)
- X-Over (page 21)
- Volume (page 21)
- Subwoofer (page 22)
- Rear Speaker (page 22)
- Defeat (page 22)

## Setting the Media Xpander (MX)

[Media Xpander] is selected on the Sound Setup Menu screen.  
Media Xpander (MX) makes vocals or instruments sound distinct regardless of the music source. The SiriusXM, USB Flash drive and iPod, will be able to reproduce the music clearly even in cars with a lot of road noise.

**Setting item:**  
Media Xpander

- 1** Touch the check box of [ALL MX].
- 2** Touch any of [Off] [Level 1] [Level 2] [Level 3].

- To cancel MX mode, set [Off] in step 1.
- MP3/WMA/AAC can have its own MX setting.
- When the Defeat setting is [On], you cannot perform the set up.
- The MX setting can be performed only when a source is currently selected.

## Equalizer Settings

[EQ Presets] is selected on the Sound Setup Menu screen.  
10 typical equalizer settings are preset at the factory for a variety of musical source material.



**Setting item:**  
EQ Presets

**Setting contents:**


FLAT (Initial setting) / POP / ROCK / CLASSICAL / JAZZ / ELECTRONIC / HIP HOP / EASY LISTENING / COUNTRY / NEWS

- Only one type can be set to On.
- When Equalizer Presets is set, the linked Graphic EQ settings are also changed. We recommend storing Graphic EQ settings in a Preset in advance.
- The Equalizer Presets setting can be configured when Defeat is Off.

## Fader/Balance/Bass/Treble/Subwoofer Settings

[Fader/Balance/Bass/Treble/SubW.] is selected on the Sound Setup Menu screen.

**Setting item:**  
Fader/Balance/Bass/Treble/SubW.

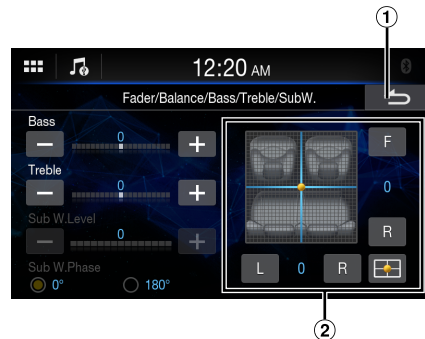

- ① Cancel  
Sound setup finishes.
- ② Fader/Balance Image area

### Setting the Fader/Balance

Touch the desired point within the image area, or touch [F] (Front), [R] (Rear), [L] (Left) or [R] (Right).

**Fader:**  
15 (F) to 15 (R)

**Balance:**  
15 (L) to 15 (R)

- To reset to the initial setting (F/R: 0, L/R: 0), touch [ ].

## Adjusting the Bass/Treble

Touch **[+]** or **[-]** for each item to be adjusted.

**Setting item:**  
Bass, Treble

**Setting contents:**  
-10 to 10 (Initial setting: 0)

## Setting the Subwoofer

### Adjusting the Subwoofer Level

**Setting item:**  
Sub W.Level

**Setting contents:**  
0 (Initial setting) to 15

- This setting is only available when "Subwoofer" is set to **[On]** (page 22).

### Setting the Subwoofer Phase

The subwoofer output phase is toggled Subwoofer Normal (0°) or Subwoofer Reverse (180°).

**Setting item:**  
Sub W.Phase

**Setting contents:**  
0° (Initial setting), 180°

- This setting is only available when "Subwoofer" is set to **[On]** (page 22).

## Graphic Equalizer Curve Settings (Graphic EQ)


**[Graphic EQ]** is selected on the Sound Setup Menu screen. You can modify the Equalizer settings to create a response curve more appealing to your personal taste.

**Setting item:**  
Graphic EQ

**Setting contents:**  
-7 to 7

- This setting is only available when "Defeat" is set to **[On]** (page 22).

**1** Touch **[Graphic EQ]** on the Sound Setup menu screen.

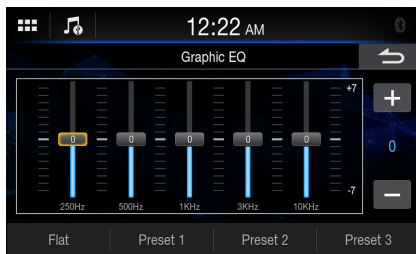

**2** Touch the band to be adjusted.

**3** Touch **[+]** or **[-]** to adjust the level of the band.

- You can also adjust the level of the band by moving the slider.

**4** To adjust another band, repeat step 2 to 3, and adjust all bands.

**5** To store the adjusted setting value, touch and hold **[Preset 1]**, **[Preset 2]**, or **[Preset 3]** for at least 2 seconds.

- Settings exceeding the frequency of adjacent bands are not available.
- While adjusting the Graphic EQ, you should consider the frequency response of the connected speakers.
- When the Graphic EQ is adjusted, the Equalizer Presets are overridden.
- When Equalizer Presets is set, the linked Graphic EQ settings are also changed. We recommend storing Graphic EQ settings in a Preset in advance.
- Touch **[Flat]** to initialize all values.

### Calling the Graphic EQ adjusted value

Touch **[Preset 1]**, **[Preset 2]**, or **[Preset 3]**.

The setting stored in the Preset will be recalled.

## Time Correction Settings

**[Time Correction]** is selected on the Sound Setup Menu screen. Before performing the following procedures, see "About Time Correction" (page 23).



Correction mode

**Setting item:**  
Time Correction

**1** Touch **[Time Correction]** on the Sound Setup menu screen.

**2** Touch the Correction mode button, and then select **[ms]**, **[cm]** or **[inch]**.

**3** Touch **[-]** or **[+]** for each speaker to adjust the time or distance.

0.0 msec to 9.9 msec (0.1 msec/step)

0.0 cm (0.0 inch) to 336.6 cm (132.56 inch) (3.4 cm/step)

All speaker setting values are adjustable in the range of 20 ms or 680 cm.

**4** To store the adjusted setting value, touch and hold **[Preset 1]**, **[Preset 2]**, or **[Preset 3]** for at least 2 seconds.

- Touch **[Flat]** to set all values to 0.0.
- If the Rear Speaker setting is Off, the Rear Speaker setting cannot be edited (page 22).
- If the Subwoofer setting is Off, the Subwoofer setting cannot be edited (page 22).

### Calling the Time Correction Value

Calling the pre-set time correction value.

Touch **[Preset 1]**, **[Preset 2]**, or **[Preset 3]** on the time correction screen.

The setting stored in the Preset will be recalled.

## Crossover Settings (X-Over)

[X-Over] is selected on the Sound Setup Menu screen. Before performing the following procedures, see “About the Crossover” (page 22).



**Setting item:**  
X-Over

- 1 Touch [X-Over] on the Sound Setup menu screen.
- 2 Touch [Channel], and then select [Front HPF], [Rear HPF] or [SubW.LPF].
- 3 Adjust the crossover to your preference.

### Selecting the Cut-Off Frequency

Touch [◀] or [▶] of “Freq.” (Frequency), and then select the cut-off frequency.

**Setting contents:**  
20.0 / 25.0 / 31.5 / 40.0 / 50.0 / 63.0 / 80.0 (Initial setting) / 100.0 / 125.0 / 160.0 / 200.0 Hz

### Adjusting the Slope

Touch [◀] or [▶] of “Slope”, and then adjust the HPF or LPF slope.

**Setting contents:**  
0 (Initial setting) / 6 / 12 / 18 / 24 dB/oct.

### Adjusting the Level

Touch [–] or [+] of “Level”, and then adjust the HPF or LPF level.

**Setting contents:**  
–12 to 0 dB (Initial setting: 0)

- 4 Repeat steps 2 to 3 to make adjustment to the other channels.
- 5 To store the adjusted setting value, touch and hold [Preset 1], [Preset 2], or [Preset 3] for at least 2 seconds.


- Touch [Flat] to initialize all values.
- If the Rear Speaker setting is Off, the Rear Speaker setting cannot be edited (page 22).
- If the Subwoofer setting is Off, the Subwoofer setting cannot be edited (page 22).
- While adjusting the X-Over you should consider the frequency response of the connected speakers.

### Calling the X-Over adjusted value

Touch [Preset 1], [Preset 2], or [Preset 3]. The setting stored in the Preset will be recalled.

## Volume Setup

[Volume] is selected on the Sound Setup menu screen.

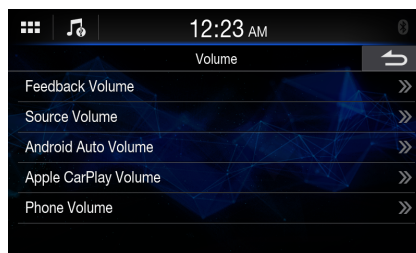

- Settable source differs depending on the connected device and settings.

## Adjusting the Key Sound


You can change the volume of the sound heard when a button is touched.

**Setting item:**  
Feedback Volume

**Setting contents:**  
0 to 7 (Initial setting: 4)

## Adjusting the Source Volume

Touch [Source Volume] on the Volume Setup menu screen.

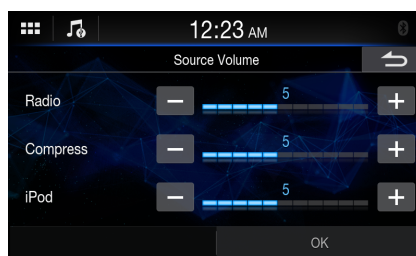

**Setting item:**  
Radio / Compress\* / iPod / Bluetooth Audio / Sirius XM \*\*Offset

**Setting contents:**  
0 to 11 (Initial setting: 5)

\* Compressed Media is the music data in a USB flash drive (MP3/WMA/AAC/FLAC/WAV).

## Setting the Volume for Android Auto

When an Android Smartphone is connected, touch [Android Auto Volume] to set the volume for Android Auto mode.

**Setting Item:**  
Media \*\*Offset

**Setting contents:**  
0 to 11 (Initial setting: 5)

**Setting Item:**  
Notification

**Setting contents:**  
0 to 35 (Initial setting: 12)

## Setting the Volume for Apple CarPlay

When an iPhone 5s or later is connected, touch [**Apple CarPlay Volume**] to set the volume for Apple CarPlay mode.

**Setting Item:**

Media **\*\*Offset**

**Setting contents:**

0 to 11 (Initial setting: 5)

**Setting Item:**

Notification

**Setting contents:**

0 to 35 (Initial setting: 12)

**Setting Item:**

Ringtone / Phone Calls

**Setting contents:**

0 to 11 (Initial setting: 5)

## Adjusting the Volume for Phone

You can adjust the speaker volume and receive volume, during the call.

**Setting item:**

Speaker Volume / Mic Level / Ringtone Volume

**Setting contents:**

0 to 11 (Initial setting: 5)

## Turning Subwoofer ON/OFF

If an optional subwoofer is connected to the unit, make the following setting.

**Setting item:**

Subwoofer

To set the rear speaker to On, touch [] (Off) or [] (On) of "Subwoofer".

## Rear Speaker Setting

You can set the rear speaker output to Off.

**Setting item:**

Rear Speaker

To set the rear speaker to On, touch [] (Off) or [] (On) of "Rear Speaker".

## Defeat Setting

If Defeat is On, the Equalizer setting are turned Off. This disables any settings made for these functions.

**Setting item:**

Defeat

To set the rear speaker to On, touch [] (Off) or [] (On) of "Defeat".

## About the Crossover

**Crossover (X-Over):**


This unit is equipped with an active crossover. The crossover limits the frequencies delivered to the outputs. Each channel is controlled independently. Thus, each speaker pair can be driven by the frequencies for which they have been optimally designed.

The crossover adjusts the HPF (high pass filter) or LPF (low pass filter) of each band, and also the slope (how fast the filter rolls off the highs or lows).

Adjustments should be made according to the reproduction characteristics of the speakers. Depending on the speakers, a passive network may not be necessary. If you are unsure about this point, please consult your authorized Alpine dealer.

	Cut-off frequency (1/3 octave steps)		Slope		Level
	HPF	LPF	HPF	LPF	
<b>Subwoofer (LPF)</b>	----	20 Hz - 200 Hz	----	0, 6, 12, 18, 24 dB/oct.	0 to -12 dB
<b>Rear speaker (HPF)</b>	20 Hz - 200 Hz	----	0, 6, 12, 18, 24 dB/oct.	----	0 to -12 dB
<b>Front speaker (HPF)</b>	20 Hz - 200 Hz	----	0, 6, 12, 18, 24 dB/oct.	----	0 to -12 dB

Low range High range

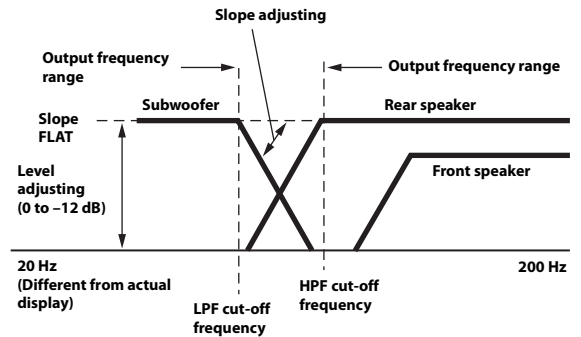

- **HPF (high pass filter):** Cuts the lower frequencies and allows the higher frequencies to pass.
- **LPF (low pass filter):** Cuts the higher frequencies and allows the lower frequencies to pass.
- **Slope:** The level change (in dB) for a frequency change of one octave.
- The higher the slope value, the steeper the slope becomes.
- Adjust the slope to FLAT to bypass the HP or LP filters.
- Do not use a tweeter without the HPF on or set to a low frequency, as it may cause damage to the speaker due to the low frequency content.
- Adjustment should be made according to the recommended crossover frequency of the connected speakers. Adjusting to a frequency range outside that recommended may cause damage to the speakers. For the recommended crossover frequencies of Alpine speakers, refer to the respective Owner's Manual. We are not responsible for damage or malfunction of speakers caused by using the crossover outside the recommended value.


## About Time Correction

The distance between the listener and the speakers in a car vary widely due to the complex speaker placement. This difference in the distances from the speakers to the listener creates a shift in the sounds image and frequency characteristics. This is caused by the time delay between the sound reaching the listener's right versus the left ear.

To correct this, this unit is able to delay the audio signal to the speakers closest to the listener. This effectively creates a perception of increased distance for those speakers. The listener can be placed at an equal distance between the left and right speakers for optimum staging. The adjustment will be made for each speaker in 3.4 cm steps.

### Example 1. Listening Position: Front Left Seat

Adjust the time correction level of the front left speaker to a high value and the rear right to zero or a low value.

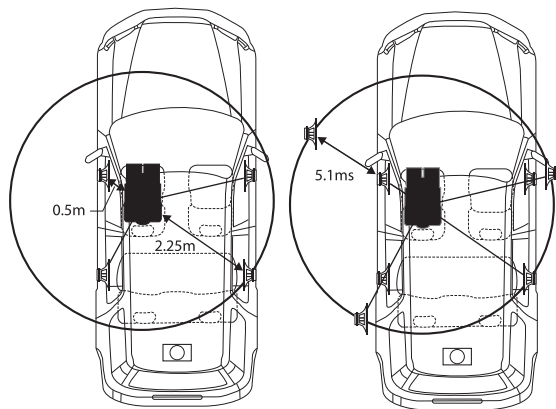

The sound is not balanced because the distance between the listening position and the various speakers is different. The difference in distance between the front left speaker and the rear right speaker is 1.75 m (68-7/8"). Here we calculate the time correction value for the front left speaker in the diagram on the above.

Conditions:

Farthest Speaker – listening position : 2.25 m (88-9/16")

Front left speaker – listening position : 0.5 m (19-11/16")

Calculation:  $L = 2.25 \text{ m} - 0.5 \text{ m} = 1.75 \text{ m (68-7/8")}$

Time correction =  $1.75 \div 343 * 1,000 = 5.1 \text{ (ms)}$

\* Speed of sound: 343 m/s (765 mph) at 20°C

In other words, giving the front left speaker a time correction value of 5.1 ms makes it seem as if its distance from the listener is the same as the distance to the farthest speaker.

Time correction eliminates the differences in the time required for the sound to reach the listening position.

The time of the front left speaker is corrected by 5.1 ms so that its sound reaches the listening position at the same time as the sound of other speakers.

### Example 2. Listening Position: All Seats

Adjust the time correction level of each speaker to almost the same level.

- 1 Sit in the listening position (driver's seat, etc.) and measure the distance (in meters) between your head and the various speakers.
- 2 Calculate the difference between the distance correction value to the farthest speaker and the other speakers.

$$L = (\text{distance to farthest speaker}) - (\text{distance to other speakers})$$

These values are the time correction values for the different speakers. Setting these values to make each sound reach the listening position at the same time as the sound of other speakers.

Time Correction Value List

Time Difference (msec)	Distance (cm)	Distance (inch)	Time Difference (msec)	Distance (cm)	Distance (inch)
0.0	0.0	0.0	5.1	173.4	68.3
0.1	3.4	1.3	5.2	176.8	69.7
0.2	6.8	2.7	5.3	180.2	71.0
0.3	10.2	4.0	5.4	183.6	72.4
0.4	13.6	5.4	5.5	187.0	73.7
0.5	17.0	6.7	5.6	190.4	75.0
0.6	20.4	8.0	5.7	193.8	76.4
0.7	23.8	9.4	5.8	197.2	77.7
0.8	27.2	10.7	5.9	200.6	79.1
0.9	30.6	12.1	6.0	204.0	80.4
1.0	34.0	13.4	6.1	207.4	81.7
1.1	37.4	14.7	6.2	210.8	83.1
1.2	40.8	16.1	6.3	214.2	84.4
1.3	44.2	17.4	6.4	217.6	85.8
1.4	47.6	18.8	6.5	221.0	87.1
1.5	51.0	20.1	6.6	224.4	88.4
1.6	54.4	21.4	6.7	227.8	89.8
1.7	57.8	22.8	6.8	231.2	91.1
1.8	61.2	24.1	6.9	234.6	92.5
1.9	64.6	25.5	7.0	238.0	93.8
2.0	68.0	26.8	7.1	241.4	95.1
2.1	71.4	28.1	7.2	244.8	96.5
2.2	74.8	29.5	7.3	248.2	97.8
2.3	78.2	30.8	7.4	251.6	99.2
2.4	81.6	32.2	7.5	255.0	100.5
2.5	85.0	33.5	7.6	258.4	101.8
2.6	88.4	34.8	7.7	261.8	103.2
2.7	91.8	36.2	7.8	265.2	104.5
2.8	95.2	37.5	7.9	268.6	105.9
2.9	98.6	38.9	8.0	272.0	107.2
3.0	102.0	40.2	8.1	275.4	108.5
3.1	105.4	41.5	8.2	278.8	109.9
3.2	108.8	42.9	8.3	282.2	111.2
3.3	112.2	44.2	8.4	285.6	112.6
3.4	115.6	45.6	8.5	289.0	113.9
3.5	119.0	46.9	8.6	292.4	115.2
3.6	122.4	48.2	8.7	295.8	116.6
3.7	125.8	49.6	8.8	299.2	117.9
3.8	129.2	50.9	8.9	302.6	119.3
3.9	132.6	52.3	9.0	306.0	120.6
4.0	136.0	53.6	9.1	309.4	121.9
4.1	139.4	54.9	9.2	312.8	123.3
4.2	142.8	56.3	9.3	316.2	124.6
4.3	146.2	57.6	9.4	319.6	126.0
4.4	149.6	59.0	9.5	323.0	127.3
4.5	153.0	60.3	9.6	326.4	128.6
4.6	156.4	61.6	9.7	329.8	130.0
4.7	159.8	63.0	9.8	333.2	131.3
4.8	163.2	64.3	9.9	336.6	132.7
4.9	166.6	65.7			
5.0	170.0	67.0			

# Apple CarPlay (Optional)

Apple CarPlay is a smarter, safer way to use your iPhone in the car. Apple CarPlay takes the things you want to do with your iPhone while driving and puts them right on the unit. You can get directions, make calls, send and receive messages, and listen to music, all in a way that allows you to stay focused on the road. Just plug in your iPhone to the unit and go.

- Before using this function, plug in your iPhone using Lightning to USB Cable (Supplied with iPhone) to the unit.
- Some functions may not be available while driving.
- About iPhone models usable with this unit, see “iPod mode on iPhone (Optional)” (page 29). Only an iPhone 5s or later compatible with Apple CarPlay function.
- Before operating Apple CarPlay, set “Apple CarPlay” to [On] (page 17).


## Access to Apple CarPlay


### 1 Touch the (HOME) button.

The HOME screen is displayed.

### 2 Touch [Apple CarPlay].

The Apple CarPlay screen is displayed.

Touch the desired App icon on the unit, or use Siri function by touching the  button.

- When a used iPhone 5s or later is reconnected, touch the pop-up message-“Apple CarPlay connected.” within 5 seconds to access to Apple CarPlay screen, or you can ignore prompt by touching [] on the top right.
- The App must be Apple CarPlay compatible in order to appear in the Home screen.

# Android Auto (Optional)

## What is Android Auto

Android Auto is designed to make it easier to use apps from your phone while you're on the road. Navigate with Google Maps, listen to playlists or podcasts from your favorite apps, and more.

## Activate Android Auto

Download the Android Auto App from the Google Play store before continuing.

Just plug in your smartphone to the unit's USB connector, then follow the prompt to pair your smartphone with the unit.

 
- The connected smartphone with Android Auto will disconnect other phone's Bluetooth connection and pair to the unit.

### 1 Touch the (HOME) button.

The HOME screen is displayed.

### 2 Touch [Android Auto].

The Android Auto screen is displayed.


- When a used smartphone is reconnected, touch the pop-up message-“Android Auto connected” within 5 seconds to access to Android Auto screen, or you can ignore prompt by touching [] on the top right.
- You can make a call, use voice recognition function and Android Auto's compatible navigation app, etc.
- Only Google approved apps with necessary driver-safety measures in place can be used.



# Radio

There are 3 types of [Radio] widgets for the HOME screen.

## ■ Radio main screen example

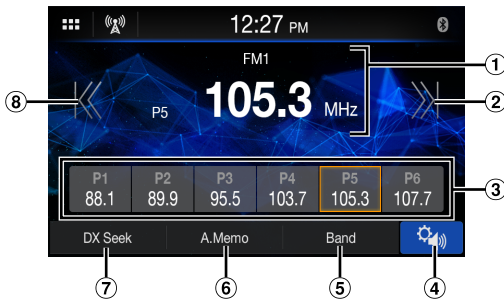

- ① Information display
- ② Increases frequency  
Touch and hold to change the frequency continuously.
- ③ Preset button  
Displays the preset stations with a short touch.  
Touch for at least 1 second to memorize the current station as a preset station.
- ④ Displays the Sound Setup Menu screen (page 19).
- ⑤ Switches a band.
- ⑥ Memorizes stations automatically
- ⑦ Switches a Seek mode.
- ⑧ Decreases frequency  
Touch and hold to change the frequency continuously.

## Radio Basic Operation

### Listening to the Radio

- 1 Touch the [HOME] button and select radio mode.**  
The display shows the radio mode screen.
- 2 Touch [Band] repeatedly to select the desired band from [FM1] / [FM2] / [AM].**
- 3 Touch [DX Seek], [Local Seek] or [Manual] repeatedly to select the tuning mode.**  
The radio frequency up or down button changes depending on the tuning mode.  

DX Seek (Distance) mode*	Automatically receives a receivable digital broadcast. Both strong and weak stations will be tuned in.
Local Seek mode*	Automatically receives a strong digital broadcast only.
Manual mode	The frequency is manually tuned in steps.

  - During Forced Analog mode, digital broadcasts cannot be received.

\* Depending on the signal, a digital or analog broadcast is received.
- 4 Touch [Left Arrow], [Right Arrow], [Left Arrow], [Right Arrow] to change the radio frequency up or down respectively.**  
In Manual mode, touch and hold to change the frequency continuously.

### Presetting Stations Manually

- 1 Tune in a desired radio station you wish to store in the preset memory by manual or automatic seek tuning.**
- 2 Touch and hold the Preset number you want to store for at least 1 second.**  
The selected station is stored.
- 3 Repeat the procedure to store up to 5 other stations onto the same band.**  
To use this procedure for other bands, simply select the desired band and repeat the procedure.  
A total of 18 stations can be stored in the preset memory (6 stations for each band; FM1, FM2 or AM).
  - If a preset memory has already been set in the same preset number, it will be cleared and the new station will be memorized.

### Presetting Stations Automatically

The tuner can automatically seek and store 6 strong stations in the selected band in ascending order of frequency.

#### Select the desired band then touch and hold [A.Memo].

The tuner automatically seeks and stores 6 strong stations into the preset buttons in ascending order of frequency.

When automatic storing has completed, the station stored in the preset 1 is selected.

- If no stations are stored, the tuner will return to the original station you were listening to before the automatic storing procedure began.
- You can cancel this process by touching [A.Memo] while the tuner is automatically seeking stations. Canceling will return the tuner preset to the previous setting.

### Tuning to Preset Station

**After selecting the desired band, touch the desired preset button.**

The preset station is received.

# USB Flash drive (Optional)

You can play back music files (MP3/WMA/AAC/FLAC/WAV), video files (MP4/AVI/WMV/MOV) and photo files (JPG/PNG/BMP) stored in a USB flash drive on the internal player of this system.

## ⚠ WARNING

**It is dangerous for the driver to watch video while driving the vehicle. The driver may be distracted from looking ahead and an accident could occur.**

**Install the unit correctly so that the driver cannot watch a video unless the car is stopped and the parking brake is applied.**

**If the unit is not installed correctly, the driver will be able to watch a video while driving and may be distracted from looking ahead and cause an accident. The driver or other people could be severely injured.**

## USB Audio

### ■ USB Audio mode screen



- ① Artwork display
- ② Information display
- ③ Finds the beginning of next chapter/Fast-forwards when touched for at least 1 second
- ④ Shuffle mode
- ⑤ Repeat mode
- ⑥ Displays the Sound Setup Menu screen (page 19)
- ⑦ Switches to iPod mode of iPhone or Bluetooth Audio.
- ⑧ Displays the search screen
- ⑨ Pause and Play
- ⑩ Elapsed time/Total time for playing
- ⑪ Current track number/Total track number
- ⑫ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second

## Playback

- 1 Touch the (HOME) button and select USB Audio mode.**  
The display shows the USB Audio mode screen.

- 2 Touch [] or [] to select the desired track (file).**

**Returning to the beginning of the current (or previous) track (file):**  
Touch [].

**Fast reverse :**  
Touch and hold [].

**Advancing to the beginning of the next track (file) :**  
Touch [].

**Fast forward :**  
Touch and hold [].

- 3 To pause playback, touch [].**  
Touching [] again will resume playback.

- The playback time may not be correctly displayed when a VBR (Variable Bit Rate) recorded file is played back.
- If there is tag information, artist name/album name/track name is displayed.
- ID3 tag/WMA tag  
If an MP3/WMA/AAC/FLAC/WAV file contains ID3 tag/WMA tag information, the ID3 tag/WMA tag information is displayed. (e.g., song name, artist name, and album name)
- When selecting a [Audio] widget on the HOME screen, touch [Audio Select] to select [USB]. If [USB] is already selected, you can start playback by selecting a [Audio] widget on the HOME screen.

## Fast-forwarding/Fast-reversing

- 1 During playback, touch and hold [] (Fast-reverse) or touch and hold [] (Fast-forward).**  
Touch and hold for more than 1 second to forward/reverse at 8x speed. Keep touching to switch the speed to 16x and 32x.

- 2 Release [] or [] to return to normal playback.**

- No sound is played back during fast-forwarding/fast-reversing.

## Repeat Play

**Touch [, [, or [] to select Repeat Play mode.**


ALL : All files are repeatedly played back.


File : Only the file currently playing is repeatedly played back.


Folder : Only files in a folder are repeatedly played back.

## Shuffle Play

### Touch [↻] to select Shuffle Play mode.

**Folder** : A Folder is selected randomly and songs in the Folder are played back in order. After all songs are played in a Folder, the next Folder is selected randomly.

**Song** : All songs in the Folder (Folder/File) including the song currently being played are played back in random sequence.

**OFF** : Shuffle mode is Off.

- If you select a track by using the search mode, the Shuffle mode will be canceled.

## Searching for a Desired Song

### 1 Touch [Q] (Search).

### 2 Touch your desired Folder name or File name.


When you select a Folder name, repeat the same procedure to select another Folder name or File name.

## USB Video

The video formats (USB Flash drive) supported by the unit are as follows.

- Supported Container: AVI/MP4/WMV/MOV/MPG
- Supported Video Coding: H.264/MPEG-4 AVC
- Supported Audio Coding: MP3, AAC, MPEG2 audio
- MAX File Size: 4GB

### ■ USB Video mode screen

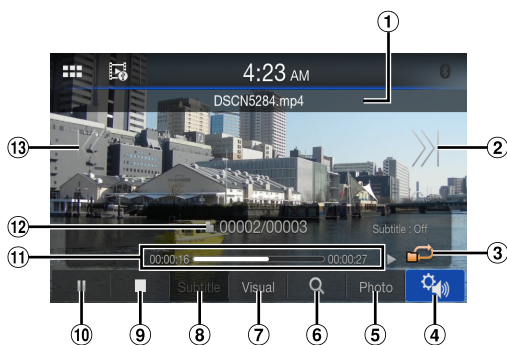

- ① File Name
- ② Finds the beginning of next file/Fast-forwards when touched for at least 1 second
- ③ Shuffle mode
- ④ Displays the Sound Setup Menu screen (page 19)
- ⑤ Switches to USB Photo mode
- ⑥ Displays the search screen
- ⑦ Sets the Brightness and Contrast
- ⑧ Displays the Subtitle
- ⑨ Stop
- ⑩ Pause and Play
- ⑪ Elapsed time/Total time for playing
- ⑫ Current file number/Total file number
- ⑬ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second

For the basic operations on USB Video mode, refer to “Playback” (page 26), “Fast-forwarding/Fast-reversing” (page 26) and “Searching for a Desired Song” (page 27). Select “USB Video mode” instead for “USB Audio mode.”

- To select USB Video mode, touch the [USB Video] or [Video] widget on the HOME screen.
- When searching for a desired video, touch [Repeat videos] for Repeat mode.


During the USB Video playback, touch the screen to display the operation screen.


- The operation screen changes to the visual screen in the USB Video mode for 5 seconds after an operation has been performed.
- For your safety, video is not displayed and only audio can be heard while driving.

## Setting the Brightness and Contrast

### 1 Touch [Visual].

### 2 Touch [+] or [-] to adjust the Brightness and Contrast.

: Adjusting the Brightness

: Adjusting the Contrast

## Displaying the Subtitle

Depending on the video file such as “.smi” or “.srt”, you can display the subtitle contained on the file.

### Touch [Subtitle].

To cancel displaying the subtitle, touch [Subtitle] again.


- If the file is not supported or the subtitle is not contained on the file, [Subtitle] is not available.

## USB Photo

### ■ USB Photo mode Preview screen



### ■ USB Photo mode screen

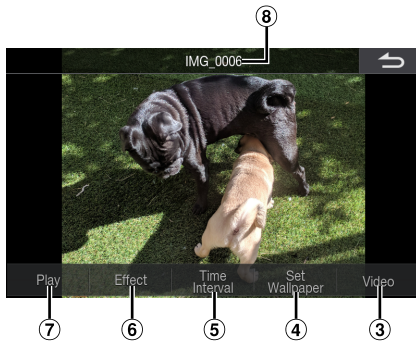

- ① Photo Preview
- ② Photo files List
- ③ Switches to USB Video mode
- ④ Sets the photo as a wallpaper (page 14)
- ⑤ Sets the Time Interval for the Slide Show
- ⑥ Applies an Effect to the photo
- ⑦ Plays the Slide Show
- ⑧ File Name

During the USB Photo playback, touch the screen to display the operation screen.

- The operation screen changes to the visual screen in the USB Photo mode for 5 seconds after an operation has been performed.


## Playback

### 1 Touch the (HOME) button and select USB Photo mode.

The display shows the USB Photo mode screen.

- To select USB Photo mode, touch the [Photo] or [Photo Frame] widget on the HOME screen.

### 2 Select the desired photo from the photo files list.

- To select the other photo (file), touch [

## Slide Show

The Slide Show shows photos that change every 3 seconds.

**Touch [Play].**

- To stop the Slide Show, touch the screen.

### Setting the Effect for Playback

You can set the playback effect how switches to the photo for Slide Show.

**Touch [Effect], and then select the desired effect.**

### Setting the Time Interval for Slide Show

You can set the time interval to switch to the next photo.

**Touch [Time Interval], and then select the desired time interval.**

## Setting a Wallpaper with a Photo

To set a wallpaper with your favorite photo, refer to “Setting a Wallpaper using your image” (page 14).

# iPod mode on iPhone (Optional)


A separately sold Lightning to USB cable (KCU-471i), etc., is required.

- This unit does not support video playback from iPhone which connected to this unit via USB Connector.
- Internet or telephone function, etc., of the iPhone is not controllable from the unit, but these functions can be controlled using the iPhone itself.
- Before operating iPod mode on iPhone, set "Apple CarPlay" to [Off] (page 17).

## About iPhone models usable with this unit

- The following devices have been tested and shown to work with this unit. Correct function of earlier versions cannot be guaranteed.
  - iPhone X
  - iPhone 8
  - iPhone 8 Plus
  - iPhone 7
  - iPhone 7 Plus
  - iPhone SE
  - iPhone 6s
  - iPhone 6s Plus
  - iPhone 6
  - iPhone 6 Plus
  - iPhone 5s

## ■ iPod main screen example

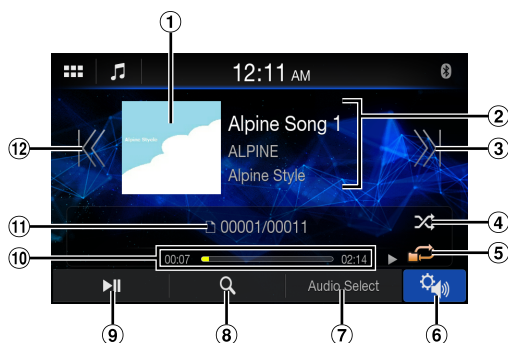

- ① Artwork display
- ② Information display\*
- ③ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second
- ④ Shuffle mode
- ⑤ Repeat mode
- ⑥ Displays the Sound Setup Menu screen (page 19).
- ⑦ Switches to the USB Flash drive or Bluetooth Audio.
- ⑧ Displays the search screen
- ⑨ Pause and Play
- ⑩ Elapsed time/Total time for playing
- ⑪ Current song no./Total song no.
- ⑫ Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second

\* Podcast mode.

## Playback

- 1 Touch the (HOME) button and select iPod mode. The display shows the iPod mode screen.

- 2 Touch [] or [] or to select the desired track (file).

**Returning to the beginning of the current (or previous) track (file):**  
Touch [].

**Fast reverse the current track :**  
Touch and hold [].

**Advancing to the beginning of the next track (file) :**  
Touch [].

**Fast forward the current track :**  
Touch and hold [].

- 3 To pause playback, touch [].

- If a song is playing on the iPhone before it is connected to the unit, it will continue playing when it is connected.
- An episode may have several chapters. The chapter can be changed by touching [] or [].
- If the artist, album or song name, created in iTunes, has too many characters, songs may not be played back when connected to the unit. Therefore, a maximum of 64 characters is recommended. The maximum number of characters for the unit is 64.
- Some characters may not be correctly displayed.
- When selecting a [Audio] widget on the HOME screen, touch [Audio Select] to select [iPod]. If [iPod] is already selected, you can start playback by selecting a [Audio] widget on the HOME screen.

## Searching for a Music File


An iPhone can contain thousands of songs. For this reason, this unit can make various searches using the search function as shown below. Using the Playlist/Artist/Album/Podcast/Audiobook/Genre/Composer/Song/Radio search mode's individual hierarchy, you can narrow down your search as shown in the table below.

<Music Search Menu>

Hierarchy 1	Hierarchy 2	Hierarchy 3	Hierarchy 4
Playlists	Songs	—	—
Artists	Albums	Songs	—
Albums	Songs	—	—
Songs	—	—	—
Genres	Artists	Albums	Songs
Composers	Albums	Songs	—
Podcasts	Episodes	—	—
Audiobooks	—	—	—
Radio	—	—	—

### For example: Searching by Artist name

The following example explains how an Artists search is performed.

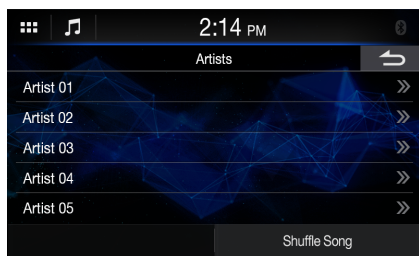

**1 Touch [Q] (Search) during playback.**

**2 Touch [Artists].**

The Artists search screen is displayed.

**3 Select the desired artist.**

**4 Touch the desired album's name.**


All songs of the selected album are displayed.


**5 Touch the desired song's name.**


The selected song is played back.

## Repeat Play

**Touch [↺] to select Repeat Play mode.**


ALL : All files are repeatedly played back.


File : Only the file currently playing is repeatedly played back.

OFF : Repeat mode is Off.

## Shuffle Play

**1 Touch [↻] to select Shuffle Play mode.**

Songs : Song shuffle randomly plays back songs within a selected category (playlist, album, etc.). The songs within the category are played just once until all songs have been played.

OFF : Shuffle mode is Off.

# HDMI Device (Optional)

Devices supporting HDMI can connect and play back through this unit (for example, an optional DVD Player, iPhone or other Smartphones).

- *The HDMI/MHL connecting cable differs depending on the connected device corresponding to HDMI. Prepare optional HDMI/MHL connecting cable sets suitable for your device.*

## HDMI Operation

### ■ iPhone, Smartphone, etc.

The output of your electronic device will be mirrored on this unit through the HDMI connector. Control from this unit is not possible.


- *The electronic device must possess an HDMI output interface.*
- *Not all devices with an HDMI output interface can be recognised by this unit.*
- *Use only the Alpine Special HDMI connection cable.*

### 1 Press the (HOME) button to select HDMI.

The display shows the HDMI mode screen.

- *You can select and change the source in the HOME screen (page 11).*
- *For your safety, video is not displayed and only audio can be heard while driving.*

### 2 In HDMI player mode, the screen of the device displays the content of electronic equipment by mirror image.

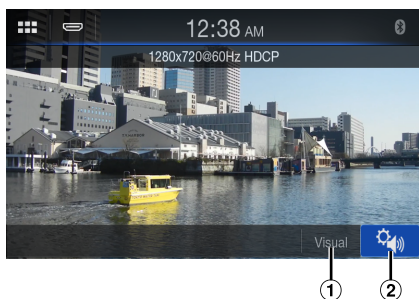

- ① Sets the Brightness and Contrast
- ② Displays the Sound Setup Menu screen (page 19).

## Setting the Brightness and Contrast

### 1 Touch [Visual].

### 2 Touch [+] or [-] to adjust the Brightness and Contrast.

- ☀: Adjusting the Brightness
- 🔵: Adjusting the Contrast

# SiriusXM Satellite Radio Operation (Optional)

## SiriusXM Tuner operation:

When an optional SiriusXM Tuner is connected to this unit, the following operations may be performed.

### ■ SiriusXM main screen example (Song Info. Mode)



- ① Signal Indicator  
Indicates the signal strength of SiriusXM.
- ② Information display  
Channel Info. Mode:  
Channel No./Long Channel Name/Category Name  
Song Info. Mode:  
Artist Name/Song Name/Content Info
- ③ Changes to the next channel
- ④ Preset buttons  
Displays the preset channels with a short touch.  
Touch for at least 1 second to memorize the current channel as a preset channel.
- ⑤ Displays the Sound Setup Menu screen (page 19).
- ⑥ Select the channel number
- ⑦ Changes text information
- ⑧ Displays the search screen
- ⑨ Changes to category browsing mode
- ⑩ Changes to the previous channel

## Receiving Channels with the SiriusXM Tuner

### About SiriusXM Satellite Radio

Only SiriusXM® brings you more of what you love to listen to, all in one place. Get over 140 channels, including commercial-free music plus the best sports, news, talk, comedy and entertainment. Welcome to the world of satellite radio. A SiriusXM Vehicle Tuner and Subscription are required. For more information, visit [www.siriusxm.com](http://www.siriusxm.com).

After you have found the SiriusXM Radio ID, you can activate your radio. See “Checking the SiriusXM Radio ID Number” (page 33).

In the USA, you can activate online or by calling SiriusXM Listener Care:

- Visit [www.siriusxm.com/activatenow](http://www.siriusxm.com/activatenow)
- Call SiriusXM Listener Care at 1-866-635-2349

For Canadian Subscriptions, please contact:

- Visit [www.siriusxm.ca/activatexm](http://www.siriusxm.ca/activatexm)
- Call XM Customer Care at 1-877-438-9677
- The SiriusXM Satellite Radio controls on this unit are available only when a SiriusXM Tuner is connected.

- 1 Touch the (HOME) button and select SiriusXM mode. The display shows the SiriusXM mode screen.
- 2 Touch [] or [] to select the desired channel. Touching and holding either button will rapidly browse through the channels.


- Refer to the SiriusXM Tuner User Guide for details on how to install the SiriusXM Tuner.

## Tuning Channels by Category

Channels are grouped into categories based on the type of content heard on the channels.

- 1 Touch [Category] on the SiriusXM main screen to activate the category browsing mode. The channels within the category of the current channel are listed.

### ■ Category browsing mode screen example

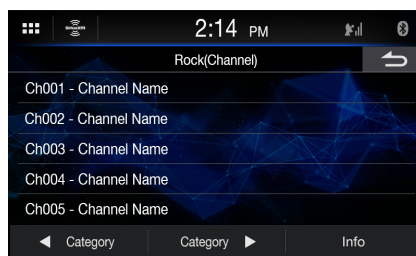

- Touching [Info] changes the display of information for the channels in the category with the following three options.  
Channel No./Channel Name → Channel No./Artist Name → Channel No./Song Title → Channel No./Content Info → Channel No./ Channel Name

- 2 Touch [ Category] or [ Category] on the category browsing mode screen to select a desired category. The Category Name is shown at the top of the display.
- 3 Select the desired channel.



---

## Changing the Display

---

Text information, such as the channel name, artist name/feature, and song/program title, is available with SiriusXM. The unit can display this text information as explained below.

### Touch [Info].

Each time you touch this button, the Channel Info. mode and the Song Info. mode switch alternately. For displayed contents, see "SiriusXM main screen example (Song Info. Mode)" (page 32).

---

## Checking the SiriusXM Radio ID Number

---

To subscribe to the SiriusXM Satellite Radio service, it is necessary to locate and identify the Radio ID of your SiriusXM Tuner. You can check the Radio ID on the bottom surface of the SiriusXM Tuner box. You can also check it from this unit by performing the following procedure.

### 1 While receiving SiriusXM Radio, touch [◀] or [▶] to select channel "0".

The unit displays the Radio ID number.

### 2 To cancel the Radio ID number display, change the channel to a channel other than "0".

- The SiriusXM Radio ID does not contain the letters I, O, S, or F.

---

## Storing Channel Presets

---

You can store 6 of your favorite SiriusXM channels for easy recall with Preset buttons.

### 1 Touch and hold the Preset number you want to store for at least 1 second to store the channel.

### 2 Repeat the procedure to store up to 5 other channels.

A total of 6 channels can be stored in the preset memory.

- If you store a new channel into a preset which already has a channel assigned, the current channel will be cleared and replaced with the new one.

---

## Tuning Channels using Presets

---

**Touch any one of the Preset numbers you have already stored in the Preset mode screen.**

The preset channel is received.

---

## Search Function

---

### 1 Touch [Q].

The Search list screen appears.

#### Search item:

All Channels / Category Name\*

\* The Category name for the channel currently being received is displayed.

- You can switch the category by touching [◀] or [▶] on the List screen after selecting a Search item.
- You can switch the display format by touching [Info] in the List screen after selecting a Search item.  
Channel No./Channel Name → Channel No./Artist Name → Channel

No./Song Title → Channel No./Content Info → Channel No./Channel Name

---

## Searching by Channel

### 2 Touch [All Channels].

All Channels will be displayed in a list.

### 3 Touch the selected channel.

The channel you selected is received.

---

## Searching by Category

### 2 Touch Category Name.

The channels within the category of the current channel are listed.

### 3 Touch the selected channel.

The channel you selected is received.

---

## Selecting the Channel Directly

---

You can directly select the channel number by using the numeric keypad.

### 1 Touch [Direct Tune].

The numeric keypad input screen is displayed.

### 2 Touch to input the channel number.

### 3 Touch [OK].

The selected channel is received.

---

## Parental Lock Function

---

The Parental Control feature allows you to limit access to any SiriusXM channels, including those with mature content. When enabled, the Parental Control feature requires you to enter a passcode to tune to the locked channels. For information on setting the Parental Control passcode, see "Setting the Parental Lock" (page 13). When a locked channel is selected, "Channel <xxx> Locked" is displayed and then the numeric keypad appears for you to enter the passcode.

**Input the 4-digit passcode you set in "Setting the Parental Lock" (page 13).**

The initial number is 0000.

- If you input a wrong passcode, "Incorrect Pass Code entered" is displayed.
- After entering the correct passcode, you can access all locked channels without entering the passcode again until the unit is powered off and then back on.

# Bluetooth Operation

## Setup Before Using

### About Bluetooth

Bluetooth is a wireless technology allowing communication between a mobile device or personal computer over short distances. This enables a hands-free call or data transmission between Bluetooth compatible devices. Bluetooth transmission is available in the unlicensed 2.4 GHz spectrum if the distance between devices is within 10 meters. For details, refer to the Bluetooth website (<http://www.bluetooth.com/>).

- Depending on the Bluetooth version, a Bluetooth compatible device may not be able to communicate with this unit.
- Proper function of this unit with all Bluetooth compatible devices is not guaranteed. For handling of the Bluetooth compatible device, consult your Alpine dealer or Alpine website.
- Depending on the surroundings, Bluetooth wireless connection may be unstable.
- When you place a call, or perform setup operations, be sure to stop your car in a safe place.
- Depending on the connected Bluetooth compatible device(s), the function may differ. Also refer to the Owner's Manual of the connected device(s).

### About the Hands-free Phone

Hands-free calls are possible when using a HFP (Hands-Free Profile) compatible mobile phone with this unit.

- Avoid performing a hands-free call in heavy traffic or on narrow or winding streets.
- Close the windows while calling to reduce background noise.
- If both calling parties are using hands-free devices, or the call is made in a noisy location, difficulty hearing the other person's voice is normal.
- Depending on telephone line conditions or certain mobile devices used, voices may sound unnatural.
- When using a microphone, speak as directly as you can into the microphone to obtain the best sound quality.
- Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality.

All features, functionality, and other product specifications, as well as the information contained in the Owner's Manual are based upon the latest available information and are believed to be accurate at the time of printing.

Alpine reserves the right to change or modify any information or specifications without notice or obligation.

- Notice that when you connect an iPhone 5s or later/Android smartphone which installed Android Auto App, the operation screen may differ from this section.

## Before Using Bluetooth

Before using the hands-free phone/audio function, the following settings need to be made.

### Register a Bluetooth device in this unit.

- See "Connection (Bluetooth) Setup" (page 16).
- You can search for this unit using a Bluetooth compatible device, and then connect that Bluetooth compatible device to this unit. The device name of this unit is "iLX-F411" or "iLX-F409" and the initial number of the passcode is "0000." Also refer to the Owner's Manual of the connected device(s).

## Hands-free Phone Control


Touch the Phone button to display the Phone menu screen.



Phone button

- You can also display the Phone menu screen by selecting the [Phone] widget on the HOME screen.

### Phone menu screen example

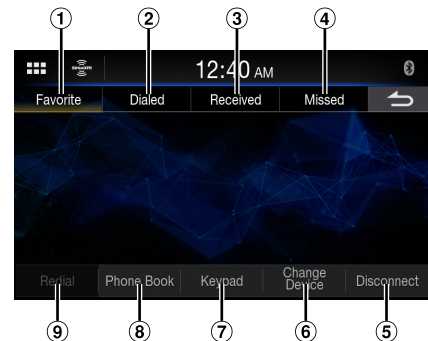


- ① Favorite  
Displays a list of numbers set as your favorite.
- ② Dialed  
Displays a list of dialed calls.
- ③ Received  
Displays a list of the received calls.
- ④ Missed  
Displays a list of the missed calls.
- ⑤ Disconnect  
Disconnects the Bluetooth device. After disconnecting, the display changes to [Reconnect] to connect the disconnected device again.
- ⑥ Change Device  
Displays the Bluetooth Setup screen.
- ⑦ Keypad

- Use to type a phone number.
- ⑧ Phone Book\*  
You can make a phone call from the Phone Book, or edit the Phone Book.
- ⑨ Redial  
Dials to the last called number.

\* If the Hands-Free Phone is not connected, the Bluetooth Setup screen will be displayed. See "Connection (Bluetooth) Setup" (page 16).


## Answering a Call

- 1 An incoming call triggers the ringtone and an incoming call display.

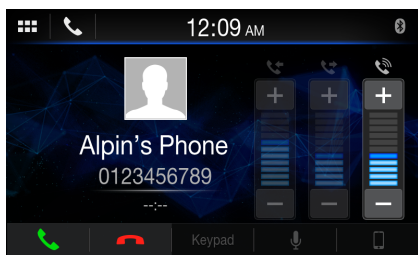

- You can adjust the ringtone volume by touching [+ ] or [- ] of "Ringtone Volume (🔊)".

- 2 Touch [📞].  
The call starts.

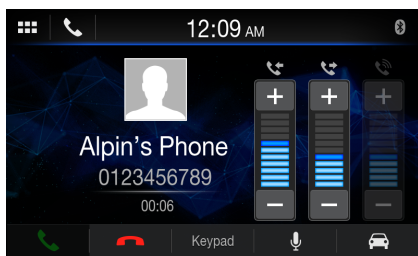

- During a call, the audio for the current mode on the unit is muted. After calling, playback will resume.
- When the caller's number is transmitted to the system, if the caller's name is stored in the phone book, the name is displayed. If the name is not stored, the number is displayed.
- Touch [📞] (Decline) to reject an incoming call.
- By touching [🔇], you can mute the microphone. To cancel MUTE mode, touch [🔊]. For details, see "Phone Operation Screen" (page 37).
- If another call comes during a call, operate on the Bluetooth Device.

## Hanging up the Telephone


- 1 Touch [📞] (End Call).  
The call finishes.

## Calling

### Making a phone call using the Phone Menu

#### Making a phone call from the Recent Events list

- 1 Select a category from [Favorite], [Dialed], [Received] or [Missed] on the Phone menu.

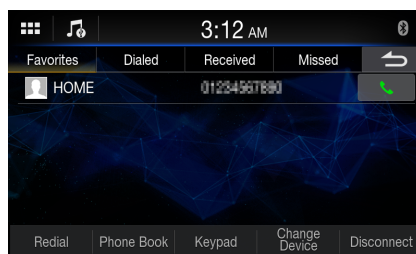


- 2 Touch [📞] of the name or number of the contact which you want to call.

- 3 Touch [Call].  
The phone call is started.

- To use [Favorite], see "Setting contacts as Favorites (Shortcut Dialing)" (page 38).

#### Calling from the Phone Book


- 1 Touch [Phone Book] on the Phone menu.  
The Phone Book screen appears.

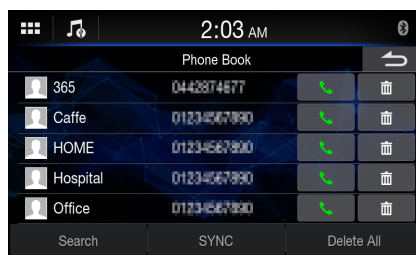

- 2 Touch [📞] of the name or number of the contact which you want to call.  
The phone call is started.

#### Entering a Phone Number to Make a Call

- 1 Touch [Keypad] on the Phone menu.  
The number input screen (Keypad) appears.

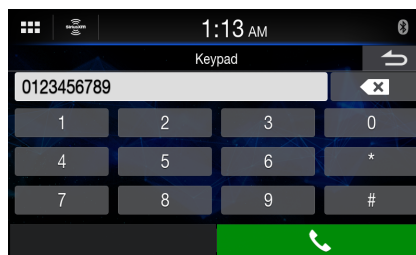

Touch [X] to delete an entered number.

- 2 Enter the phone number you wish to call.
  - You can enter up to 21 digits.

### 3 Touch [📞] (Call).

A confirmation message of the phone number appears.

### 4 Touch [Call].

The phone call is started.

#### Calling in Private

When using the Private Call setting, the conversation is not output through the speaker.

#### Touch [🔇] during the call.

- To change the Bluetooth device, touch [Change Device] to display the Bluetooth Setup screen. See “Connection (Bluetooth) Setup” (page 16).

## Using Voice Recognition function

You can use Siri function of your iPhone or make a telephone call by using voice operation of your smartphone.


- When using Apple CarPlay or Android Auto, the operation screen may differ from the screen design in the Owner’s Manual.

### Using Siri

You can use the Siri function of your iPhone. To use this function, set the Siri setting of your iPhone to ON.

- Connect your iPhone to the unit via Bluetooth, then set to “Hands-free” (page 17).
- The available functions differ depending on the connected iPhone.
- Ask Siri to play a track from the music library applies only to USB source.
- Siri and other streaming services are enabled by connecting to compatible smartphones that are able to receive data. Please ensure that cellular data and/or Wi-Fi is turned on in the smartphone to enjoy these features.
- Extensive use of Siri or other streaming services may increase your phone’s data usage. Please check with your phone company to ensure you have an appropriate Data plan.

### 1 Touch [📞] button.

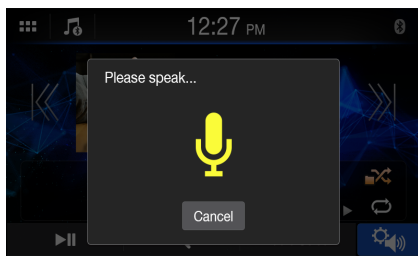

The Voice Recognition mode screen is displayed.

### 2 Speak into the microphone supplied with this unit.

### 3 To finish the Voice Control mode, touch [Cancel].


- Depending on the iPhone, the Siri function may finish automatically.
- For adjusting the volume, see “Adjusting the Speech Volume” (page 37).

## Voice Dial Function

You can make a telephone call by using voice operation.

- Connect your smartphone to the unit via Bluetooth, then set to “Hands-free” (page 17).

### 1 Touch [📞] button.

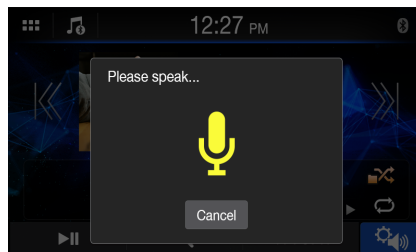

The Voice Dial mode screen is activated.


### 2 Say the telephone number\* or name\* you want to call, into the microphone.

\* The number and name depend on the voice dial information stored in the smartphone.

### 3 To finish the Voice Dial mode, touch [Cancel].

- You can perform this operation only when a voice dial compatible smartphone is connected.
- The Voice Dial function performance depends on the recognition range of the smartphone and mounting location of the microphone. Note when the microphone is mounted.
- Voice dial operation depends on the function being available on the smartphone. For details, refer to the owner’s manual of the smartphone.
- Depending on the smartphone, the Voice Dial operation may finish automatically.
- For adjusting the volume, see “Adjusting the Speech Volume” (page 37).

## Phone Operation Screen

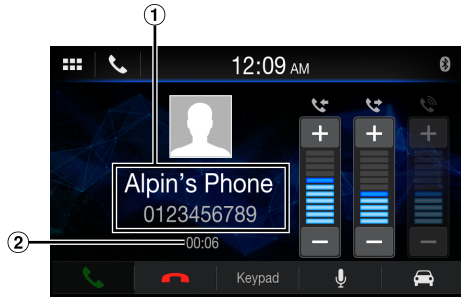

- 1 Name and phone number
  - If it is registered with a Group, the Group Name is also displayed. Although, depending on the connected mobile phone, it may not be displayed.
- 2 Conversation time

### Adjusting the Speech Volume

You can adjust Caller Level and Microphone Level.

Touch [–] or [+] of “Speaker Volume (🔊)” or “Mic Level (🔊)”.

You can adjust the volume in 11 levels.

### Changing the Voice Output

The voice output for calls is switchable between car speakers and the mobile phone speaker.

Touch [📞] or [🚗].

- Depending on the mobile phone, this operation may not be possible.

### Muting the Microphone

Touch [🔇].

- To cancel MUTE mode, touch [🔊].

### DTMF (Touch-Tone) Function

Transmits a DTMF (Touch-Tone) during a call.

**1 Touch [Keypad].**


The number input screen (Keypad) appears.

**2 Input number.**

- You can transmit a Touch-Tone signal during a call.

## Phone Book Function

### Phone Book screen example

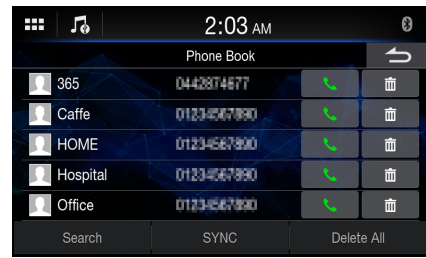

### Searching in the Phone Book

You can make a call using the phone book search function.

**1 Touch [Search] on the Phone Book screen.**  
The Input User Name screen (Keypad) is displayed.

**2 Input the string of letters of the name that you want to search, then touch [OK].**  
A list of names beginning with the string of letters you entered is displayed.

**3 Touch [📞] of the name or number of the contact which you want to call.**  
The phone call is started.

- If there are fewer than five registered items in the phone book, you cannot use the phone book search function.

### Synchronizing the Phone Book

You can synchronize the system's phone book with the mobile phone's phone book.

**1 Touch [SYNC] on the Phone Book screen.**  
The confirmation screen is displayed.

**2 Touch [Yes].**  
Synchronization of the phone books starts.

- You can store up to 1,000 registered name in the phone book.
- You can store up to 5 phone numbers by one person's name.

## Deleting the Phone Book Entries

### Deleting One Entry from the Phone Book

Touch [ ] of the contact name (or phone number) you want to delete.

The selected number is deleted.

### Deleting All Entries from the Phone Book


**1** Touch [Delete All] on the Phone Book screen.  
The confirmation screen is displayed.

**2** Touch [Yes].  
All entries of the phone book are deleted.

## Setting contacts as Favorites (Shortcut Dialing)

You can set contacts from the Phone Book, Dialed, Received, and Missed list as favorites.

**1** Touch the name or phone number on the list.  
**2** Touch [★] of "Favorites."

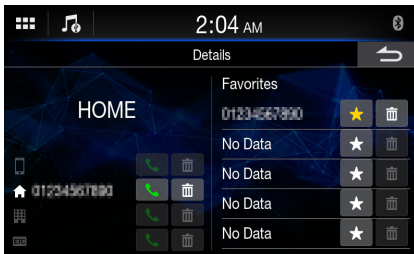

The phone number is set as a Favorite.

- Up to 5 contacts can be set as Favorites.
- If [★] has already been set with a number, touching it overwrites the number.
- To delete a contact from the Favorites list, touch [ ].

## Bluetooth Audio

If a Bluetooth compatible mobile phone, portable player, etc. is connected by wireless, you can play back a song (operation is controllable from the unit).

- Operation may vary, depending on the Bluetooth compatible device.

### Bluetooth Audio main screen example



- 1 Information display
- 2 Finds the beginning of next chapter/Fast-forwards when touched for at least 1 second
- 3 Shuffle mode
- 4 Repeat mode
- 5 Displays the Sound Setup Menu screen (page 19).
- 6 Switches to the USB Flash drive or iPod mode of iPhone.
- 7 Disconnects the Bluetooth device
- 8 Changes the Bluetooth device.
- 9 Pause and Play
- 10 Elapsed time/Total time for playing
- 11 Current track number/Total track number
- 12 Finds the beginning of the current file/Finds a previous file within one second after playback starts/Fast-reverses when touched for at least 1 second

- The displayed onscreen buttons may differ depending on the AVRCP version.
- Song title/Artist title/Album title/Elapsed time do not display for AVRCP Ver. 1.0.
- To play back audio, a mobile phone or a portable player conforming to A2DP (Advanced Audio Distribution Profile) or AVRCP (Audio/Video Remote Control Profile) is required.  
Not all functions work with all devices.
- During a call, sound on the Bluetooth audio source is paused.

### Compatible AVRCP versions: 1.0, 1.3, 1.4, 1.5

- Available functions may differ depending on the AVRCP version.

---

## Playback

---

### 1 Touch the (HOME) button and select **Bluetooth Audio mode**.


The display shows the Bluetooth Audio mode screen.

### 2 Touch [] or [] to select the desired track (file).

**Returning to the beginning of the current file:**

Touch [].

 
**Fast backward the current file:**

Touch and hold [].

**Advance to the beginning of the next file:**

Touch [].

**Fast forward the current file:**

Touch and hold [].

### 3 To pause playback, touch [].

- When selecting a [Audio] widget on the HOME screen, touch [Audio Select] to select [BT]. If [BT] is already selected, you can start playback by selecting a [Audio] widget on the HOME screen.


---


## Repeat Play


---

Available for AVRCP Ver. 1.4 and 1.5 only.

Touch [] repeatedly to select **Repeat Play mode**.

File : Only the track currently playing is repeatedly played back.

ALL : Once all of the songs have finished playing, play back is repeated, starting with the first song.

Off : Repeat mode is Off.

- Operations may differ depending on the connected Bluetooth compatible device.


---

## Shuffle Play

---

Available for AVRCP Ver. 1.4 and 1.5 only.

Touch [] to select **Shuffle Play mode**.

ALL : All songs in the Bluetooth compatible devices are played back in random sequence. Any one song does not play back again until all songs have been played back.

Off : Shuffle mode is Off.

- Operations may differ depending on the connected Bluetooth compatible device.

---

## Connecting a Bluetooth Device

---

Registering a Bluetooth device in the unit enables automatic connection. If it does not connect automatically, run through the connection procedure again.

**Touch [Reconnect] on the Bluetooth Audio screen.**

The Bluetooth connection will start.

### Disconnecting the Bluetooth Connection

**Touch [Disconnect] on the Bluetooth Audio screen.**

The Bluetooth connection is disconnected.

### Switching the connecting Bluetooth Device

If multiple Bluetooth devices are registered in this device, you can change the connection among the registered devices.

### 1 Touch [Change Device] on the Bluetooth Audio screen.

### 2 Touch the device name.

The connection will transfer to the selected device.

# Camera Operation (Optional)

When an optional camera is connected, the view video of camera can be output to the monitor.

## Rear camera:

If a rear camera is connected, when the vehicle is reversed, the rear camera view (guide marks for vehicle width and available distance) is displayed automatically on the screen of this unit.

**You can adjust the quality of the camera image.**

**Setting items: Brightness / Color / Contrast**


**See "Camera Picture Quality Setup" (page 18).**

## Camera Operation

### Displaying the Camera Image from the HOME screen

#### 1 Touch the (HOME) button.


The HOME screen is displayed.

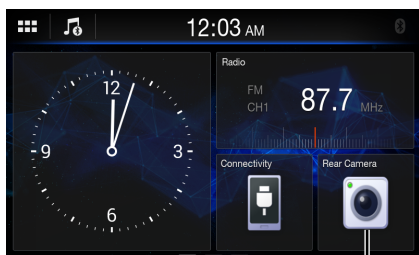

[Rear Camera] button

- If [Camera Select] is set to [Off] (page 17), the [Rear Camera] button cannot be selected.

#### 2 Touch [Rear Camera].


- Touch [] to return to the main source screen or previous screen.
- You can perform a Guide Adjustment for the rear view image. For details, see "About the Rear Camera Guide" (page 40).

### Displaying the rear view video while the car is in reverse

#### 1 Shift the gear lever to the reverse (R) position.

The rear view image is displayed while the car remains in reverse.
 
#### 2 If you shift the gear lever to a position other than reverse (R), the monitor returns to the previous screen.


- Never depend solely on the camera when backing up. Always turn and look and only use the camera for additional assistance.
- This function is effective when the reverse wire is properly connected.
- Touch [] to return to the main source screen or previous screen.
- You can perform a Guide Adjustment for the rear view image. For details, see "About the Rear Camera Guide" (page 40).

## About the Rear Camera Guide

To display the guide, set "Turning the Rear Camera Guide On/Off" (page 18) to On. Also, to adjust the guide, see "Rear Camera Guide Settings" (page 18).

### ■ Indication mark meaning

When the car is put into reverse gear, the monitor switches to the rear view camera image. Guides appear to help visualize the car's width and distance from the rear bumper.

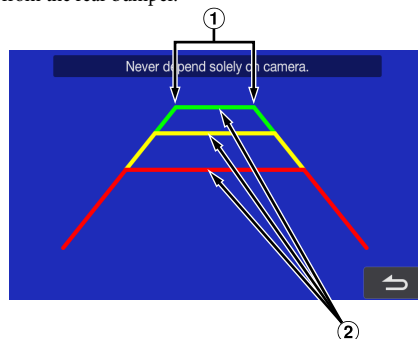

#### ① Car width extension lines (red, yellow and green in order of distance)

If properly calibrated, the marks indicate the car's width. This helps guide the car's path when backing up in a straight line.

The marks represent the distance from the rear of the car (from the rear end of the bumper).

- The marks do not move in synchronization with the steering wheel.
- Set the marks to suit the car's width.

#### ② Distance guidance lines

The marks represent the distance from the rear of the car (from the rear end of the bumper).

- The marks do not move in synchronization with the steering wheel.
- We recommend that you measure the actual distance to the marks when parked on a level surface.

- Depending on the condition of the car or road surface, the range of vision may vary.
- The camera has a limited range of vision. Objects at extreme angles to the camera (e.g. under the bumper or at opposite ends of the bumper) may not be in its field-of-vision.
- The rear camera image may have a tint which is different from the actual surroundings.
- Depending on the car, the guidance may deviate to the right or left. This is not a malfunction.




## Distance guidance mark


The distance guides represent the ground level distance from the rear bumper. It is difficult to accurately estimate the distance to objects above ground level.

In the following example, the distance to A is 0.5 m and the distance to B is 1 m.

<Screen>

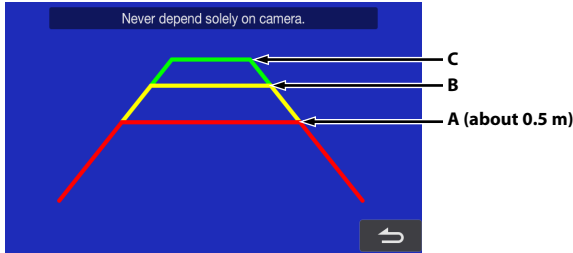

<Positions of A, B and C>

 

In the screen, according to the distance guidance marks, the truck seems to be parked about 1 m away (at the position B). In actual fact, however, if you reversed to position A, you would collide with the truck.

In the screen, positions A, B and C seem to be located in order of proximity. However, in actual fact, the position A and C are the same distance, and B is farther away than positions A and C.


- The car width extension mark represents the distance to the road surface. The distance to an object on the road is not accurately represented by the guides.

### Error between the screen and the actual road surface

In the following conditions, errors are produced between the screen guidance and the actual road surface. (The illustrations represent a case when the camera is installed in the standard position.)


#### When there is a steep upward slope behind the car (example)

<Screen>

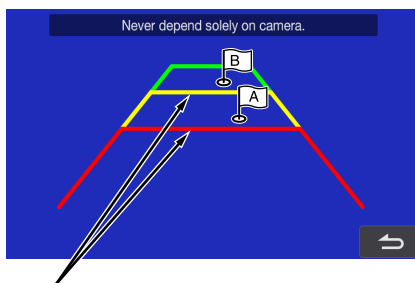

Distance guidance marks


<Situation of the car>

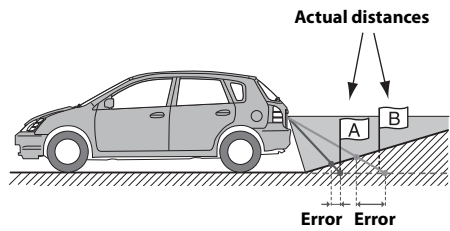


The distance guidance mark represents the distance to a flat road surface. Therefore in the case of an upward slope behind the car, the distance guides are displayed closer to the rear bumper than the actual distance. For example, if there is an obstacle on the upward slope, it may appear farther away than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

#### When there is a steep downward slope behind the car (example)

<Screen>

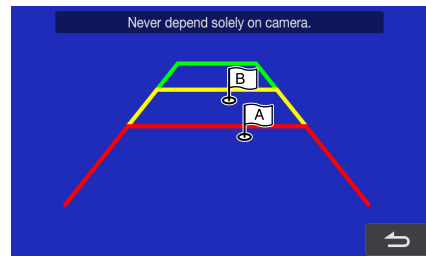

<Situation of the car>

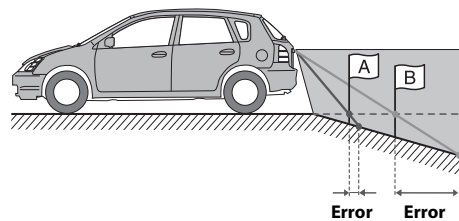

In the case of a downward slope behind the car, the distance guides are displayed farther from the rear bumper than the actual distance. If there is an obstacle on the downward slope, it seems closer than its actual position. Also, an error may occur between the guidance and the actual path of the car on the road surface.

# Information

## Product Software Update

This product use software that can be updated through a USB flash drive. Download the software from the Alpine website and update the product using the USB flash drive.

### Updating this product

Check the Alpine website for details on updating.

<http://www.alpine-usa.com>

### Important information on the software

#### About the software license of the product

The software installed in the product contains open-source software. For details, refer to the "Open source licenses" screen on this unit. See "Displaying Warranty/Copyright Information" (page 15).

## About the Supported Formats

### About MP3/WMA/AAC/FLAC/WAV

#### CAUTION

**Except for private use, duplicating audio data (including MP3/WMA/AAC/FLAC/WAV data) or distributing, transferring, or copying it, whether for free or for a fee, without permission of the copyright holder is strictly prohibited by the Copyright Act and by international treaty.**

#### What is MP3?

MP3, whose official name is "MPEG Audio Layer 3," is a compression standard prescribed by the ISO, the International Standardization Organization and MPEG which is a joint activity institution of the IEC.

MP3 files contain compressed audio data. MP3 encoding is capable of compressing audio data at extremely high ratios, reducing the size of music files to as much as one-tenth their original size. This is achieved while still maintaining near CD quality. The MP3 format realizes such high compression ratios by eliminating the sounds that are either inaudible to the human ear or masked by other sounds.

#### What is WMA?

WMA, or "Windows Media™ Audio," is compressed audio data. WMA is similar to MP3 audio data.

#### What is AAC?

AAC is the abbreviation for "Advanced Audio Coding," and is a basic format of audio compression used by MPEG2 or MPEG4.

#### What is FLAC?

FLAC (Free Lossless Audio Codec) is an audio file codec for lossless compression, developed and offered as open source software. Codecs with lossy compression forms, such as MP3 and AAC, reduce part of the data to improve compression efficiency. However, FLAC can reconstruct compressed data to be an identical copy of the original data by performing lossless compression. The compression ratio of FLAC is about 50%.

### Method for creating MP3/WMA/AAC/FLAC/WAV (USB Flash drive) files

Audio data is compressed using software with MP3/WMA/AAC/FLAC/WAV (USB Flash drive) codecs. For details on creating MP3/WMA/AAC/FLAC/WAV (USB Flash drive) files, refer to the user's manual for that software.

MP3/WMA/AAC/FLAC/WAV (USB Flash drive) files that are playable on this device have the file extensions.

MP3: "mp3"

WMA: "wma"

AAC: "m4a"

FLAC: "flac"/"fla"

WAV: "wav"

WMA is not supported for the following files, Windows Media Audio Professional, Windows Media Audio 10 std or Windows Media Audio 10 Pro Lossless.

There are many different versions of the AAC format. Confirm that the software being used conforms to the acceptable formats listed above. It's possible that the format may be unplayable even though the extension is valid.

Playback of AAC files encoded by iTunes is supported.

### Supported playback sampling rates and bit rates

MP3 (USB Flash drive)

Sampling rates: 8 kHz, 11.025 kHz, 12 kHz, 16 kHz, 22.05 kHz, 24 kHz, 32 kHz, 44.1 kHz, 48 kHz

Bit rates: 8 - 320 kbps

WMA (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 8 - 384 kbps

AAC (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 8 - 384 kbps

FLAC (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 8 - 384 kbps

WAV (USB Flash drive)

Sampling rates: 8 - 48 kHz

Bit rates: 64 - 1,536 kbps

This device may not play back correctly depending on sampling rates.

### ID3 tags/WMA tags

This device supports ID3 tag v1.0, v1.1, v2.2, v2.3, v2.4, and WMA tag Ver.1.x. If tag data is in an MP3/WMA/AAC file, this device can display the title (track title), artist name, and album name ID3 tag/WMA tag data.

For non-supported characters, "?" is displayed.

The number of characters may be limited, or not correctly displayed, depending on the tag information.

### Playing back MP3/WMA/AAC/FLAC/WAV

MP3/WMA/AAC files are prepared, then written to a USB flash drive.

- Maximum numbers of playable files/folders  
USB Flash drive: 10,000 files/folders (including Root Folder)
- Largest playable file size: 512 MB

Playback may not be performed if a disc exceeds the limitations described above.

If a file/folder name is long, the maximum possible number of files may decrease.

- Both Audio and Video files are counted if their formats are playable on this unit.

### Media supported

The media that this device can play back a USB flash drive.

## Corresponding File Systems


This device supports FAT 16/32.

The maximum nested folder depth is 8 (including the root directory). File names are limited to 256 characters (including the extension).

Valid characters for folder/file names are letters A-Z (all caps), numbers 0-9, and '\_' (underscore).

## Order of files

Files are played back in the order that the writing software writes them to the disc. Therefore, the playback order may not be what's expected. Verify the writing order in the software's documentation. The playback order of the folders and files is as follows. (The following numbers may differ from actually displayed numbers.)

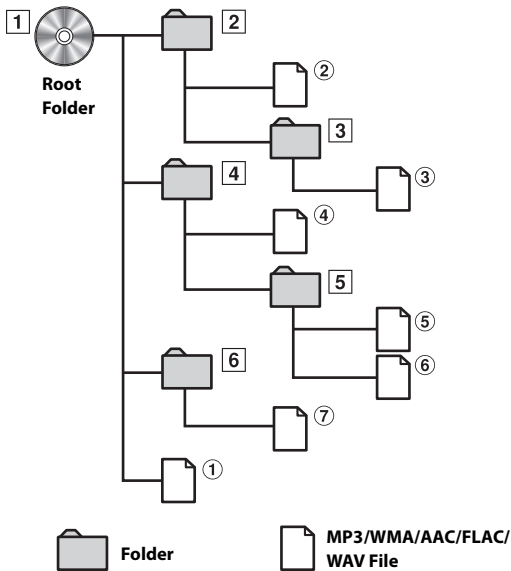

## Terminology

### Bit rate

This is the "sound" compression rate specified for encoding. The higher the bit rate, the higher the sound quality, but also the larger the files.

### Sampling rate

This value shows how many times per second the data is sampled (recorded). For example, music CDs use a sampling rate of 44.1 kHz, so the sound is sampled (recorded) 44,100 times per second. The higher the sampling rate, the higher the sound quality, but also the larger the volume of data.

### Encoding

Converting music CDs, WAVE (AIFF) files, and other sound files into the specified audio compression format.

### Tag

Song information such as track titles, artist names, album names, etc., written into MP3/WMA/AAC/FLAC/WAV (USB flash drive) files.

### Root folder

The root folder (or root directory) is found at the top of the file system. The root folder contains all folders and files. It is created automatically for all burned discs.

## In Case of Difficulty

**If you encounter a problem, please turn the power off, then on again. If the unit is still not functioning normally, please review the items in the following checklist. This guide will help you isolate the problem if the unit is at fault. Otherwise, make sure the rest of your system is properly connected, or then consult your authorized Alpine dealer.**

### Basic

#### No function or display.

- Vehicle's ignition is off.
  - If connected according to the instructions, the unit will not operate with the vehicle's ignition off.
- Improper power lead connections.
  - Check power lead connections.
- Blown fuse.
  - Check the fuse on the battery lead of the unit; replace with the proper value if necessary.
- Internal micro-computer malfunctioned due to interference noise, etc.
  - Press the RESET switch with a ballpoint pen or other pointed article.

#### No sound or unnatural sound.

- Incorrect setting of volume/balance/fader controls.
  - Readjust the controls.
- Connections are not properly or securely made.
  - Check the connections and firmly connect.

#### Screen not displayed.

- Brightness/Contrast control is set at the minimum position.
  - Adjust the Brightness/Contrast control.
- Temperature in the vehicle is too low.
  - Increase the vehicle's interior temperature to operation temperature range.
- Connections to the Auxiliary Device are not securely made.
  - Check the connections and firmly connect.
- The Parking Brake Lead is not connected.
- The Parking Brake is not engaged.
  - Connect the Parking Brake Lead, then engage the Parking Brake.

#### Movement of displayed picture is abnormal.

- Temperature in the vehicle is too high.
  - Allow the vehicle's interior temperature to cool.

### Radio

#### Unable to receive stations.

- No antenna, or open connection in the antenna cable.
  - Make sure the antenna is properly connected; replace the antenna or cable if necessary.

#### Unable to tune stations in the seek mode.

- You are in a weak signal area.
  - Make sure the tuner is in DX mode.
- If the area you are in is a primary signal area, the antenna may not be grounded and connected properly.
  - Check your antenna connections; make sure the antenna is properly grounded at its mounting location.
- The antenna may not be the proper length.
  - Make sure the antenna is fully extended; if broken, replace the antenna with a new one.

#### Broadcast is noisy.

- The antenna is not the proper length.
  - Extend the antenna fully; replace it if it is broken.
- The antenna is poorly grounded.
  - Make sure the antenna is grounded properly at its mounting location.
- The station signal is weak and noisy.
  - If above solution does not work, tune in another station.

### USB Audio

#### Unit does not operate.

- Condensation.
  - Wait a while (about 1 hour) for the condensation to dry.

#### Picture is unclear or noisy.

- Vehicle's battery power is weak.
  - Check the battery power and wiring.  
(The unit may malfunction if the battery power is under 11 volts with a load applied.)

### Handsfree Phone

#### Ringtone is small

- Depending on your phone, the ringtone volume may be small, it is not a failure.

---

## If this Message Appears

---

Various messages are displayed on the screen during operation. In addition to the messages telling you the current status or providing guidance for the next operation, there are also the following error messages. If one of these error messages is displayed, carefully follow the instructions in the solution column.

### System

#### This operation is prohibited for your safety.

- A setup operation, etc., was carried out while the vehicle was running.
    - Move the vehicle to a safe location, stop, and engage the parking brake, then carry out this operation.
- 

#### Unsupported USB device connected.

- A USB flash drive with a hub is connected.
    - You cannot play back from a USB flash drive with a hub. USB hub connections are also not supported.
- 

### Audio/Visual

#### Unsupported USB device connected.

- An iPhone that is not supported by the unit is connected.
    - Connect an iPhone that is supported by the unit.
  - A USB device that is not supported by the unit is connected.
    - Attempt to connect another USB flash drive.
  - Communication error.
    - Turn the ignition key off, and then set to ON again.
    - Check the display by reconnecting between the iPhone and the unit, using the iPhone cable.
    - Check the display by reconnecting between the USB flash drive and the unit.
  - Caused by the iPod/iPhone Software Version not being compatible with this unit.
    - Update the iPhone Software Version to be compatible with this unit.
  - The iPhone is not verified.
    - Change to another iPhone.
- 

#### No Song

- There are no data in the iPhone.
    - Download data to the iPhone and connect to the unit.
- 

#### No File

- There are no data in the USB flash drive.
    - Download data to the USB flash drive and connect to this unit.
- 

#### File format not supported.

- A copy-protected WMA file has been detected.
    - You can only play back non-copy-protected files.
  - A sampling rate/bit rate not supported by the unit is used.
    - Use a sampling rate/bit rate supported by the unit.
- 

### Bluetooth

#### No Bluetooth

- The Bluetooth audio device was not connected correctly.
    - Check the settings for the unit and the Bluetooth audio device and reconnect.
- 

### SiriusXM

#### Check Tuner

- The SiriusXM Tuner is disconnected or the unit is having trouble communicating with the Tuner.
    - Connect the Tuner or check the Tuner connection to the back of the unit.
- 

#### Check Antenna

- The SiriusXM Satellite Radio antenna or cable is either damaged or not connected correctly to the SiriusXM Tuner.
    - Check that the SiriusXM antenna cable is connected to the SiriusXM Tuner and check that the antenna cable is not kinked or otherwise damaged. Replace the antenna if necessary.
    - SiriusXM products are available at your local car audio retailer or online at [www.shop.siriusxm.com](http://www.shop.siriusxm.com).
- 

#### No Signal

- The SiriusXM satellite signal is too weak at the current location.
    - Move the vehicle to a location with a clear view of the southern sky.
    - Make sure the Satellite Radio antenna is properly mounted and not obstructed by metal objects.
- 

#### Channel Not Subscribed

##### Call SiriusXM to Subscribe

- The active channel has become unsubscribed or the requested channel is not available in your subscription package.
    - In the U.S.A., visit [www.siriusxm.com](http://www.siriusxm.com) or call 1-866-635-2349 if you have questions about your subscription package or would like to subscribe to this channel. In Canada, visit [www.siriusxm.ca](http://www.siriusxm.ca) or call 1-877-438-9677.
    - The unit will revert to the previously selected channel or to channel 1 automatically.
- 

#### Channel <xxx> Not Available

- The active channel is no longer in the SiriusXM channel lineup or the user has entered an invalid channel number.
    - Visit [www.siriusxm.com](http://www.siriusxm.com) for information on the current channel lineup.
  - The unit will revert to the previous channel or to channel 1 automatically.
- 

#### Subscription Updated

##### Press Any Key to Continue

- Your subscription has been updated.
    - Touch [OK] to clear this message.
- 

#### Channel <xxx> Locked

- A locked channel is selected.
    - Input the passcode on the number keypad screen, see "Parental Lock Function" (page 33). If wrong passcode is entered, "Incorrect Pass Code entered" will be displayed and the unit will revert to the previous channel.
-

## Specifications

### MONITOR SECTION

Screen Size	11" (iLX-F411) 9" (iLX-F409)
LCD Type	Transparent type TN LCD
Operation System	TFT active matrix
Number of Picture Elements	1,152,000 pcs. (800 × 480 × 3 (RGB))
Effective Number of Picture Elements	99% or more
Illumination System	LED

### FM TUNER SECTION

Tuning Range	87.7 – 107.9 MHz
Mono Usable Sensitivity	9.3 dBf (0.8 $\mu$ V/75 ohms)
50 dB Quieting Sensitivity	13.5 dBf (1.3 $\mu$ V/75 ohms)
Alternate Channel Selectivity	80 dB
Signal-to-Noise Ratio	65 dB
Stereo Separation	35 dB
Capture Ratio	2.0 dB

### AM TUNER SECTION

Tuning Range	530 – 1,710 kHz
Usable Sensitivity	25.1 $\mu$ V/28 dBf

### USB SECTION

USB requirements	USB 2.0
Max. Power Consumption	1,500 mA (CDP Support)
USB Class	USB (Play From Device)/ USB (Mass Storage Class)
File System	FAT16/32
Number of Channels	2-Channels (Stereo)
Frequency Response*1	5 – 20,000 Hz ( $\pm$ 1 dB)
Total Harmonic Distortion	0.008% (at 1 kHz)
Dynamic Range	95 dB (at 1 kHz)
Signal-to-Noise Ratio	100 dB
Channel Separation	85 dB (at 1 kHz)

\*1 Frequency response may differ depending on the encoder software/bit rate.

### HDMI SECTION

Input Format	720p/480p/VGA
Output Format	1080p/720p/480p

### Bluetooth SECTION

Bluetooth Specification	Bluetooth V4.1
Output Power	+4 dBm Ave. (Power class 2)
Profile	HFP (Hands-Free Profile) PBAP (Phone Book Access Profile) A2DP (Advanced Audio Distribution Profile) AVRCP (Audio/Video Remote Control Profile)

### GENERAL

Power Requirement	14.4 V DC (11–16 V allowable)
Operating temperature	-4°F to +140°F (-20°C to + 60°C)
Power Output	16 W RMS $\times$ 4*2
*2 Primary amplifier ratings per CEA-2006 Standard	
• Power output: measured at 4 Ohms and $\leq$ 1% THD+N	
• S/N: 80 dBA (reference: 1 W into 4 Ohms)	
Weight	3.0 kg (6 lbs. 10 oz) (iLX-F411) 2.4 kg (5 lbs. 5 oz) (iLX-F409)
Audio output level	
Preout (Front, Rear):	4V/10k ohms (max.)
Preout (Subwoofer):	4V/10k ohms (max.)

### CHASSIS SIZE

Width	178 mm (7")
Height	50 mm (2")
Depth	160 mm (6-5/16")

- Due to continuous product improvement, specifications and design are subject to change without notice.
- The LCD panel is manufactured using an extremely high precision manufacturing technology. Its effective pixel ratio is over 99.99%. This means that there is a possibility that 0.01% of the pixels could be either always ON or OFF.



## LIMITED WARRANTY

ALPINE ELECTRONICS OF AMERICA, INC. ("Alpine"), is dedicated to quality craftsmanship and is pleased to offer this Warranty. We suggest that you read it thoroughly. Should you have any questions, please contact your Dealer or contact Alpine at one of the telephone numbers listed below.

### ● PRODUCTS COVERED:

This Warranty covers Car Audio Products and Related Accessories ("the product"). Products purchased in the Canada are covered only in the Canada. Products purchased in the U.S.A. are covered only in the U.S.A.

### ● LENGTH OF WARRANTY:

This Warranty is in effect for one year from the date of the first consumer purchase.

### ● WHO IS COVERED:

This Warranty only covers the original purchaser of the product, who must reside in the United States, Puerto Rico or Canada.

### ● WHAT IS COVERED:

This Warranty covers defects in materials or workmanship (parts and labor) in the product.

### ● WHAT IS NOT COVERED:

This Warranty does not cover the following:

- ① Damage occurring during shipment of the product to Alpine for repair (claims must be presented to the carrier).
- ② Damage caused by accident or abuse, including burned voice coils caused by over-driving the speaker (amplifier level is turned up and driven into distortion or clipping). Speaker mechanical failure (e.g. punctures, tears or rips). Cracked or damaged LCD panels. Dropped or damaged hard drives.
- ③ Damage caused by negligence, misuse, improper operation or failure to follow instructions contained in the Owner's manual.
- ④ Damage caused by act of God, including without limitation, earthquake, fire, flood, storms or other acts of nature. Any cost or expense related to the removal or reinstallation of the product.
- ⑤ Service performed by an unauthorized person, company or association.
- ⑥ Any product which has the serial number defaced, altered or removed.
- ⑦ Any product which has been adjusted, altered or modified without Alpine's consent.
- ⑧ Any product not distributed by Alpine within the United States, Puerto Rico or Canada.
- ⑨ Any product not purchased from an Authorized Alpine Dealer.

### ● HOW TO OBTAIN WARRANTY SERVICE:

- ① You are responsible for delivery of the product to an Authorized Alpine Service Center or Alpine for repair and for payment of any initial shipping charges. Alpine will, at its option, repair or replace the product with a new or reconditioned product without charge. If the repairs are covered by the warranty, and if the product was shipped to an Authorized Alpine Service Center or Alpine, Alpine will pay the return shipping charges.
- ② You should provide a detailed description of the problem(s) for which service is required.

③ You must supply proof of your purchase of the product.

④ You must package the product securely to avoid damage during shipment. To prevent lost packages it is recommended to use a carrier that provides a tracking service.

### ● HOW WE LIMIT IMPLIED WARRANTIES:

ANY IMPLIED WARRANTIES INCLUDING FITNESS FOR USE AND MERCHANTABILITY ARE LIMITED IN DURATION TO THE PERIOD OF THE EXPRESS WARRANTY SET FORTH ABOVE AND NO PERSON IS AUTHORIZED TO ASSUME FOR ALPINE ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THE PRODUCT.

### ● HOW WE EXCLUDE CERTAIN DAMAGES:

ALPINE EXPRESSLY DISCLAIMS LIABILITY FOR INCIDENTAL AND CONSEQUENTIAL DAMAGES CAUSED BY THE PRODUCT. THE TERM "INCIDENTAL DAMAGES" REFERS TO EXPENSES OF TRANSPORTING THE PRODUCT TO THE ALPINE SERVICE CENTER, LOSS OF THE ORIGINAL PURCHASER'S TIME, LOSS OF THE USE OF THE PRODUCT, BUS FARES, CAR RENTALS OR OTHERS COSTS RELATING TO THE CARE AND CUSTODY OF THE PRODUCT. THE TERM "CONSEQUENTIAL DAMAGES" REFERS TO THE COST OF REPAIRING OR REPLACING OTHER PROPERTY WHICH IS DAMAGED WHEN THIS PRODUCT DOES NOT WORK PROPERLY. THE REMEDIES PROVIDED UNDER THIS WARRANTY ARE EXCLUSIVE AND IN LIEU OF ALL OTHERS.

### ● HOW STATE/PROVINCIAL LAW RELATES TO THE WARRANTY:

This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state and province to province. In addition, some states/provinces do not allow limitations on how long an implied warranty lasts, and some do not allow the exclusion or limitation of incidental or consequential damages. Accordingly, limitations as to these matters contained herein may not apply to you.

### ● IN CANADA ONLY:

This Warranty is not valid unless your Alpine car audio product has been installed in your vehicle by an Authorized Installation Center, and this warranty stamped upon installation by the installation center.

### ● HOW TO CONTACT CUSTOMER SERVICE:

Should the product require service, please call the following number for your nearest Authorized Alpine Service Center.

<b>CAR AUDIO</b>	<b>1-800-ALPINE-1 (1-800-257-4631)</b>
<b>NAVIGATION</b>	<b>1-888-NAV-HELP (1-888-628-4357)</b>

Or visit our website at: <http://www.alpine-usa.com>

**ALPINE ELECTRONICS OF AMERICA, INC.,** 1500 Atlantic Blvd, Auburn Hills, Michigan 48326, U.S.A.

Do not send products to this address.

Call the toll free telephone number or visit the website to locate a service center.

## About the Rules of Bluetooth Electromagnetic Radiation Regulation

<b>USA/Canada</b>	<p><b>FCC/IC CAUTION</b></p> <p>This device complies with Industry Canada's license-exempt RSSs. Operation is subject to the following two conditions:</p> <p>(1) This device may not cause interference; and</p> <p>(2) This device must accept any interference, including interference that may cause undesired operation of the device.</p> <p>Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p>This equipment complies with FCC/IC radiation exposure limits set forth for an uncontrolled environment and meets the FCC radio frequency (RF) Exposure Guidelines and RSS-102 of the IC radio frequency (RF) Exposure rules. This equipment has very low levels of RF energy that it deemed to comply without maximum permissive exposure evaluation (MPE). But it is desirable that it should be installed and operated keeping the radiator at least 20 cm or more away from person's body.</p>
	<p>Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :</p> <p>(1) l'appareil ne doit pas produire de brouillage;</p> <p>(2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.</p> <p>Cet équipement est conforme aux limites d'exposition aux rayonnements énoncées pour un environnement non contrôlé et respecte les règles les radioélectriques (RF) de la FCC lignes directrices d'exposition et d'exposition aux fréquences radioélectriques (RF) CNR-102 de l'IC. Cet équipement émet une énergie RF très faible qui est considérée conforme sans évaluation de l'exposition maximale autorisée (MPE). Cependant, il est souhaitable qu'il devrait être installé et utilisé en gardant une distance de 20 cm ou plus entre le radiateur et le corps humain.</p>

Don't forget to take a moment to protect your purchase by registering your product now at the following address: [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

N'oubliez pas de consacrer un moment à la protection de votre achat en enregistrant votre produit dès maintenant à l'adresse suivante : [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).

Recuerde que con solo unos pocos pasos podrá proteger su producto, registrándolo a través de la siguiente dirección: [www.alpine-usa.com/registration](http://www.alpine-usa.com/registration).