




30" ELECTRIC FREESTANDING STANDARD CLEAN RANGE

MODELS:

WFC150M0EB4 (Black)

WFC150M0EW4 (White)


COOKTOP PARTS

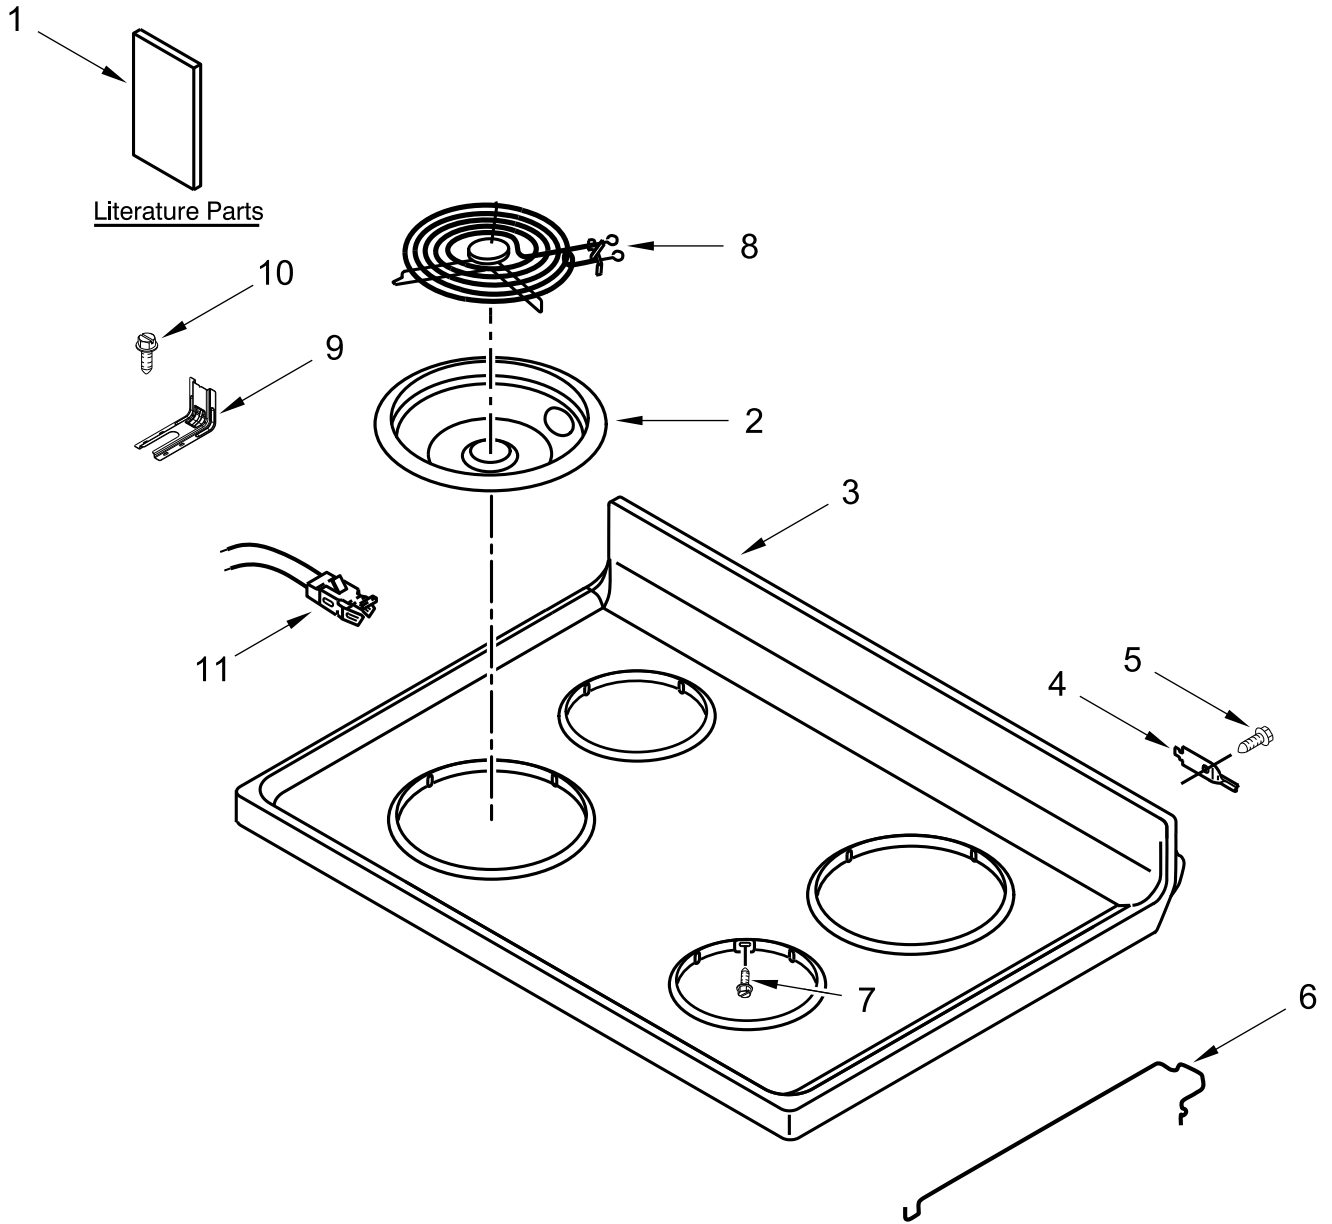

COOKTOP PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1		Literature Parts	5	3196178	Screw	11	814399	Receptacle, Element
	W11235900	Owner's Manual	6	3195812	Rod, Support			FOLLOWING PARTS NOT ILLUSTRATED
	W11047681	Instructions, Installation	7	3196154	Screw			
	W11245179	Wiring Diagram	8	W11364018	Element, Coil Heating (1500W)	W11134593		Harness, Main
2	W10196406	Bowl, Drip (6") (Right Front and Left Rear)			(Right Front and Left Rear)	W11134595		Harness, Cooktop
	W10196405	Bowl, Drip (8") (Left Front and Right Rear)		W11364019	Element, Coil Heating (2400W)	W11232223		Harness, Door Switch Sensor
					(Left Front and Right Rear)	W10281322		Kit, Bare Wire Adapter Block
3		Cooktop	9	W10306542	Bracket, Anti-Tip			
	3186233	Black	10	7101P485-60	Screw, Anti-Tip Kit			
	3186231	White						
4	3195060	Hinge, Cooktop						


CONTROL PANEL PARTS

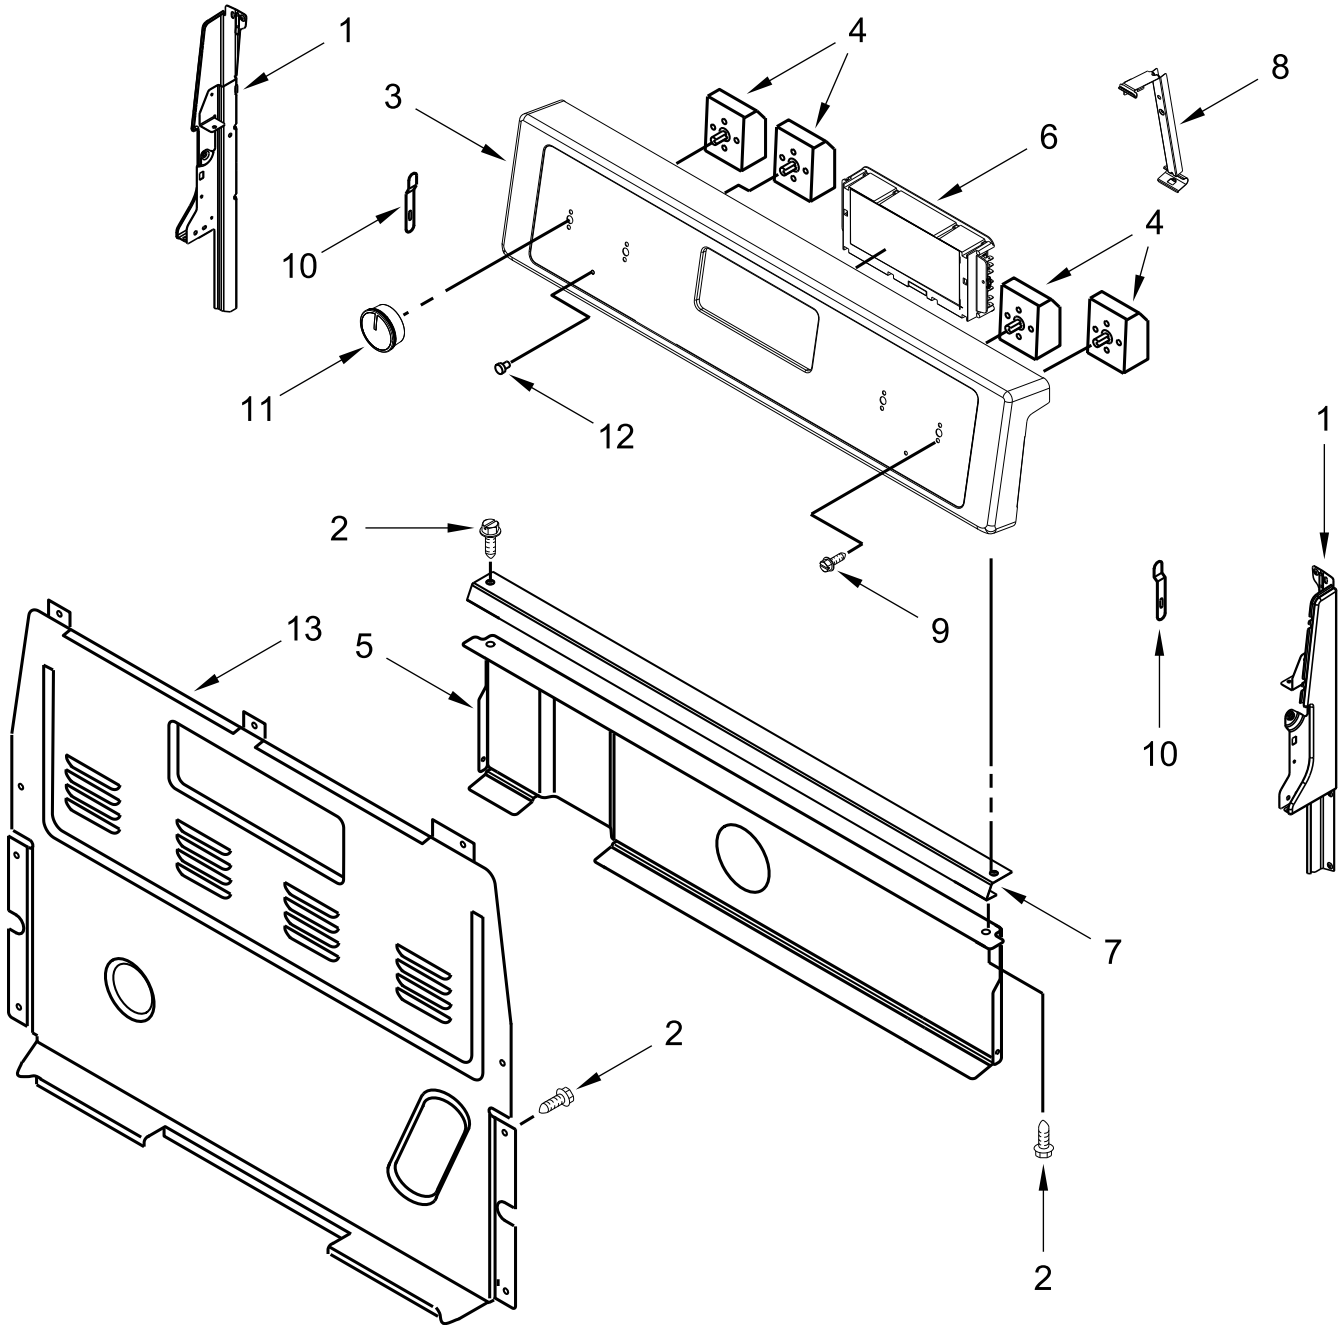

CONTROL PANEL PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1		Endcap	4	3148953	Switch, Infinite (Green)	7	W10525121	Bracket, Console Mounting
	W11130372	Black (Left)			(Left Front, Right Rear)	8	W10695491	Bracket, Control
	W11130379	Black (Right)				9	3400882	Screw
	W11130371	White (Left)		3148951	Switch, Infinite	10	3196200	Clip, Spring
	W11130378	White (Right)			(Left Rear, Right Front)	11		Knob
2	3196178	Screw	5	W10134247	Shield, Heat		W10676213	Black
3		Panel, Console	6		Control, Electric		W10676214	White
	W11135505	Black		W10887901	Black	12	3196068	Lens, Indicator
	W11135506	White		W10887899	White	13	8272473	Cover, Upper Rear


CHASSIS PARTS

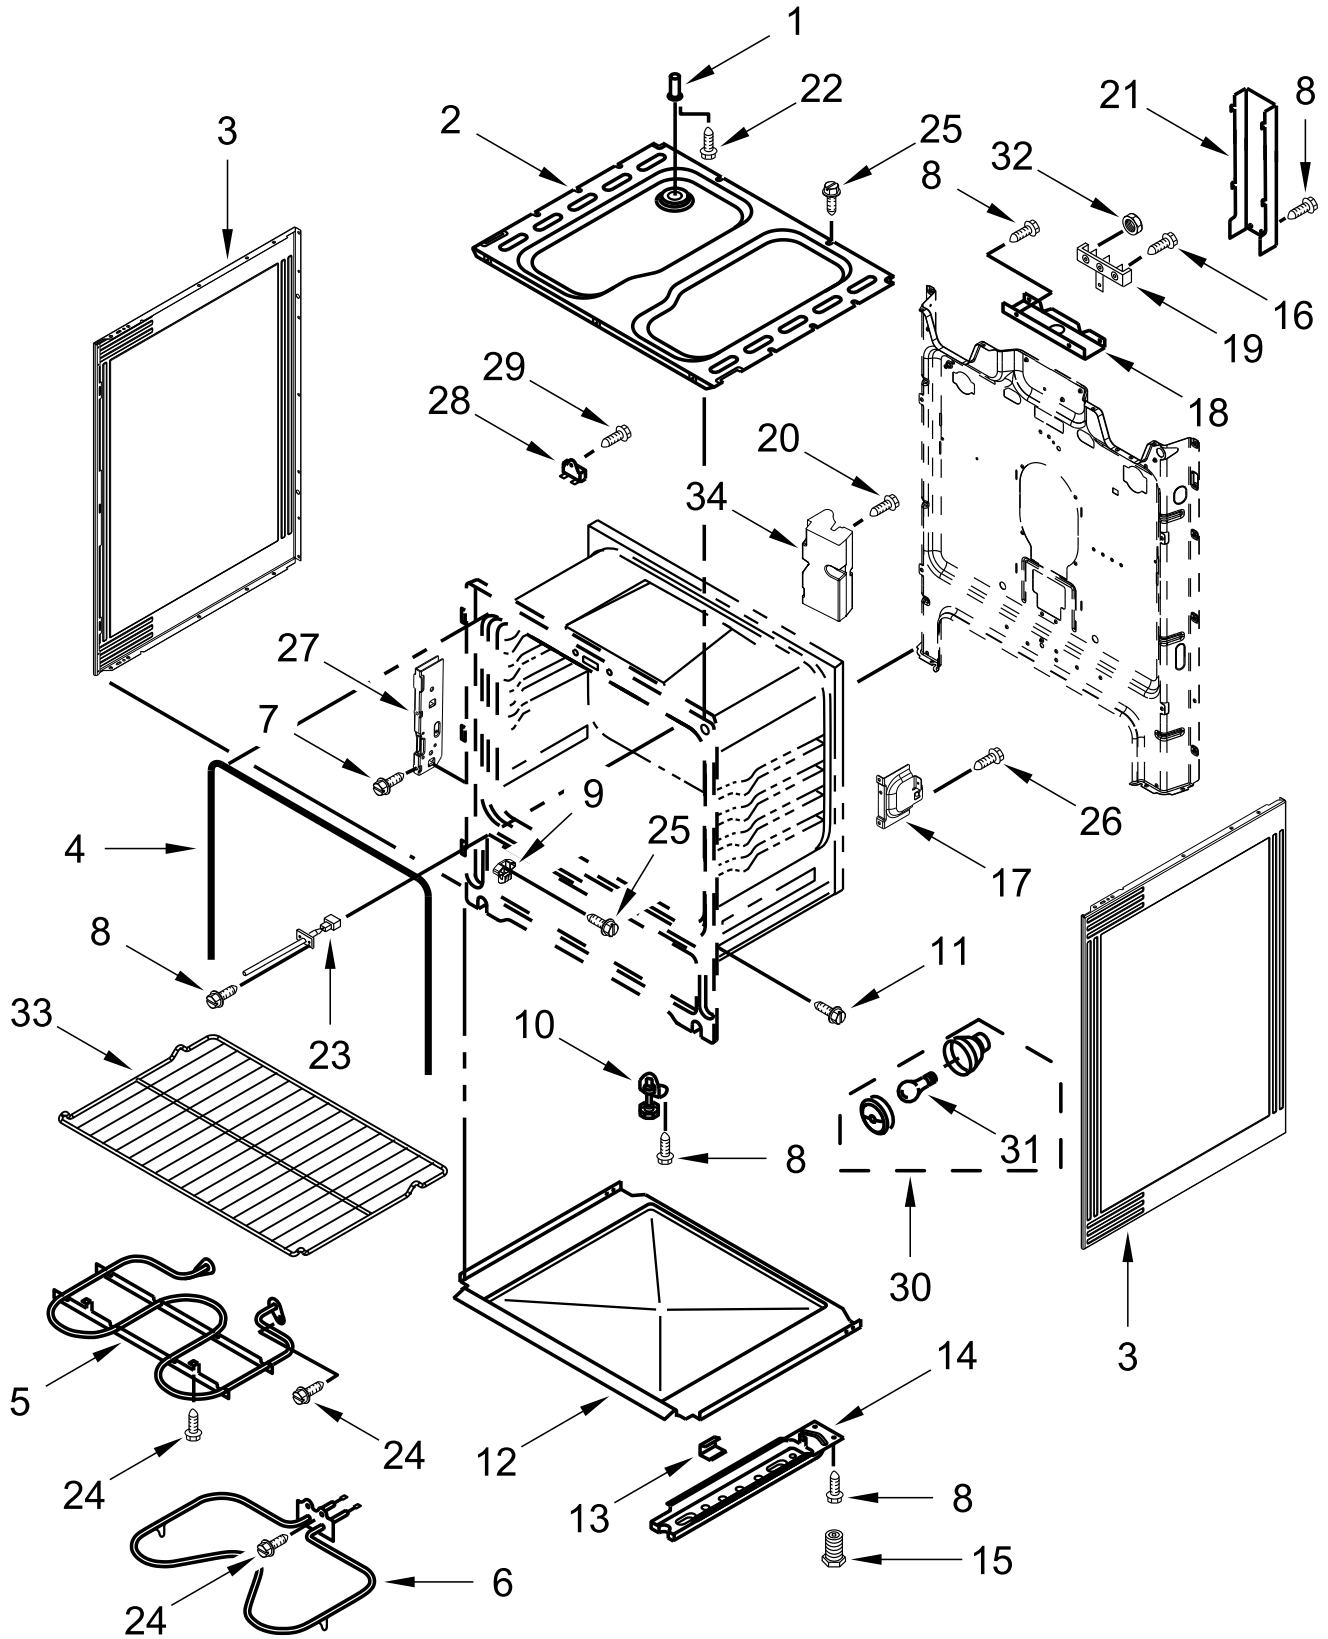

CHASSIS PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>	<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W11222267	Tube, Vent	14	W10390008	Assembly, Base Rail (Left)	26	3196169	Screw
2	W10209613	Box, Burner				27	W10289077	Receiver, Hinge
3		Panel, Side		W10390007	Assembly, Base Rail (Right)	28	3196548	Fuse, Thermal
	W10162245	Black				29	3196172	Screw
	W10575396	White	15	W10058460	Foot, Leveling	30	W11175594	Assembly, Light
4	W10129032	Seal, Door	16	3400016	Screw	31	W10571723	Bulb, Halogen 40 Watts
5	W10308476	Element, Broil	17	W10404688	Clip, Oven Support			
6	W11022836	Element, Bake	18	3186034	Bracket, Service	32	7103P027-60	Nut
7	W10031780	Screw	19	W10245259	Block, Terminal	33	W10268578	Rack, Oven
8	3196178	Screw	20	W11034869	Screw	34	W10910404	Counterweight
9	W10674705	Glide, Drawer Front	21	W10326122	Cover, Terminal Block			FOLLOWING PARTS NOT ILLUSTRATED
10	W10341186	Assembly, Front Foot	22	3196567	Screw		8273263	Insulation, Wrap
11	W10067840	Screw	23	W10181986	Sensor, Oven		8272611	Insulation, Back
12	8054068	Retainer, Insulation	24	3196174	Screw			
13	W10137382	Clip, Panel	25	3196165	Screw			

DOOR PARTS

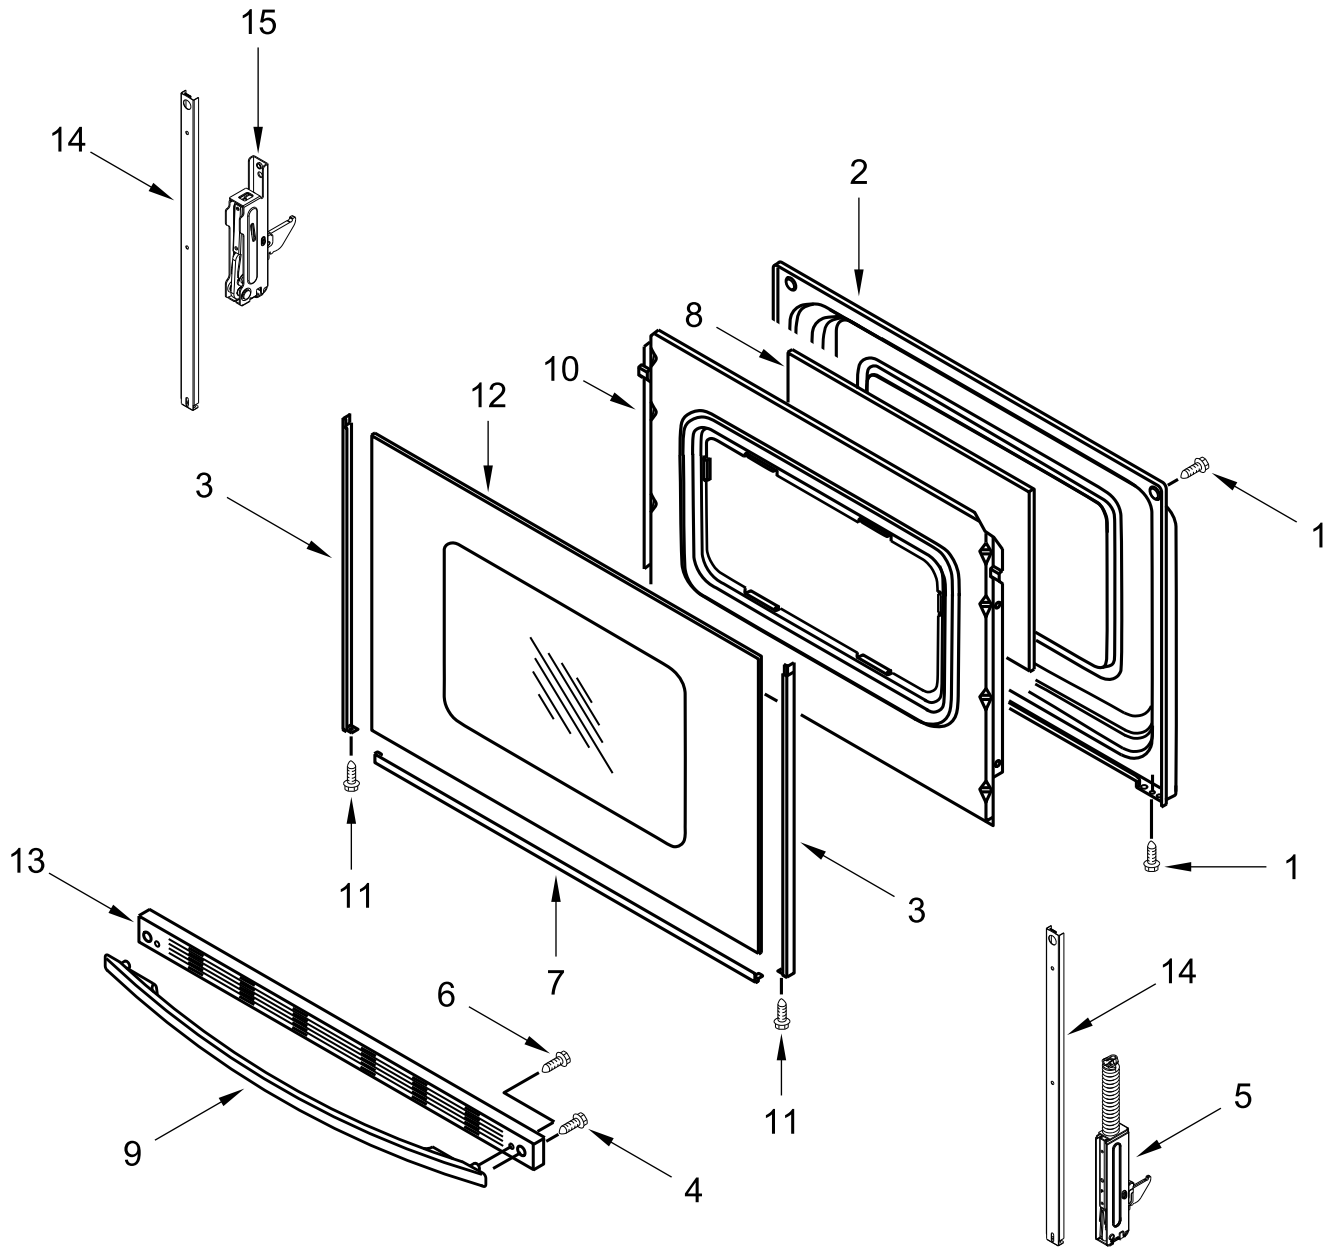


DOOR PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
1	W10031790	Screw
2	9761344	Liner, Door
3		Trim, Door
	W10746436	Black (Left)
	W10746435	Black (Right)
	8523172	White (Left)
	8523166	White (Right)
4	W10200660	Screw
5	W10299225	Hinge, Active

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
6	W10465148	Screw
7		Trim, Lower Door
	8523177	Black
	8523175	White
8	W10620754	Glass, Inner
9		Handle, Oven Door
	W10300490	Black
	W10300489	White
10	9761505	Retainer, Insulation

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
11	W10327235	Screw
12		Glass, Window
	W10409946	Black
	W10409945	White
13		Trim, Oven Door Vent
	W10310922	Black
	W10310920	White
14	W10544179	Strap, Door
15	W10299227	Hinge, Door (Passive)

DRAWER PARTS

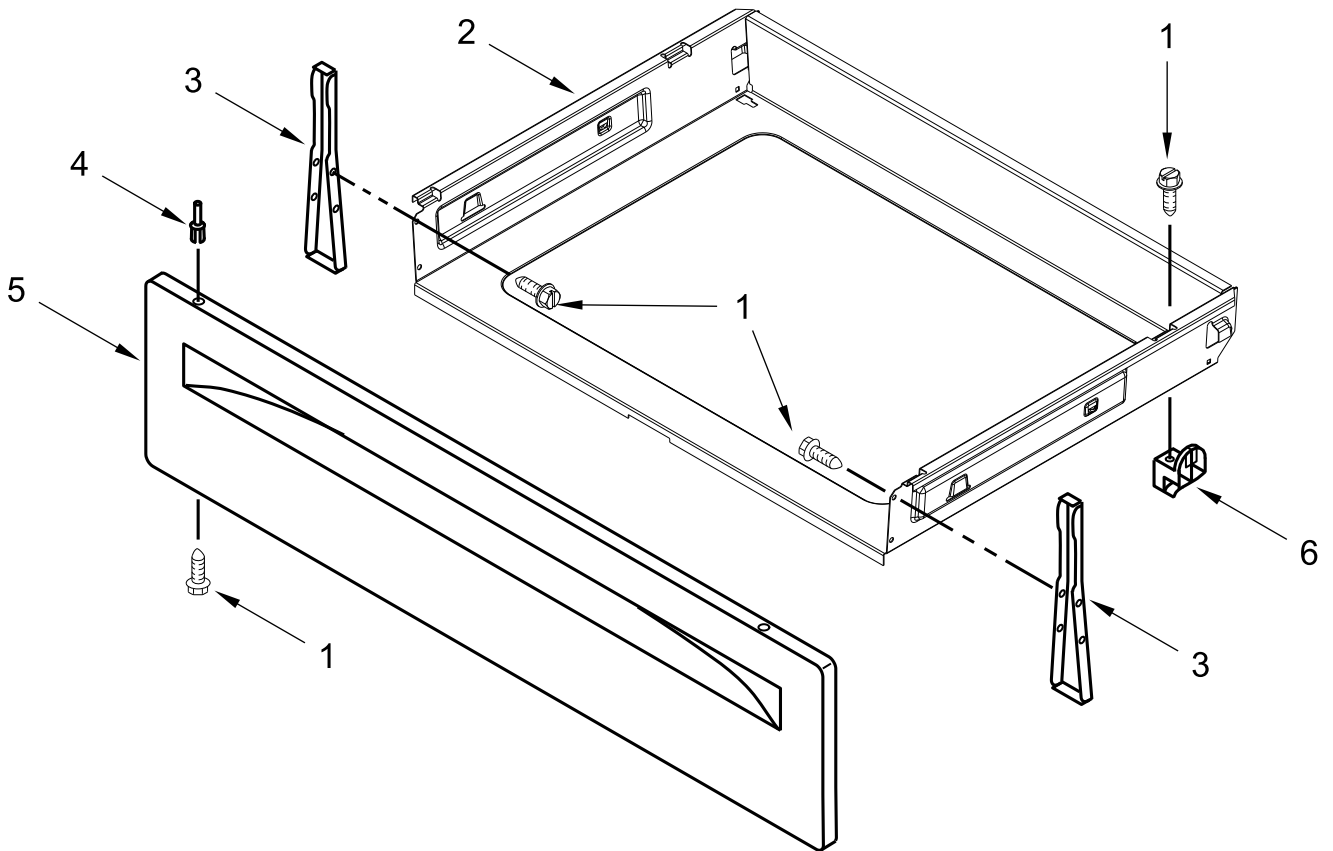

DRAWER PARTS

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
1	3196165	Screw
2	W10688022	Drawer, Storage
3	W10462912	Bracket, Mounting Drawer

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
4		Rivet, Plastic
	3196813	Black
	3196814	White

<u>Illus.</u> <u>No.</u>	<u>Part No.</u>	<u>Description</u>
5		Panel, Drawer Front
	W11123900	Black
	W11123901	White
6	W10674708	Glide, Drawer Rear

OPTIONAL PARTS

REFINISHING MATERIAL

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	242756	Oven Liner Touch Up Paint

PAINT, TOUCH-UP (1/2OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	72017	White
	511873	White Porcelain (2 oz.)

PAINT, BULK (1 QT.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	799344	White (Uncut)

INSULATION

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	261514	Insulation (1-1/2" x 24" x 120")
	240132	Insulation (2-1/2" x 22" x 120")

PAINT, PRESSURIZED SPRAY (12 OZ.)

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	350930	White
	285006	Black

ACCESSORY PARTS

<u>Illus. No.</u>	<u>Part No.</u>	<u>Description</u>
	31617A	Cleaner, Grate & Drip Pan
	4396923	Grid, Broiler Pan and
	W10123240	Rack, Broiler Pan & Roasting