

GETTING *started* WITH YOUR DUAL FUEL RANGE



BEFORE YOU START



SET UP YOUR OVEN

Remove all packaging material and tape and make sure your oven racks are in place prior to operating the range. Check out your Use & Care Manual for tips to help you care for your range.



SET YOUR CLOCK

Press in the OVEN TEMP/TIMER knob. Turn the knob right or left to set the correct time. Push the knob in to confirm the selection.



BEFORE COOKING FOR THE FIRST TIME

Set your oven to bake at 350°F (175°C) for about 30 minutes. As the range gets settled in your home, it's normal to experience some noises and smoke.

GAS COOKTOP BASICS

BURNER KNOB POSITIONS

OFF position

MAX — **MIN** Burner outer ring flame setting

MAX — **MIN** Burner inner ring flame setting

SETTING YOUR FLAME SIZE

The color of the flame is the key to proper burner adjustment.

A good flame is clear, blue and hardly visible. Adjust or clean the burner if flame is yellow-orange.

Start on the highest setting and lower the setting as needed for general cooking needs.



Use a medium or low flame when thickening sauces or to maintain a slow boil.



REMEMBER


A clicking sound will occur on all the burners when a control knob is pushed in.

OPERATING THE BURNERS

- 1 Place your cookware on the burner.
- 2 Push in the cooktop knob to ignite the burner.
- 3 Keep pushing the knob and turn it left to the first **MAX** position until the burner is lit.
- 4 Once the burner is lit, keep the knob pressed in for a few seconds. If the burner goes out, wait a few moments and try again.
- 5 Once the burner has a steady flame, turn the burner knob to adjust the flame size.

USING THE INNER AND OUTER RINGS

Once the burner is lit, it will be on the highest setting.

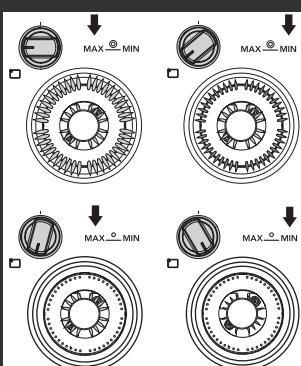

To lower the outer ring setting, turn the knob to the left.

To turn off the outer ring, continue to turn the knob to the left.

To control only the inner ring, push the cooktop knob in and turn to the left.

Continue to turn the knob to the left to decrease the inner ring setting.

YOU'RE IN CONTROL



YOUR OVEN CONTROLS

Using your oven starts with turning on the oven mode and oven temperature knobs. The temperature will appear in the display as you go.

Oven Modes

DELAY

Allows a delayed starting time only for Bake, Conv Bake, Conv Roast and Steam Clean.

BROIL

Is for broiling and grilling foods under direct, high heat.

STEAM

Is a chemical free method to clean the oven. Pour 13.5 fl. oz. of water in the bottom of the oven to soften residue.

CONV.

Surrounds food with gentle, rising heat to cook delicate foods.

BAKE

Uses a fan to circulate heat for quick and even baking, best used when baking with multiple racks.

ROAST

Surrounds food with gentle, rising heat to cook delicate foods.

PROOF

Creates the perfect environment to activate yeast when baking homemade breads or pizza dough.

CLEAN

Is recommended to gently brown meats and seal in the juices.

WARM

Is used to keep cooked foods at serving temperature (160°F / 70°C to 200°F / 90°C) in the oven.



TEMP PROBE monitors the internal temperature of large cuts of meat with a probe. An alert will sound once the desired set target temperature is reached.

Get Started


1 Press the OVEN MODE knob and turn to select the oven mode or function. The default screen will appear.

2 Press the OVEN TEMP/ TIMER knob and turn to select the temperature you want to set your oven.

The temperature bar on the right side of the oven display will flash until preheating is complete.

3 Press the OVEN MODE knob to start cooking. Each oven function has its own auto suggest (default) temperatures.

- Bake: 350°F / 175°C.
- Convection Bake: 325°F / 165°C.
- Broil: 550°F / 280 °C.
- Convection Roast: 350°F / 175°C.
- Warm: 170°F / 75°C.
- Sabbath: 350°F / 175°C.

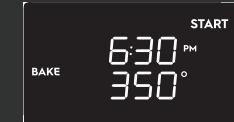

START flashes in the upper right corner of the display to indicate you can start the selected oven mode.

Once a function is started or when setting the temperature and timing functions, the word START disappears.

QUICK CARE

A little love goes a long way

Clean up spills as they happen. Clean with a soft cloth, mild dish detergent and water or Frigidaire ReadyClean™ Oven and Microwave Cleaner and ReadyClean™ Glass & Ceramic Cooktop Cleaner.

Avoid spraying large amounts of water or cleaners directly on the oven control and display area. Excess moisture on the control area may cause damage. Avoid using paper towels and scouring pads — they will damage the finish.

FAQs

Why does my range make noises when I'm cooking?

Temperature changes during preheat and cool-down can make parts of the range expand and contract. The controls click as they work to create even cooking temperatures. Different fans run to heat up the oven or cool down different parts of oven, even when it's off. These sounds are normal.

Why does my oven smoke when I use the broil setting?

Broiling is direct heat cooking and will produce some smoke. If smoke is excessive, place food further away from the element. Broil with the oven door closed, and watch food to prevent burning.

This oven doesn't work like my old one. What's wrong?

We know adjustment isn't always easy. As you get used to a new range, you may need to test and adjust cooking times and temperatures for your recipes. Your Use & Care Manual has rack position and bakeware recommendations to help you get the best baking results. For instructions on how to adjust temperature offset, consult your Use & Care Manual or call Frigidaire Owner Support if you need help!



Find more troubleshooting tips in the back of your Use & Care Manual.

LET'S MAKE IT OFFICIAL!

Take the first step to becoming a part of the Frigidaire family by registering your new range and discovering more benefits.

Look for your registration card for instructions on how to register your range.

WE ARE
here
FOR YOU



Have a question?



Want help?



Need service?

owner support

frigidaire.com 1 (800) 374-4432

frigidaire.ca 1 (800) 265-8352

