 
 

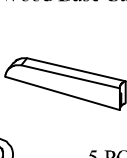 
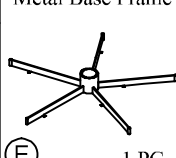 


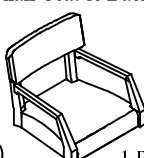


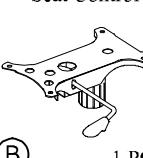



Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Separate, count and check all parts against the Components and Hardware List below.

Component And Hardware List

| Chair Seat & Back | Seat Control | Pneumatic Cylinder & Cover | Wood Base Cap | Metal Base Frame |
|---|---|--|--|---|
|  (A) 1 PC. |  (B) 1 PC. |  (C) 1 PC. |  (D) 5 PCS. |  (E) 1 PC. |
| Allen Head Bolts: Ø5/16-20 x 22mm  (F) 4 PCS. | Spring Washer Ø 5/16"  (G) 4 PCS. | Flat Washer Ø 5/16"x19mm  (H) 4 PCS. | 4mm Allen Key  (I) 1 PC. | Round Head Screw Ø3.5*15mm  (J) 10 PCS. |

 
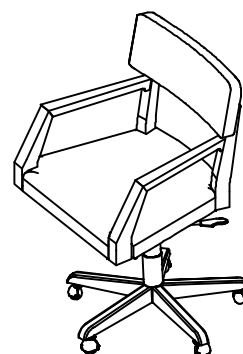 


#58839
Uph Desk Chair

| Caster |
|---|
|  (K) 5 PCS. |



To prevent possible scratches, assemble on a soft surface such as a blanket or carpet.

  Step 2 :

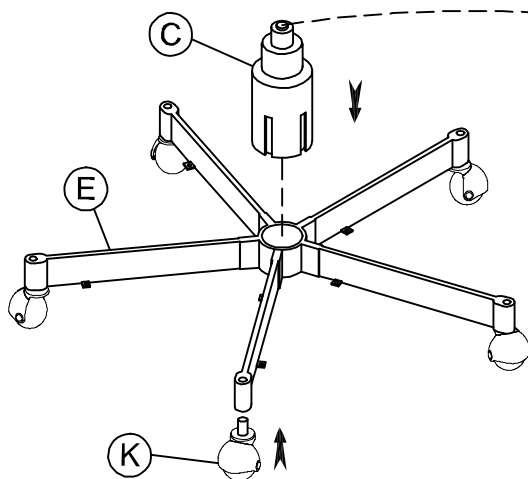


If present, remove the plastic cover from the top end of the cylinder before assembling to seat.

  Step 1 :

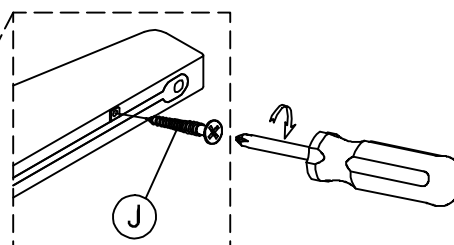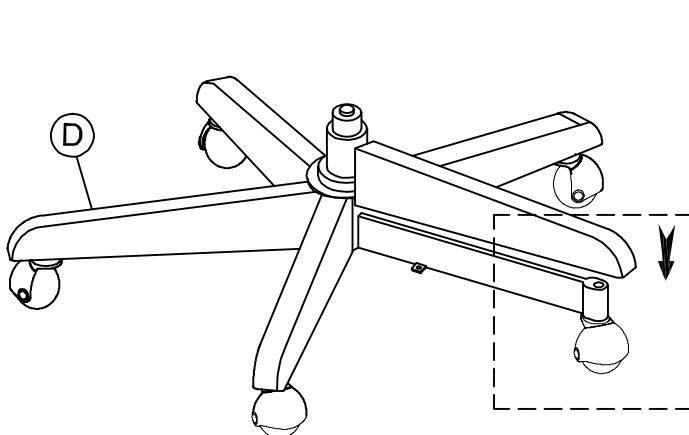


Step 3 :

 TOOLS REQUIRED
(NOT PROVIDED)

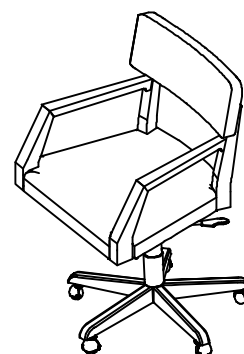



#58839

 Uph Desk Chair

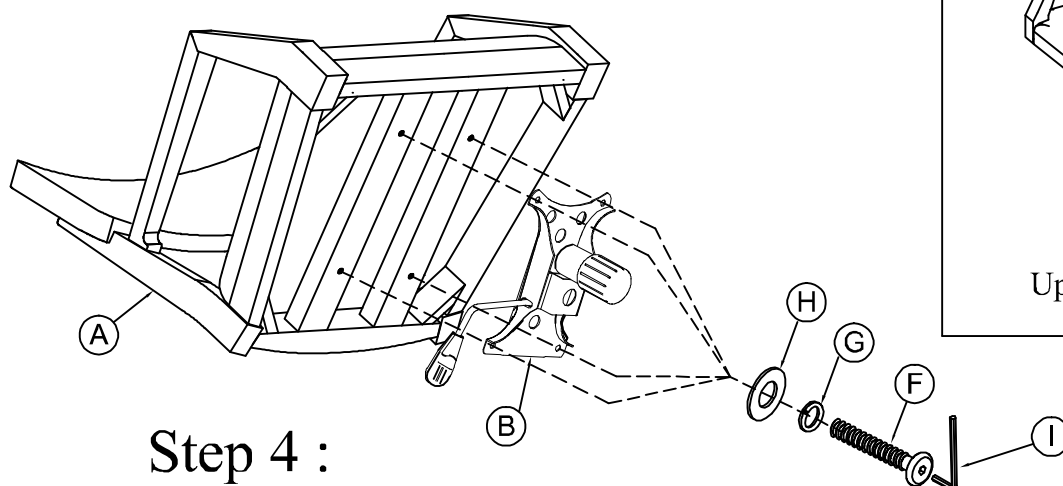

Step 4 :

  Step 5 :

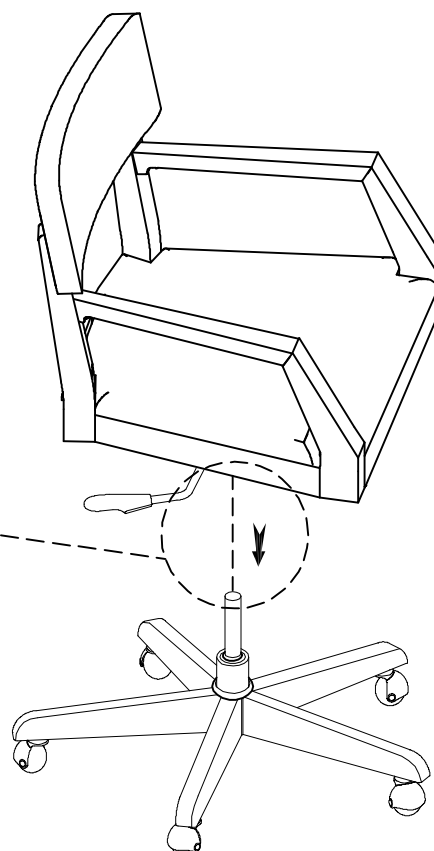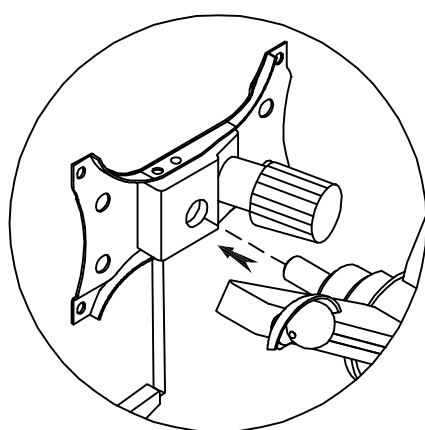

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring.

The lift mechanism is in a locked position for shipping . To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.