



## Control4® Remote Recharging Station Quick Setup

### Recharge your remote anytime!

Now no more worries about your Control4 System Remote Control SR-150 or SR-250 quitting in the middle of a TV program because the battery is dead. The Control4® Remote Recharging Station ensures that you'll always have a fully-charged battery.

### Setting Up Your Recharging Station

#### 1 Remove the old batteries.

- a** On the bottom of the remote, pull the battery cover toward you and lift it off of the remote.
- b** Pull out the batteries.



#### 2 Insert the new rechargeable battery.

- a** Insert the rechargeable battery by sliding the small end into the slot first.
- b** Note the orientation of + and - symbols for proper battery insertion.



**3 Insert the battery cover on your remote.**

- a** Insert the remote's battery cover into the remote's slot and push down until the cover is flat against the remote.
- b** With the cover in a horizontal position, slide the cover into the slot until it snaps shut.

**4 Attach the power supply.**

- a** Insert the USB cable into the back of the recharging station; thread the power cord through the indentation on the bottom of the recharger.
- b** Attach the other end of the USB cable to the power supply.
- c** Insert the correct power plug into the power supply.

**5 Set the charging indicator on your recharger.**

Turn the recharging station over. Notice the charging indicator button labeled 'High, Off, and Low.' Move the button to the desired light level.

- **High.** Sets to the highest light level.
- **Off.** Sets the light to off.
- **Low.** Set the light to low.

**Charging Indicator Button**

**6 Place the remote on your recharging station.**

- a** If you have a recharging station with no remote, ensure that you've replaced your old batteries with the new battery and the new cover.
- b** While holding the remote in a horizontal position, place it onto the charging station.
- c** Ensure that it is properly seated. The two metal plates on the back of the remote must touch the metal pins in the recharging station.

**7 Have your remote recognize the recharging station.**

- SR-150: Press Room Off # \* 4 5 6 0
- SR-250 (if online): Press List Info Config Recharge Station Yes
- SR-250 (if offline): Press List Config Recharge Station Yes

**Recharging Station Lights**

When your recharging station is on, you may see the following lights. Depending on the Charging Indicator brightness you select, the indicator light will be High or Low brightness or Black/Off.

- **Red.** The remote is recharging, and is not fully charged yet.
- **Green.** The remote is fully charged.
- **Black.** The light is off. Either the Charging Indicator is turned off, or the remote is not seated properly in the recharging station.