

**Pioneer** *sound.vision.soul*

# Owner's Manual Mode d'emploi

Remote control

Télécommande

## CD-R55

### PIONEER CORPORATION

4-1, MEGURO 1-CHOME, MEGURO-KU  
TOKYO 153-8654, JAPAN

### PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.  
TEL: (800) 421-1404

### PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium  
TEL: (0) 3/570.05.11

### PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936  
TEL: 65-6472-7555

### PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

178-184 Boundary Road, Braeside, Victoria 3195, Australia  
TEL: (03) 9586-6300

### PIONEER ELECTRONICS OF CANADA, INC.

300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada  
TEL: 1-877-283-5901

### PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Blvd.Manuel Avila Camacho 138 10 piso  
Col.Lomas de Chapultepec, Mexico, D.F. 11000  
TEL: 55-9178-4270

### 先鋒股份有限公司

總公司：台北市中山北路二段44號13樓  
電話：(02) 2521-3588

### 先鋒電子（香港）有限公司

香港九龍尖沙咀海港城世界商業中心  
9樓901-6室  
電話：(0852) 2848-6488

Published by Pioneer Corporation.  
Copyright © 2006 by Pioneer Corporation.  
All rights reserved.

Publié par Pioneer Corporation. Copyright  
© 2006 par Pioneer Corporation. Tous  
droits réservés.

Printed in China  
Imprimé en Chine

<KMMZX> <06K00000>

<CZR5072-A> E

## Before You Start



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the 25 member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health. ■

## Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. ■

## Use and care of the remote control

### Installing the battery (Fig. 1)

Slide the tray out on the back of the remote control and insert the battery with the plus (+) and minus (-) poles pointing in the proper direction.

- When using for the first time, pull out the film protruding from the tray.

### WARNING

- Handling the cord on this product or cords associated with accessories sold with the product may expose you to chemicals listed on proposition 65 known to the State of California and other governmental entities to cause cancer and birth defects or other reproductive harm. **Wash hands after handling.**
- Keep the battery out of the reach of children. Should the battery be swallowed, immediately consult a doctor.

### CAUTION

- Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, this unit damage, smoke, and overheat could result from contact with liquids.
- Do not disassemble or modify this unit. To do so may cause a malfunction.
- Always keep the volume low enough so that you can hear sounds from outside the vehicle.
- Use only one **CR2025 (3 V)** lithium battery.
- Always check carefully that you are loading the battery with its plus (+) and minus (-) poles facing in the proper directions.
- Remove the battery if the remote control is not used for a month or longer.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- Do not handle the battery with metallic tools.
- Do not store the battery with metallic materials.
- In the event of battery leakage, wipe the remote control completely clean and install a new battery.
- When disposing of used batteries, please comply with governmental regulations or environmental public institutions' rules that apply in your country/area.
- "Perchlorate Material – special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate). (Applicable to California, U.S.A.)"


### Using the remote control

Point the remote control in the direction of the front panel to operate.

## Before You Start

- The remote control may not function properly in direct sunlight.

### Important

- Do not store the remote control in high temperatures or direct sunlight.
- Do not let the remote control fall onto the floor, where it may become jammed under the brake or accelerator pedal. 

## Using the remote control operation mode switch

There are three remote control operation modes on the remote control.

### AVH mode operation

When operating an AV Receiver (e.g., AVH-P5900DVD) with this remote control, the mode is normally switched to **AVH**.


### DVD mode operation

When operating a Pioneer DVD player (e.g., XDV-P6) with this remote control, the mode is switched to **DVD**. If you switch the mode to **DVD**, the joystick and **0** to **10** operations are changed for DVD player.

### TV mode operation

When operating a Pioneer TV tuner (e.g., GEX-P5700TV (P)) with this remote control, the mode is switched to **TV**. If you switch the mode to **TV**, the joystick operation is changed for TV tuner.

In **TV** mode, only buttons shown below can be used.

- **SOURCE** button
- **ATT** button
- **VOLUME** buttons
- Joystick
- **DIRECT** button
- **REAR SOURCE** button 

## 

## Setting remote control code type


When the remote control operation mode switch is set to **DVD**, changing the remote control code type enables you to operate the Pioneer DVD player with this remote control. There are three remote codes, code type **A**, code type **B** and code type **AVH**.

- When operating an AV Receiver (e.g., AVH-P5900DVD), select code **AVH**.
- When operating a multi-DVD player (e.g., XDV-P6), select code **A**.
- When operating a DVD navigation unit, select code **B**.

### 1 Set the remote control selection switch on the left side of the remote control to the appropriate position with a pen tip or other pointed instrument .

- If you select **AVH** mode, there is no need to take the following procedure.
- If you select **A/B** mode, take the following procedure and change the code type to the appropriate type.

### 2 Press 0 and CLEAR on the remote control simultaneously to change the code type.

Initially, the code type is set to **A**. Each time you press **0** and **CLEAR** simultaneously on the remote control the code type switches between **A** and **B**. 


## Specifications


Power source .....	3 V DC (Lithium battery; CR2025)
Dimensions (W × H × D) ...	54 × 149 × 13 mm (2-1/8 × 5-7/8 × 1/2 in.)
Weight .....	59 g (2 oz) (including battery)

### Infrared remote control

Wavelength .....	945 nm
Output .....	typ; 10 mw/sr per Infrared LED

### Note

Specifications and the design are subject to possible modifications without notice due to improvements. 

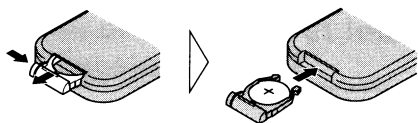

**Fig. 1**  
**Рис. 1**




「廢電池請回收」

Bij dit product zijn batterijen geleverd. Wanneer deze leeg zijn, moet u ze niet weggooien maar inleveren als KCA.



(NL)

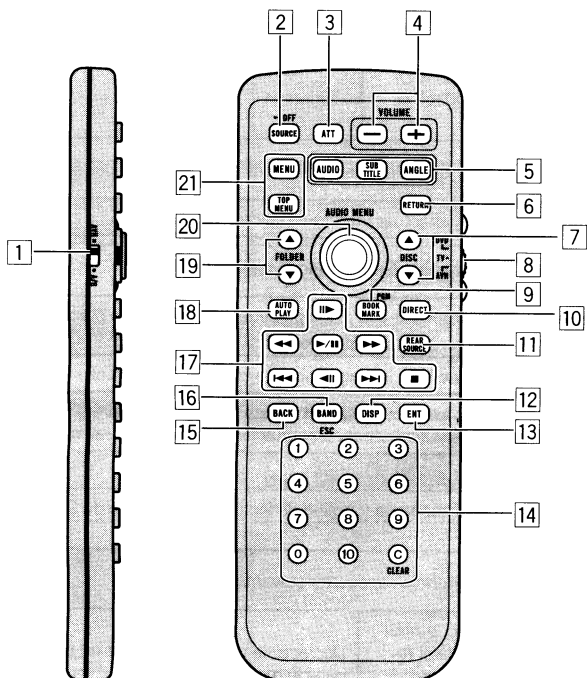

**Fig. 2**  
**Рис. 2**

## Button names and operation (Fig. 2)

	Button names	AVH mode	DVD mode
1	Remote control selection switch	Switch to change the setting of the remote control. For details, refer to <i>Setting remote control code type</i> .	
2	<b>SOURCE</b> button	Press to cycle through all the available sources. Press and hold to turn the source off.	
3	<b>ATT</b> button	Press to quickly lower the volume level, by about 90%. Press once more to return to the original volume level.	
4	<b>VOLUME</b> buttons	Press to increase or decrease the volume.	
5	<b>AUDIO</b> button	Press to change the audio language during DVD playback.	
	<b>SUBTITLE</b> button	Press to change the subtitle language during DVD playback.	
	<b>ANGLE</b> button	Press to change the viewing angle during DVD playback.	
6	<b>RETURN</b> button	Press to display the PBC (playback control) menu during PBC playback.	
7	<b>▲/▼</b> buttons ( <b>DISC</b> )	Not used.	<b>Remote control code: AVH or B</b> Not used. <b>Remote control code: A</b> Press to select the next/previous disc.
8	Remote control operation mode switch	Switch the operation mode between <b>AVH</b> , <b>DVD</b> and <b>TV</b> modes. Normally, set to <b>AVH</b> . For details, refer to <i>Using the remote control operation mode switch</i> .	
9	<b>BOOKMARK</b> button/ <b>PGM</b> button	Press to operate the preprogrammed functions for each source. For details, refer to AV Receiver's operation manual.	Press to turn the bookmark function on or off when your DVD player features bookmark function. For details, refer to DVD player's operation manual.
10	<b>DIRECT</b> button	<b>In U.S. and Canada:</b> Press to do direct XM/SIRIUS channel select. <b>In other area:</b> Not used.	Not used.
11	<b>REAR SOURCE</b> button	Not used.	<b>Remote control code: AVH</b> Not used. <b>Remote control code: A or B</b> Press to turn the DVD player on or off.
12	<b>DISPLAY</b> button	Press to select different displays.	<b>Remote control code: AVH</b> Not used. <b>Remote control code: A or B</b> Press to select different displays.
13	<b>ENTERTAINMENT</b> button	Not used.	
14	<b>0 to 10</b> buttons, <b>CLEAR</b> button	Press <b>0</b> to <b>10</b> to input numbers. Buttons <b>1</b> to <b>6</b> can operate the preset tuning for the tuner or disc changing for DVD player or multi-CD player. Press <b>CLEAR</b> to clear the input numbers.	Press to select a menu item on the Video CDs featuring PBC (playback control).
15	<b>BACK</b> button	Press to return to the previous display.	Not used.

## Button names and operation (Fig. 2)

16	<b>BAND</b> button	Press to select the tuner band when tuner is selected as a source. Also used to cancel the control mode of functions. Press to switch mode between compressed audio and audio data (CD-DA) when playing discs with compressed audio and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs.	Press to switch mode between compressed audio and audio data (CD-DA) when playing discs with compressed audio and audio data (CD-DA) such as CD-EXTRA and MIXED-MODE CDs.
17	<b>PLAY/PAUSE (▶/⏸)</b> button	Press to switch sequentially between playback and pause.	
	<b>REVERSE (◀◀)</b> button	Press to perform fast reverse.	
	<b>FORWARD (▶▶)</b> button	Press to perform fast forward.	
	<b>PREVIOUS (◀◀)</b> button	Press to return to the previous track (chapter).	
	<b>NEXT (▶▶)</b> button	Press to go to the next track (chapter).	
	<b>STEP (⏮/⏭)</b> buttons	Press to move ahead one frame at a time during DVD/VideoCD playback. Press and hold for one second to activate slow playback.	
	<b>STOP (■)</b> button	Press to stop playback.	
18	<b>AUTO PLAY</b> button	Press to turn the DVD auto-playback function on or off.	
19	<b>▲/▼</b> buttons ( <b>FOLDER</b> )	Press to select the next/previous folder.	
20	Joystick	Move to do fast forward, reverse and track search controls. Click to recall <b>MENU</b> .	Move to select a menu on the DVD menu.
21	<b>MENU</b> button	Press to display the DVD menu during DVD playback.	
	<b>TOP MENU (TOP.M)</b> button	Press to return to the top menu during DVD playback.	