
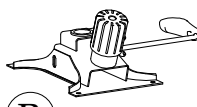
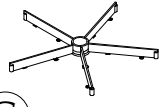

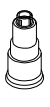

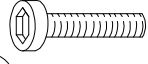

 

 
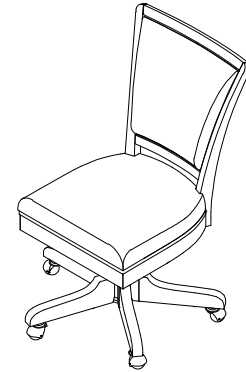


Components and Hardware List

Chair Seat & Back  (A) 1 pc.	Chair Control  (B) 1 pc.	Metal Base  (C) 1 pc.	Wood Cap  (D) 5 pcs.
Pneumatic Cylinder & Cover  (E) 1 pc.	Caster  (F) 5 pcs.	M1/4"-20 x 1-1/8" Allen Head Bolt  (G) 4 pcs.	M1/4" Spring Washer  (H) 4 pcs.
M1/4" *19*2mm Flat Washer  (I) 4 pcs.	4mm Allen Wrench  (J) 1 pc.	#6 x 5/8" Screw  (K) 10 pcs.	<p>Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. To prevent scratches or damage, assemble the chair on a soft surface such as a blanket or carpet.</p> <p>To prevent possible scratches, assemble on a soft surface such as a blanket or carpet</p>




#46038-46138-46238
Upholstered Desk Chair

STEP 1 : Fit the bottom end of the Pneumatic Cylinder (E) into center of the Metal Base (C) as shown. Press down firmly on the Pneumatic Cylinder to secure. Plastic Covers onto the cylinder.

STEP 2 : Press the caster (F) into the holes of the Metal Base (C).

STEP 3 : Place the Wood Cap (D) on top of each leg of the Metal Base (C) and Assemble them by using screws (K)

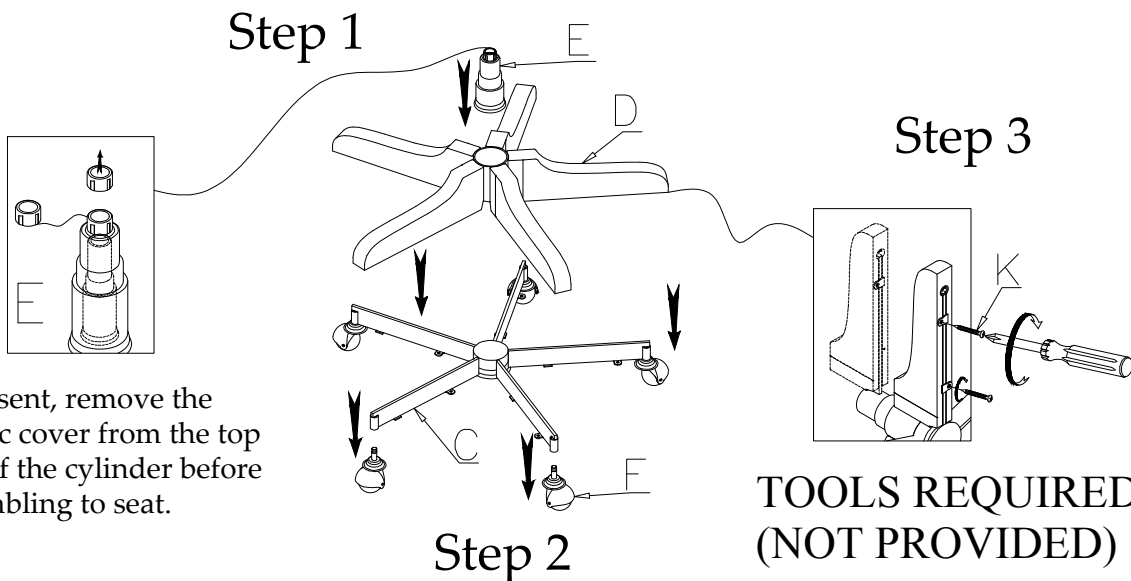


STEP 4 : Attach the Seat Control (B) to the bottom of the Chair Seat & Back (A) with Flat Washers (I), Spring Washer (H) and Allen Head Bolts (G) as shown. Tighten with the Allen Wrench (J).


STEP 5 : Fit the top of the Pneumatic Cylinder into the Chair Control. Sit on the seat to secure assembly.

Note: To prevent possible damage to some types of flooring, never roll casters on unprotected hardwood or vinyl flooring.

The lift mechanism is in a locked position for shipping . To unlock, pull straight out on the handle, and then the lift cylinder can be activated by lifting the handle.

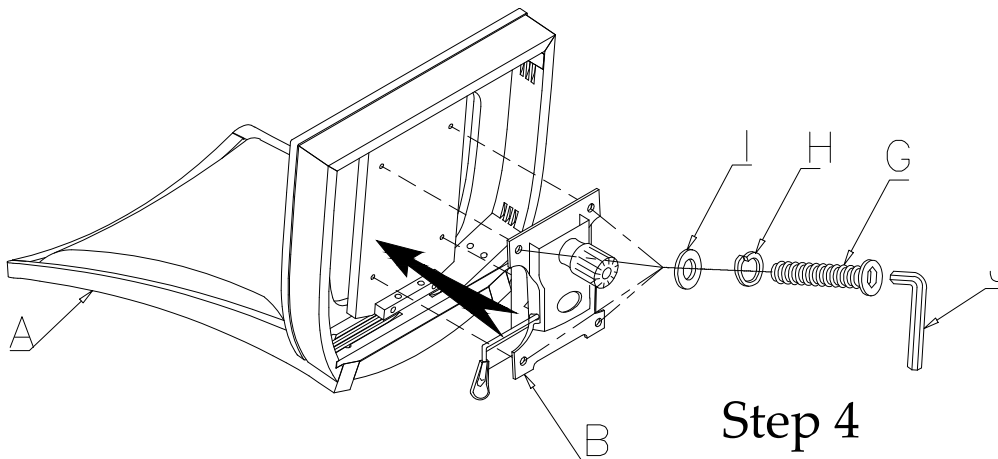

Step 4

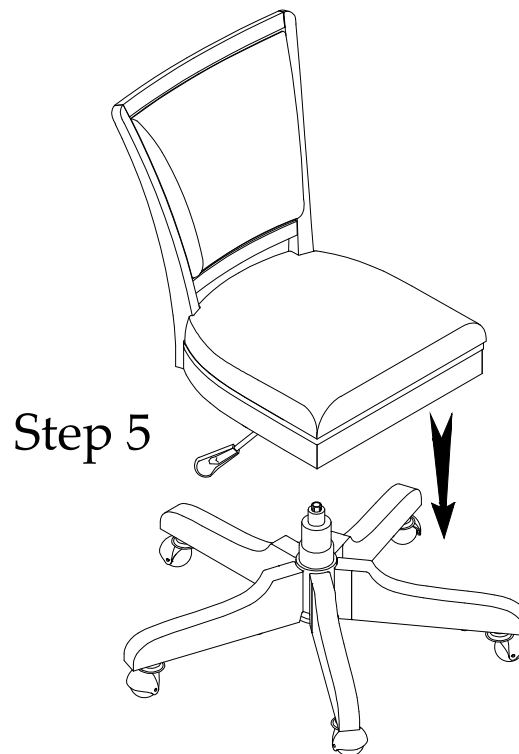

Step 5