SABBATH GUIDE

HOW TO ENTER/EXIT SABBATH MODE







— BUILT-IN COLUMN —

TO SET SABBATH

- (1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on display
- 3 Touch and hold POWER for 10 seconds
- (4) "SAb" will appear in display

TO EXIT SABBATH MODE





— BUILT-IN FRENCH DOOR ———

TO SET SABBATH

- (1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on display
- 3 Touch and hold POWER for 10 seconds
- (4) "SAb" will appear in display

TO EXIT SABBATH MODE





— BUILT-IN OVER-AND-UNDER ——

TO SET SABBATH

- 1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on display
- 3 Touch and hold POWER for 10 seconds
- (4) "SAb" will appear in display

TO EXIT SABBATH MODE





— BUILT-IN SIDE-BY-SIDE ———

TO SET SABBATH

- 1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on display
- 3 Touch and hold POWER for 10 seconds
- (4) "SAb" will appear in display

TO EXIT SABBATH MODE





BUILT-IN WINE STORAGE

TO SET SABBATH

- (1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on display
- 3 Touch and hold POWER for 10 seconds
- (4) "SAb" will appear in display

TO EXIT SABBATH MODE





COMPACT REFRIGERATION

TO SET SABBATH

- (1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on display
- 3 Touch and hold POWER for 10 seconds
- 4 Unit will turn on and lights will be disabled

TO EXIT SABBATH MODE

1 Touch POWER

Note: Sabbath mode available on all undercounter models EXCEPT icemakers





— INTEGRATED COLUMN ———

TO SET SABBATH

- 1 On the interactive panel touch > to enter the options screen
- 2 Touch 🔯 to enter the settings screen
- 3 Touch to enter Sabbath option screen
- 4 Press and hold screen for 10 seconds to enter Sabbath mode

TO EXIT SABBATH MODE





— INTEGRATED OVER-AND-UNDER —

TO SET SABBATH

- 1 On the interactive panel touch > to enter the options screen
- 2 Touch 🔅 to enter the settings screen
- 3 Touch to enter Sabbath option screen
- 4 Press and hold screen for 10 seconds to enter Sabbath mode

TO EXIT SABBATH MODE





— INTEGRATED WINE STORAGE —

TO SET SABBATH

- 1 On the interactive panel touch > to enter the options screen
- 2 Touch 🔯 to enter the settings screen
- 3 Touch to enter Sabbath option screen
- 4 Press and hold screen for 10 seconds to enter Sabbath mode

TO EXIT SABBATH MODE







— UNDERCOUNTER DRAWERS ——

TO SET SABBATH

- 1 On the interactive panel touch > to enter the options screen
- 2 Touch 🔅 to enter the settings screen
- 3 Touch to enter Sabbath option screen
- 4 Press and hold screen for 10 seconds to enter Sabbath mode

TO EXIT SABBATH MODE



PRO 48 -



- (1) While unit is on, touch POWER located on control panel
- (2) "OFF" Will appear on external display
- 3 Touch and hold POWER for 10 seconds
- 4 Unit will chime four times
- 5 Unit will power on disable external displays, lights, ice maker and door alarm.

TO EXIT SABBATH MODE

1 Touch POWER twice



